



TouchTunes



TouchTunes Dashboard User Guide
June 2009

Disclaimer

Document Part Number: 900203-002 (June 2009)

TouchTunes and the TouchTunes logo are trademarks of TouchTunes Music Corporation.

All other brand and product names are trademarks or registered trademarks of their respective corporations.

The mention of any product does not constitute an endorsement by TouchTunes Music Corporation. This manual is furnished under a lease agreement and may only be copied or used within accordance with the terms of such lease agreement. The content of this manual is furnished for informational use only, is subject to change without notice, and should not be construed as a commitment by TouchTunes Music Corporation. TouchTunes Music Corporation assumes no responsibility or liability for any errors or inaccuracies that may appear in this document.

Except as permitted by such lease agreement, no part of this publication may be reproduced, stored in any retrieval system, or transmitted, in any form or by any means, electronic, mechanical, recording, or otherwise, without prior written consent of TouchTunes Music Corporation.

Changes are periodically made to the information herein; these changes will be incorporated into new editions of this publication. TouchTunes may make improvements and/or changes in the products and/or software programs described in this publication at any time.

If you have comments on this manual or the products it describes, address them to:

TouchTunes Music Corporation

Attention: Publications

400 Sainte Croix Avenue, Suite 200 E

Montreal, Quebec, Canada H4N 3L4

Service Hotline: 1-847-353-1954

Fax: (847) 419-3304

TouchTunes may use or distribute whatever information you supply in any way it believes appropriate without incurring any obligations to you.

Copyright © 2009 TouchTunes Music Corporation. All rights reserved, including those to reproduce this publication or parts thereof in any form without permission in writing from TouchTunes Music Corporation.

toc

Table of Contents

1	Introducing the TouchTunes Operator Dashboard	1
	Overview	1
	Browsers Supported by the TouchTunes Dashboard	2
	Help Resources for the TouchTunes Dashboard	3
	Key Documentation Learning and Reference Features	3
	Documentation Conventions	4
	Contacting TouchTunes	4
2	Learning About the TouchTunes Dashboard	7
	Overview	7
	Discovering the Features and Benefits of the TouchTunes Dashboard	8
	Navigating the TouchTunes Dashboard	11
	Understanding the Dashboard Workflow	14
3	Setting Up the Dashboard	17
	Overview	17
	Key Dashboard Concepts	18
	Obtaining a Dashboard User Account	19
	Log On to the TouchTunes Dashboard	21
	Log Out of the TouchTunes Dashboard	28
	Resetting Dashboard Passwords	29
4	Setting Up TouchTunes Dashboard Sub-User Accounts	31
	Overview	31
	Adding a Sub-User Account to the TouchTunes Dashboard	32
	Removing a Sub-User Account from the TouchTunes Dashboard	37
5	Entering Your Jukebox Locations in the TouchTunes Dashboard	39
	Overview	39
	Adding a Location to the TouchTunes Dashboard	40
	Moving a Jukebox to a Location in the TouchTunes Dashboard	44
	Modifying Location Details in the TouchTunes Dashboard	46
	Modifying the Public and Private Details in the TouchTunes Dashboard	47
6	Locating Music and Sending it to Jukeboxes Using the Dashboard	49
	Overview	49

Searching for Music using Keywords	50
Staying Informed	54
Searching for Music by Song or Album ID Number	55
Adding Songs from Compiled Lists	58
Identifying New Music Added to the TouchTunes Music Library	61
Requesting Music from TouchTunes	63
Adding Music for Jukeboxes to the Music Cart	65
Downloading Music from the Music Cart to a Jukebox	67
Transferring Pending Music and Software to a USB Device	70
Updating a Jukebox on Location with the USB Content Updater	76
Reviewing Music Transfers	78
7 Managing Music on Jukeboxes Using the TouchTunes Dashboard	83
Overview	83
Viewing Music on a Jukebox	84
Finding Duplicate Songs on Jukebox	85
Tracking Song Popularity	86
Removing Music from a Single Jukebox	89
Removing Music from Multiple Jukeboxes	91
8 Managing Jukebox Income Using the TouchTunes Dashboard	97
Overview	97
Configuring the Revenue Model for a Jukebox	98
Reviewing Jukebox Revenue	114
9 Configuring Music and Game Settings Using the TouchTunes Dashboard	127
Overview	127
Setting Up the Background Music Mode on a Jukebox	128
Setting Up the Attract Mode on a Jukebox	132
Scheduling Background Music and Attract Modes for a Jukebox	136
10 Viewing Your Invoices with the TouchTunes Dashboard	147
Overview	147
Viewing TouchTunes Invoices	148
11 Managing Music Filters for a Jukebox in the TouchTunes Dashboard	151
Overview	151
Viewing Music Filters on a Jukebox using the TouchTunes Dashboard	153
Setting Up Explicit and Edited Music Filters for a Jukebox	156
Determining the Music Styles Allowed on a Jukebox	161
Scheduling TuneCentral for a NextGen Jukebox	167
Scheduling a Music Filter Set on a Gen 3 Jukebox	173
12 Setting Up Communications Settings Using the TouchTunes Dashboard	181
Overview	181

Configuring Jukebox-related Communications Settings.....	182
Rebooting a Jukebox Remotely	184
 13 Monitoring Jukeboxes Using the TouchTunes Dashboard	 185
Overview.....	185
Viewing Jukebox Connectivity Status.....	186
Viewing Gen 3 Jukebox Diagnostics	188
 14 Monitoring and Managing PlayPorTTs Using the TouchTunes Dashboard	 191
Overview.....	191
Managing PlayporTT Settings	192
Modifying Game Settings on a PlayPorTT.....	193
Modifying Money Settings on a PlayPorTT.....	194
Modifying System Schedule settings on a PlayPorTT	196
Modifying System Tools settings on a PlayPorTT	198
Monitoring PlayPorTT Gaming Statistics	199
 15 Frequently Asked Questions About the Operator Dashboard	 203
Overview.....	203
General Dashboard Questions	204
User Account and Login-Related Questions.....	205
Location-Related Questions.....	206
Music Search and Management-Related Questions	206
Income and Accounting-Related Questions	208
Music Filter-Related Questions	209
Jukebox Configuration-Related Questions.....	210
Jukebox Troubleshooting-Related Questions.....	211
PlayPorTT-Related Questions	211

1

Introducing the TouchTunes Operator Dashboard

This chapter introduces the Dashboard and provides you with information about system requirements, the documentation set, and getting customer support.

Contents

<i>Overview</i>	<i>1</i>
<i>Browsers Supported by the TouchTunes Dashboard</i>	<i>2</i>
<i>Help Resources for the TouchTunes Dashboard</i>	<i>3</i>
<i>Key Documentation Learning and Reference Features</i>	<i>3</i>
<i>Documentation Conventions</i>	<i>4</i>
<i>Contacting TouchTunes</i>	<i>4</i>

Overview

The TouchTunes Dashboard is a Web-based application for managing and monitoring your jukeboxes over the Internet. You can use the Dashboard to do the following:

- Search for, transfer and manage music on your jukeboxes.

- View reports showing the current status of your jukeboxes, the revenue your jukeboxes have generated (including how much is awaiting collection) and the most popular songs for each jukebox.
- Control what music is available on a jukebox through music filters.
- Configure a jukebox's music, credit and hardware settings.
- View diagnostics showing the health of your jukeboxes.
- Set alerts so that a jukebox automatically notifies you in case your attention is required.

Using the Dashboard saves you time and money since you can perform most jukebox management tasks remotely on your computer instead of physically travelling to the jukebox. This frees your time to focus on adding locations and growing your business rather than on having to spend unnecessary time managing your jukeboxes on location.

In this chapter, you will be able to answer the following questions:

- "What Web browser can I use for the TouchTunes Dashboard?" (p. 2)
- "What resources are available in case I need help with the TouchTunes Dashboard?" (p. 3)
- "How can I use this guide to learn about the TouchTunes Dashboard?" (p. 3)
- "How can I contact TouchTunes for information about and help with the Dashboard?" (p. 4)

Browsers Supported by the TouchTunes Dashboard

What Web browser can I use for the TouchTunes Dashboard?

The TouchTunes Dashboard is a Web-based application that works over the Internet in your web browser. You need the following to use the Dashboard:

- A connection to the Internet, dial-up or broadband
- A Web browser

The Dashboard supports all of the most popular Web browsers, including:

- Internet Explorer 5.0 and above
- Mozilla Firefox 1.0 (or Mozilla Suite 1.2) and above
- Safari 1.0 and above
- Opera 7.0 and above
- Netscape 7.0 and above

In general, the Dashboard's stability and performance are affected more by the Web browser you use than by your Internet connection. While you may still be able to use the TouchTunes Dashboard if your Web browser is not listed above, unsupported browsers or browser versions may compromise your Dashboard experience. TouchTunes recommends you check the Web browser version that is installed on your computer to maximize the stability and performance of your Dashboard. In most cases, the version of the browser you are using can be viewed from its **Help | About** menu.

Help Resources for the TouchTunes Dashboard

What resources are available in case I need help with the TouchTunes Dashboard?

The following resources are available to assist you as you use the Dashboard:

- Help bubbles integrated directly in the Dashboard provide immediate assistance with carrying out Dashboard tasks. See “Using Help Bubbles” on page 3.
- Documentation (including this guide and other related documentation) provides more in-depth assistance to help you get the most from the TouchTunes Dashboard. See “Using this Guide and Finding Related Documentation” on page 3.

Using Help Bubbles

A *help bubble* is an area within the TouchTunes Dashboard user interface (UI) that provides a brief description of the Dashboard function and directions on how to perform tasks associated with this function.

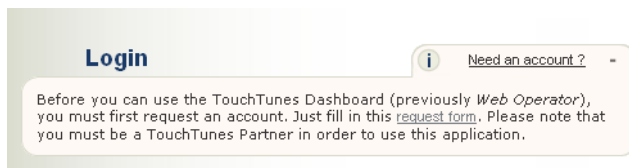


Figure 2 Help bubbles assist you throughout the Dashboard

Every Dashboard function features a help bubble. As you become more experienced with the Dashboard, you may choose to minimize help bubbles by default to have more UI space for performing tasks. You will still be able to click on a minimized help bubble to re-open it if you need help at a later time.



Figure 3 A minimized help bubble

Using this Guide and Finding Related Documentation

This guide provides more in-depth information and detailed procedures than the help bubbles on the Dashboard. Using help bubbles in conjunction with this guide will allow you to get the most from the TouchTunes Dashboard.

- In addition to this guide, you can refer to the *Quickstart Guide* or *Installation and Setup Guide* for your jukebox(es).

These Guides are available from the **TouchTunes | Documentation** page in the Dashboard.

Key Documentation Learning and Reference Features

How can I use this guide to learn about the TouchTunes Dashboard?

In addition to standard documentation features (table of contents, index, cross-references, screenshots), this guide is designed to make learning about and using the TouchTunes

Dashboard easy, practical and efficient. Each chapter in this guide has separate sections for *conceptual information* (background information that you should know before doing a task) and *“how-to” information* (the procedures or steps done to perform the task). By placing each type of information in its own section, it will be easier for you to know where to look for the information you need.

Chapters in this guide are divided into the following sections:

Key Concepts: This section provides all the conceptual information you should understand to perform tasks described in the Detailed Directions section of the chapter. For example, the Key Concepts section in the Music Filters chapter defines the different types of filters used throughout the TouchTunes Dashboard and explains guidelines for using them. You should understand these key concepts before you set up a music filter through the Dashboard.

Detailed Directions: This section provides complete information on all of the specific tasks you can perform in the TouchTunes Dashboard. For example, in the Music Filters chapter, the Detailed Directions section describes how to create, manage and schedule each type of music filter available in the Dashboard.

Documentation Conventions

This guide uses the following documentation conventions.

Notation:	Usage:	Example:
Right-click	Click with the rightmost mouse button.	Right-click the image and choose Save Picture As .
<i>Italic</i>	A folder or file path.	Open C:\My Documents and Settings\My Music.
Bold	Specific areas of the user interface, as well as menu commands.	Choose My Jukeboxes in the Navigation menu.
Vertical bar	Separates menu commands.	Choose TouchTunes Contacts from the Navigation menu.

Contacting TouchTunes

How can I contact TouchTunes for information about and help with the Dashboard?

You can contact TouchTunes by:

- Using the links on the Contacts page in the TouchTunes Dashboard. Refer to the following section.
- Calling TouchTunes by phone. See “Contacting TouchTunes by Phone” on page 5.

Contacting TouchTunes Directly from the Dashboard

You can use the Contacts page in the TouchTunes Dashboard to e-mail many departments at TouchTunes, including Technical Support. You can use the links on the Contacts page to:

- Get help from Technical Support department.
- Request music from the Music department.

- Check on your contract or jukebox shipments with the Sales department.
- Suggest future Dashboard features and enhancements to the R&D department.
- Review your invoices and statements with the Finance department.
- Resolve licensing questions with the Legal department.

Using the Contacts page is the easiest way to contact TouchTunes and also allows TouchTunes to respond to your question, problem or request very quickly. To access the Contacts page, choose **TouchTunes | Contacts** and then follow the appropriate e-mail link for the department you want to contact:

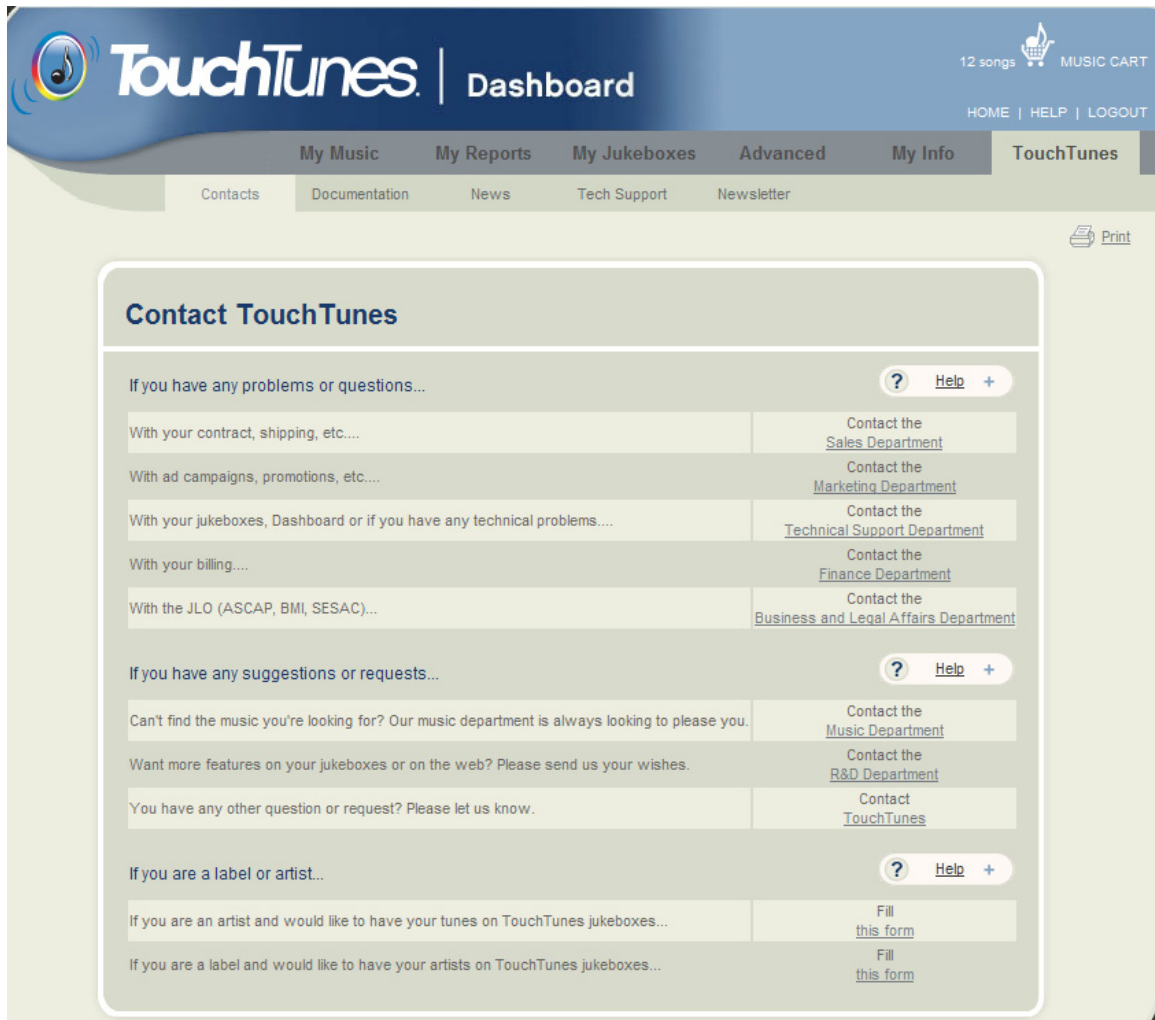 


Figure 4 The Contacts page in the TouchTunes Dashboard

Contacting TouchTunes by Phone

You can also get assistance with the TouchTunes Dashboard by calling the TouchTunes Technical Support department toll-free at 1-888-711-5853. If you are outside of the toll-free area, you can still contact the TouchTunes Technical Support department by dialling 1-847-353-1954 and pressing 1 when prompted.

Note: Long-distance telephone charges may apply if you are calling from outside of the toll-free area.

Learning About the TouchTunes Dashboard



This chapter explains how the TouchTunes Dashboard' can simplify jukebox management for you. It also shows you how to navigate in the Dashboard and provides a general workflow for managing your jukeboxes.

Contents

<i>Overview</i>	<i>7</i>
<i>Discovering the Features and Benefits of the TouchTunes Dashboard</i>	<i>8</i>
<i>Navigating the TouchTunes Dashboard</i>	<i>11</i>
<i>Understanding the Dashboard Workflow</i>	<i>14</i>

Overview

The TouchTunes Dashboard helps you to reduce or eliminate location visits for jukebox management tasks, such as selecting music or configuring settings for a jukebox. Using the TouchTunes Dashboard reduces the time, money and stress associated with these tasks, since you can manage your jukeboxes securely and remotely via the Internet from your office or home.

If you are new to the TouchTunes Dashboard, read this chapter to understand how your business can benefit from the Dashboard and familiarize yourself with its layout and general workflow.

In this chapter, you will find answers to the following questions:

- “What are the main features and benefits of the TouchTunes Dashboard?” (p. 8)

- “What are the different areas in the TouchTunes Dashboard? How do I navigate around the Dashboard?” (p. 11)
- “What is the general workflow (sequence of events) that I should follow when managing my jukeboxes through the TouchTunes Dashboard?” (p. 14)

Discovering the Features and Benefits of the TouchTunes Dashboard

What are the main features and benefits of the TouchTunes Dashboard?

The TouchTunes Dashboard is designed to reduce the time and effort you spend managing your jukeboxes at their physical locations. The following sections explain the major features of the Dashboard and show how they can benefit your business.

Remote Jukebox Management

The primary purpose of the TouchTunes Dashboard is to reduce (or even eliminate) onsite visits related to jukebox configuration and management. Instead of travelling to a location, you can do all of the following tasks using the Dashboard from the comfort of your home or office:

- Search for, transfer and manage music on all your jukeboxes simultaneously.
- Configure settings (such as music filters or credit rules) for a jukebox.
- View revenue generated by each jukebox as well as the played songs that were responsible for this revenue.
- Check that a jukebox is running properly and be alerted of problems.

Managing your jukeboxes remotely not only saves you time, money and stress, it can also improve the image of your business. For example, assume that a restaurant owner contacts you at night to ask if you can remove all songs with explicit lyrics from his jukebox since this does not fit his restaurant’s image. Instead of travelling to his location the next day to do this, you use the TouchTunes Dashboard from home adjust the explicit music filter on his jukebox the same night. By using the Dashboard, you saved the time you would have spent travelling to the restaurant and the restaurant owner had his issue handled promptly. Similarly, the owner of a family oriented restaurant might ask you to turn on the explicit content for a private party he is hosting. The Dashboard enables you to make adjustments to your jukeboxes from anywhere that has Internet access.

Full-featured Music Search Capabilities

The TouchTunes Dashboard provides comprehensive, user-friendly music search capabilities that are available on a TouchTunes jukebox. You can find music by:

- Searching for an artist, album or song title.
- Entering a TouchTunes Music ID number.
- Browsing pre-compiled music lists, such as those compiled by Billboard Magazine
- Viewing a list of newly music added to the TouchTunes music library.
- Sylvie’s Picks, TouchTunes’ own music recommendations, which uses a highly visible album jackets for quick music browsingTouchTunes.
- Checking out the music loaded on stock hard drives, by TouchTunes, for different markets.

- Viewing a list of the most popular songs from all of your jukeboxes, as well as from individual jukeboxes.

Using this feature allows you to handle music requests from location owners very quickly, which can increase plays and revenues. For example, assume that several bars located near a university ask you to add a song from an obscure group that is becoming popular with their students but which is not yet available on their jukeboxes. You use the music search capabilities in the Dashboard to find the song in the TouchTunes music catalog and transfer it to each of their jukeboxes. By using the Dashboard, you saved yourself the time to order the song for each location and the bar owners got a popular (and profitable) song quickly added to their jukeboxes.

Centralized Music Storage and Transfer

The Music Cart is a storage area only accessible through the TouchTunes Dashboard that provides a single location where you can keep all the music to be sent to your jukeboxes. You can use the Music Cart to transfer selected music to a single jukebox or to all the jukeboxes you manage. You can also save music in the Music Cart between Dashboard sessions, in case you are interrupted while selecting or transferring music; when you return to the Dashboard, all of your music reappears in the Cart. This feature allows you to consolidate and handle all music requests from all your location owners at once, rather than on a piecemeal basis.

Using the Music Cart provides flexibility and saves you time when managing music for your jukeboxes because you can use it to transfer music to multiple jukeboxes simultaneously. For example, assume that several location owners ask you to add an increasingly popular song to each of their jukeboxes. Instead of transferring the same song to each location during your next onsite visit, you use the Dashboard to send it to all your jukeboxes from the Music Cart at once. By using the Music Cart, you not only substantially reduced the time required to add a new song to your jukeboxes, you also improved the chances that this popular song will get played in each of your locations.

Access to Useful Statistics and Reports

The TouchTunes Dashboard can help improve your business by providing useful and timely information about your jukeboxes. You can use the Dashboard to generate and view reports showing:

- Revenues generated for all jukeboxes over a user-definable period. You can also “drill-down” and see a detailed report showing the revenues for each jukebox.
- Detailed song- and play-related statistics for each jukebox, including song title, album, artist, music style/genre, date the song was downloaded, its relative popularity, the total number of times a song has been played, and the date and time a song was played, among others. You can sort these statistics by any category to answer questions like “what are the most popular of the newest songs on my jukeboxes?”
- Information for each location where you have a jukebox installed, including details such as the address and phone number of the location, as well as name of the contact person responsible for the jukebox.

Using this feature allows you to get timely information about your jukeboxes, which can identify business opportunities. For example, assume that you notice in the song-related reports that a certain dance song is becoming more and more popular on several jukeboxes. Instead of waiting for the location owners to request this song, you transfer it to all your jukeboxes to maximize revenues as the song gets more popular.

You can also sort these reports in various ways that can help you identify situations at locations that you were otherwise unaware of. For example, say that your revenue reports in the Dashboard show that jukebox revenue at a particular bar has decreased significantly over the past two weekends. You contact the bar owner and discover that he has brought in a DJ to play music during the weekend, which is a violation of your contract with him. The owner agrees to cancel the DJ and your weekend revenues for this location return to normal.

Delegation of Management Tasks

Depending on the size and/or organization of your business, you can create additional Dashboard user accounts to allow your employees (or even your location owners) to handle certain jukebox management tasks through the TouchTunes Dashboard. When you create these accounts, you also set up security rules that define what Dashboard functionality and jukebox locations these additional users can access.

Using this feature allows you to delegate jukebox management tasks to other people while ensuring that each user only has access to the functionality and locations they need. For example, you can create a Dashboard account for a location owner so they can use their knowledge of their clientele's musical tastes to select songs for their jukebox. At the same time, you configure the account so the location owner cannot view your revenue information and/or discover which of his competitors are also your clients.

Monitoring and Diagnostic Tools

The TouchTunes Dashboard provides a suite of tools to help you keep your jukeboxes up and running. These tools include:

- Identifying any major jukebox problems directly on the Dashboard home page that appears when you log in.
- Displaying a report showing the current status of all your jukeboxes, including the last time they connected and the ISP used for dial-up connections.
- Providing access jukebox settings so you can troubleshoot issues, such as communications problems between a jukebox and the TouchTunes server.

For Gen 3 jukeboxes, the TouchTunes Dashboard provides an even more comprehensive suite of troubleshooting tools. With these jukeboxes, you can view diagnostics in the Dashboard that show the status of key jukebox components at a glance. You can also use the Dashboard to configure jukeboxes to send you email alerts if a major problem occurs, such as a coin or bill acceptor malfunctioning.

Using these features allows you to identify and handle jukebox problems long before your location owners do. For example, assume you receive an email alert from a jukebox telling you that its coin acceptor is malfunctioning. You immediately dispatch a technician to replace the acceptor. The location owner later calls you to say that she was amazed with your service since none of her customers or staff noticed that there was even a problem in the first place.

Consolidated Location Information

The TouchTunes Dashboard allows you to keep track of all your locations in a single place. For example, you can add information for a location like the name and phone number for its contact person. While this feature is obviously convenient for you, it can also increase your business since your locations become available in the MyTouchTunes website (www.mytouchtunes.com). This website helps people who are trying to locate TouchTunes jukeboxes in their area to find your locations. By adding locations to the Dashboard, you can drive business to your jukeboxes and promote your locations at the same time.

Single Source to get TouchTunes Contact, Support and Documentation

Although you use the TouchTunes Dashboard primarily as a jukebox management tool, you can also use it to contact TouchTunes and view documentation. A single Contacts page provides email links to many departments at TouchTunes, including Technical Support, Sales, Finance, Legal and the Music department. You can also access Dashboard-related news articles (such as any upcoming scheduled outages) and related technical documentation for your jukeboxes through the Dashboard.

Using the Dashboard to email TouchTunes means that you do not have to spend time playing “telephone tag” to ask a question or get help and also allows TouchTunes staff to respond more quickly to your question, problem or request.

24/7 Availability

TouchTunes provides all of the hardware, software and IT resources needed to keep the Dashboard running virtually 24 hours a day, 7 days a week. Having the TouchTunes Dashboard available all the time means that you can manage jukeboxes when you find it convenient, rather than when you can cram in another onsite visit into your schedule.

Navigating the TouchTunes Dashboard

What are the different areas in the TouchTunes Dashboard?

How do I navigate around the Dashboard?

The TouchTunes Dashboard is divided into four main areas, as shown by the following diagram:

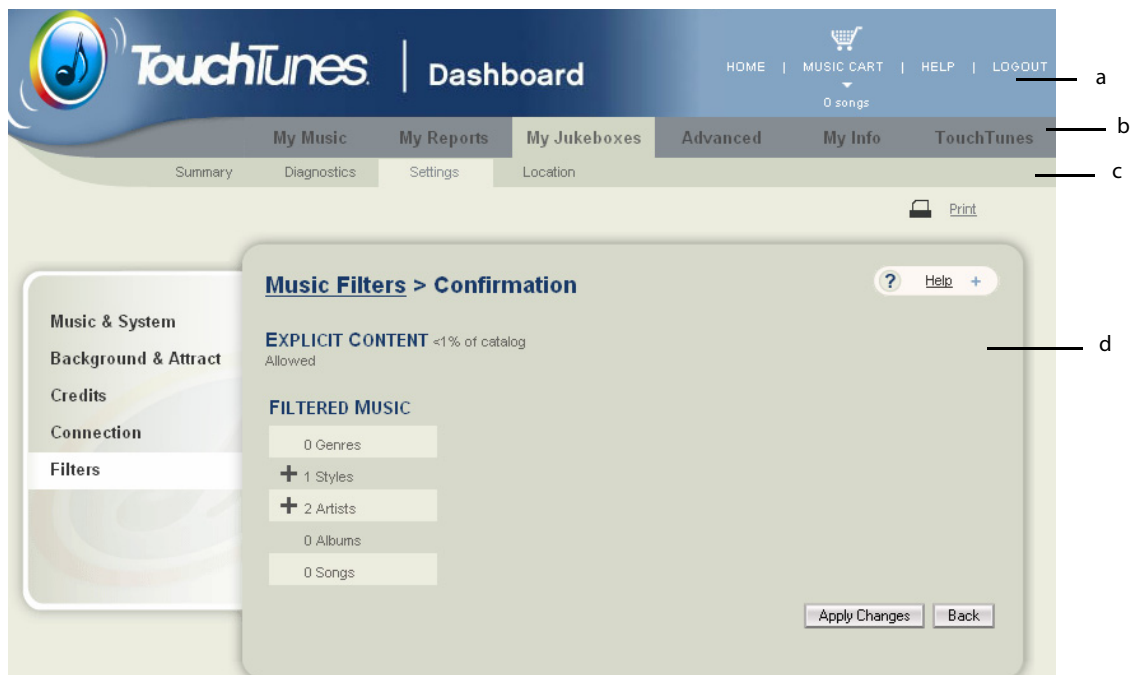 


Figure 3 a) Quick Link area b) Main Menu bar c) Secondary Menu bar d) Display panel

The following sections explain the contents and functions of each UI component.

Main Menu Bar

Use the main menu bar to access the major TouchTunes Dashboard functions. The following list provides a brief overview of each major Dashboard function appearing in the main menu bar:

Menu Bar Item	Description
My Music	Access the Music Portal, search for and transfer music to jukeboxes, browse music currently loaded on jukeboxes, and view/ review music transfers.
My Reports	Generate, view and export reports showing the status, locations, revenues and play statistics for all your jukeboxes. You can also view statistics for PlayporTT by handheld or by game, and generate PDF copies of your TouchTunes invoices.
My Jukeboxes	View a summary showing the status, location and history of a jukebox. You also use this function to modify settings, view current diagnostics for Gen 3 jukeboxes or reboot a Gen 3 jukebox remotely if it is connected by a broadband connection. PlayporTT game devices can also be modified from this location. A PlayporTT tower can be identified from the Choose another device drop-down menu by its "PP" prefix.
Advanced	Schedule when TuneCentral is available on a Gen 2 jukebox.
My Info	View and modify your own user account settings and preferences, and create and manage Dashboard sub-user accounts. You also use this function to set up email alerts that let you know if a serious problem with a jukebox (such as a jammed bill collector) occurs.
TouchTunes	Contact various TouchTunes departments (such as sales or legal), submit music requests to the music department, get help from technical support and view documentation for your jukeboxes.

When you click an item in the main menu bar:

- The secondary menu bar area displays related functions that allow you to perform tasks, such as searching for music by ID or configuring jukebox settings.
- The display panel shows the page associated with the highlighted item in the secondary menu bar.

Secondary Menu Bar

Use the secondary menu bar to select jukebox management tasks that you want to perform. When you click an item in the secondary menu bar, the page for the selected function appears in the display panel. For example, when you click on **My Jukeboxes** in the main menu bar, the secondary menu bar shows related options to do the following for a jukebox:

- View a detailed summary for a jukebox (Summary)
- Check at its diagnostic status (Diagnostics)
- Modify its settings (Settings)
- View its current location (Locations)

Most procedures in this guide provide navigation instructions for both main and secondary menu bars in the same step. Unless stated otherwise, an item to the left of the pipe character (|) is located in the main menu bar, while the item to the right of this character is located in the

secondary menu bar. For example, a step like:

"Choose **My Jukeboxes | Settings...**" means that you choose **My Jukeboxes** in the main menu bar first, then you choose **Settings** in the secondary menu bar.

Quick Link Area

Use the Quick Link area to access the most popular Dashboard features, as well as log out of the TouchTunes Dashboard. The following table explains the features associated with each item in this area.

Choose:	To:
Home	Return to your Dashboard home page, which lists all main and secondary menu items on a single page for easy reference
Music Cart	View the music that is currently in your Music Cart.
Help	Display a brief summary of help features and resources for the TouchTunes Dashboard.
Logout	Log out of the TouchTunes Dashboard.

Display Panel

Use the display panel to perform the task associated with the TouchTunes Dashboard feature or function selected in the secondary menu bar. In this guide, the procedure that explains how to perform each task also explains the user interface that appears in the display panel of the Dashboard.

Unlike the menu bars, the appearance of the display panel can change based on the Dashboard function you are using. For example, when you choose **My Jukeboxes | Settings**, the display

panel divides into two sub-panels: the left sub-panel shows all the types of jukebox settings you can modify, while the right sub-panel allows you to modify individual settings for a jukebox.

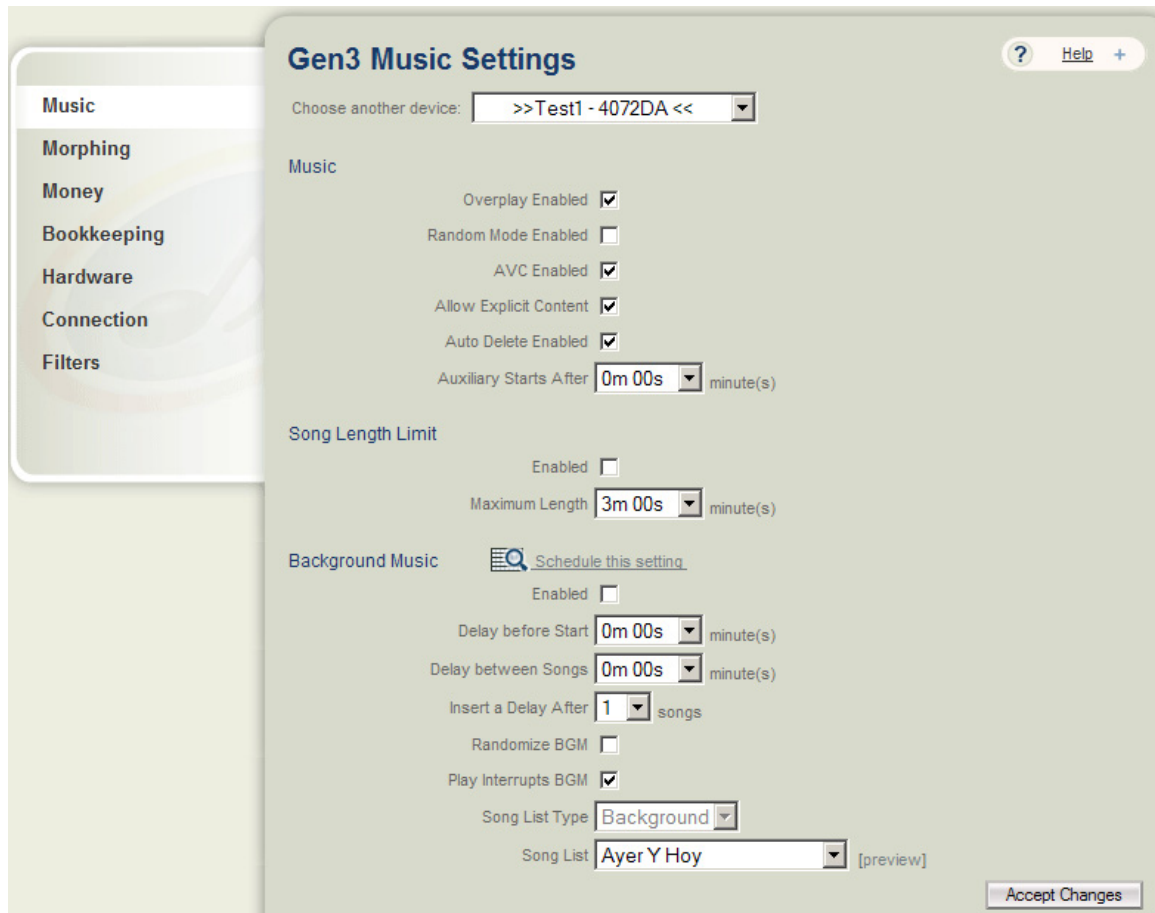 


Figure 4 Display panel area divided into two vertical sub-panels

Understanding the Dashboard Workflow

What is the general workflow (sequence of events) that I should follow when managing my jukeboxes through the TouchTunes Dashboard?

A *workflow* is a procedure showing the general order of work associated with achieving a goal. The following procedure shows the workflow associated with managing your jukeboxes through the TouchTunes Dashboard. You may find this workflow useful while you are first learning how to use the Dashboard or evaluating where you can integrate the Dashboard into your normal business practises.

To use the TouchTunes Dashboard:

1. Obtain a TouchTunes Dashboard user account, set up your account and your preferences, and log in to the Dashboard. See “Setting Up the Dashboard” on page 17.

2. Create and configure Dashboard user accounts for your employees or location owners who may also use the Dashboard to perform jukebox management. See “Setting Up TouchTunes Dashboard Sub-User Accounts” on page 31.
3. For each jukebox, add its location to the Dashboard and enter details like the name, phone number and contact person for the establishment. See “Entering Your Jukebox Locations in the TouchTunes Dashboard” on page 39.
4. Search for and select music to be added, organize the music in lists, and then transfer this music to the jukeboxes or to a USB device. See “Locating Music and Sending it to Jukeboxes Using the Dashboard” on page 49.
5. View, modify or remove music already on your jukeboxes. See “Managing Music on Jukeboxes Using the TouchTunes Dashboard” on page 83.
6. Set up the *revenue model* (jukebox credit rules, Play Next! and TuneCentral credit settings) for each jukebox and monitor the revenue each jukebox earns. See “Managing Jukebox Income Using the TouchTunes Dashboard” on page 97.
7. View TouchTunes invoices (such as music service invoices) to track your costs. See “Viewing Your Invoices with the TouchTunes Dashboard” on page 147.
8. Configure general music settings (such as background music modes) for each jukebox. See “Configuring Music and Game Settings Using the TouchTunes Dashboard” on page 127.
9. Create and manage *music filters* (rules that control what music is available for play) for each jukebox, such as removing explicit music. See “Managing Music Filters for a Jukebox in the TouchTunes Dashboard” on page 151.
10. Set the time window when a jukebox will contact the TouchTunes server to download new music and/or settings. See “Setting Up Communications Settings Using the TouchTunes Dashboard” on page 181.
11. View the current status of your jukeboxes, set up email alerts to let you know of emergencies and monitor diagnostics showing the health of each jukebox. See “Monitoring Jukeboxes Using the TouchTunes Dashboard” on page 185.

3

Setting Up the Dashboard

This chapter explains how to get an account for the Dashboard, log on and customize the Dashboard according to your preferences.

Contents

<i>Overview</i>	<i>17</i>
<i>Key Dashboard Concepts</i>	<i>18</i>
<i>Obtaining a Dashboard User Account</i>	<i>19</i>
<i>Log On to the TouchTunes Dashboard</i>	<i>21</i>
<i>Customize Your Dashboard User Account</i>	<i>24</i>
<i>Set Dashboard Preferences</i>	<i>26</i>
<i>Resetting Dashboard Passwords</i>	<i>29</i>

Overview

The TouchTunes Dashboard is a free service, but you must have a user account to use it. The Dashboard uses this account to identify you and load relevant information, such as your jukeboxes and locations. Getting a Dashboard user account is free. Your user account also allows you to customize the Dashboard by setting your preferences.

In this chapter, you learn about:

- “Key Dashboard Concepts” on page 18
- “Obtaining a Dashboard User Account” on page 19
- “Log On to the TouchTunes Dashboard” on page 21.

- “Customize Your Dashboard User Account” on page 24.
- “Set Dashboard Preferences” on page 26.
- “Resetting Dashboard Passwords” on page 29.

In addition, you will be able to answer the following question:

- What are the different types of user accounts for the TouchTunes Dashboard?
- How can I get access to TouchTunes Dashboard? What do I need to do to get an Dashboard account?
- How do I log on to the TouchTunes Dashboard?
- How do I reset my lost or forgotten Dashboard password.

Key Dashboard Concepts

Master and Sub-Accounts

What are the different types of user accounts for the TouchTunes Dashboard?

Everyone who uses the TouchTunes Dashboard requires a user account. However, you need to understand that there are two different types of Dashboard user accounts:

- Master Dashboard account: This is the user account that TouchTunes creates through the procedure described in “Obtaining a Dashboard User Account” on page 19.
- Dashboard sub-accounts: These are user accounts that you can create for your employees and/or location owners.

There are several factors that differentiates a master account from sub-accounts. The first (and most obvious) factor is to whom the account is issued. In general, the master Dashboard account is issued to a company, while a sub-account is issued to a specific person. For example, a large jukebox vendor will have a single master Dashboard account while each employee has their own sub-account.

Another differentiating factor between master and sub-accounts lies in how the account is used. In larger businesses, the master Dashboard account is used for administrative purposes, such as for creating and managing sub-accounts. Dashboard sub-accounts are tailored more for an individual’s job or role. For example, the master Dashboard account can create a sub-account for a location owner that restricts them to music search and management functionality in the Dashboard.

Sub-accounts cannot manage any account other than their own, whereas the master Dashboard account can view and manage all accounts.

Obtaining a Dashboard User Account

How can I get access to TouchTunes Dashboard? What do I need to do to get an Dashboard account?

Request a user account for the TouchTunes Dashboard by filling out an electronic form and submitting it to TouchTunes. TouchTunes must create your Dashboard user account before you can begin using the TouchTunes Dashboard, which may take up to 24 hours.

The following procedure explains how to access the electronic form used to request a Dashboard user account and also shows you how to complete the form and submit it to TouchTunes. Before doing this procedure, note the following:

- The procedure requires that you are contacted by TouchTunes to confirm that your music vending company is a TouchTunes partner. This procedure should be done by someone who is senior enough in your company to provide this information.
- You only need a single Dashboard user account per music vending company, since you can create sub-accounts to provide access to the TouchTunes Dashboard to other employees and location owners.

To obtain a Dashboard User Account:

1. In a Web browser, connect to the TouchTunes Dashboard by navigating to the following URL:

<https://operator.touchtunes.com>

The Login page for the Dashboard appears.

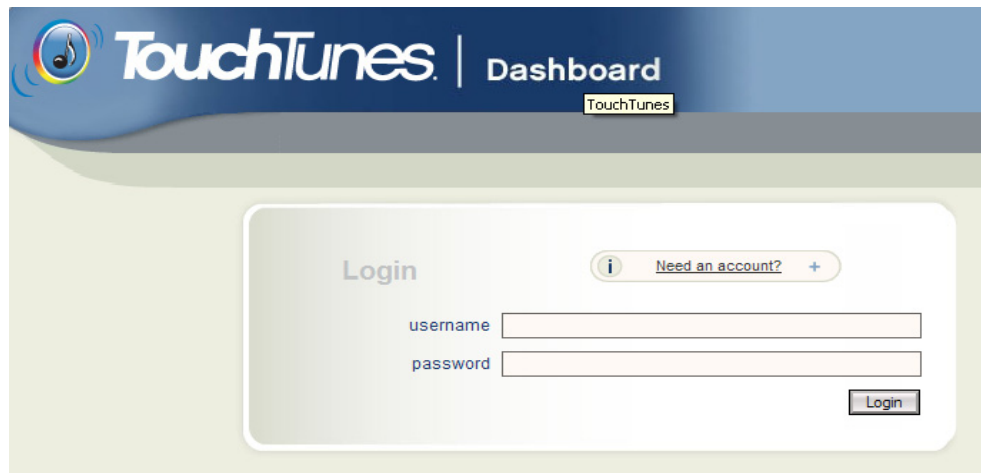 



Figure 4 TouchTunes Dashboard Login page

Tip: You can also access the Login page for the Dashboard by following the link from the main TouchTunes Web site.

2. Open the **Need an account?** help bubble.

The help bubble explains why you need a user account and how to request one.

3. Click the **request form** link in the help bubble.

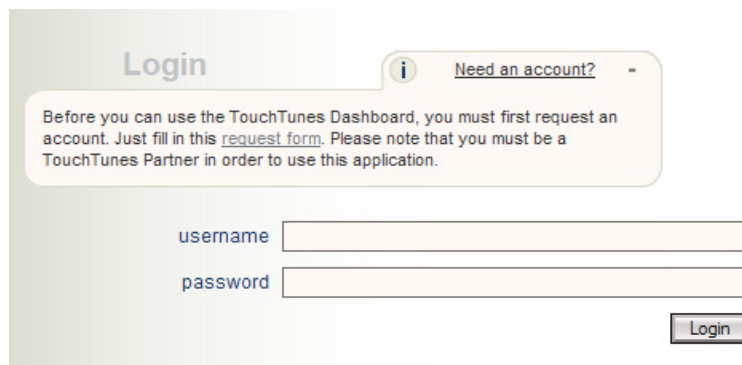

The image shows a login interface. At the top left is the word "Login". To its right is a help bubble containing an information icon, the text "Need an account?", and a minus sign. Below the bubble is a message: "Before you can use the TouchTunes Dashboard, you must first request an account. Just fill in this [request form](#). Please note that you must be a TouchTunes Partner in order to use this application." Below this message are two input fields labeled "username" and "password". At the bottom right is a "Login" button.

A user account request form appears.



The image shows the "TouchTunes | Dashboard" header. Below it, a message states: "TouchTunes' Dashboard is now on-line!". A paragraph explains the tool's purpose and the requirement to request an account. An "IMPORTANT NOTE" states that accounts are only issued to music vending companies currently operating TouchTunes equipment. A note mentions business hours (8 AM to 5 PM CST) and a contact number (888-338-5853). The form is divided into two sections: "Your Contact Information" and "Requested Account Information". The "Your Contact Information" section includes fields for "Company Name", "Your name", "Your phone number", "Your e-mail", and a "Best time to reach you" dropdown menu (set to "Please select") with "Central Time (Chicago)" as an option. The "Requested Account Information" section includes fields for "Username (5 to 10 characters long)", "Password (9 characters minimum)", and "Confirm Password (Type your password again)". At the bottom of the form are "Send" and "or Cancel" buttons.

Figure 5 Dashboard User Account Request form

You must complete and submit this form to TouchTunes in order to get your Dashboard user account.

4. In the **Your Contact Information** area, enter the following in the indicated fields:
 - The name of your company.
 - Your name, phone number and email address.
 - A time when you can be contacted by TouchTunes in Central Time.
5. In the **Requested Account Information** area, enter a username and password for your Dashboard user account in the indicated fields.
 Note that all usernames and passwords for the Dashboard must be unique and are subject to approval by TouchTunes.

Tip: Usernames and passwords are case-sensitive. For added security, include numbers, upper- and lower-case letters in your username and password, such as *JuKEboX07*.

6. Click **Send** to submit the completed form to TouchTunes.

Figure 6

Figure 7 Submitting the request for a Dashboard account

7. If you missed or did not enter the expected information in a field, the Dashboard prompts you to correct your mistake and resubmit the form. Otherwise, your completed form is sent to TouchTunes. Once your form is received, a TouchTunes employee will call you during the time you specified to verify that your business operates TouchTunes equipment, finalize the details of your user account and send you a confirmation email with your Dashboard username and password.

Note: TouchTunes Dashboard user accounts are only issued between Monday and Friday during normal business hours (8 AM to 5 PM, Central Time). If you are immediately recognized by the TouchTunes sales representative, your account will automatically be set up and you will receive a confirmation email.

8. When you receive your username and password, you can log in to the TouchTunes Dashboard. See “Log On to the TouchTunes Dashboard” on page 21.

Log On to the TouchTunes Dashboard

How do I log on to the TouchTunes Dashboard?

Log in to the TouchTunes Dashboard through a Web browser using the login credentials (username and password) for your Dashboard user account.

To log on to the TouchTunes Dashboard:

1. In a Web browser, connect to the TouchTunes Dashboard by navigating to the following URL:

<https://operator.touchtunes.com>

The Login page for the TouchTunes Dashboard appears.

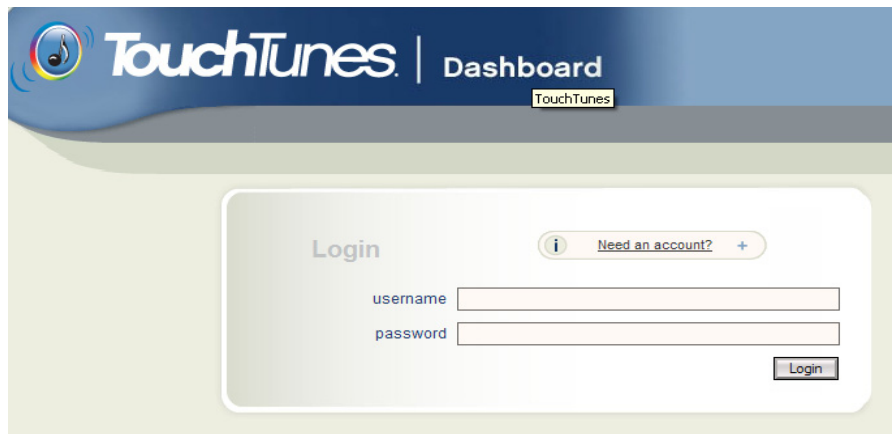 


Figure 8 Login page for the TouchTunes Dashboard

Tip: Add this URL to your Favorites or Bookmarks so you can return the TouchTunes Dashboard later.

2. Enter the username and password for your user account in their respective fields and then click **Login**.

Your TouchTunes Dashboard home page appears.

The screenshot shows the TouchTunes Dashboard interface. At the top, there is a navigation bar with the TouchTunes logo and the word 'Dashboard'. Below this is a secondary navigation bar with links: 'My Music', 'My Reports', 'My Jukeboxes', 'Advanced', 'My Info', and 'TouchTunes'. On the right side of the top bar, there is a shopping cart icon with '0 songs' and a 'MUSIC CARD' link, along with 'HOME | HELP | LOGOUT' links. A 'Print' button is located on the right side of the main content area.

Label 'a' points to the 'My Music' section, which includes a promotional banner for 'Gen2 Systems* to Gen3' (a.k.a. 'Black PC') and a 'MY MUSIC' section with a 'NEW' badge. The 'MY MUSIC' section contains text about finding music and three song recommendations: 'O.A.R. "This Town"', 'Randy Houser "Anything Goes"', and 'Majestad De La Sierra "Si Te Pudiera Mentir"'. Below these are links for 'Music Cart' and 'Your Music Requests'.

Label 'b' points to the 'Jukeboxes Summary' section, which provides a status overview of the jukeboxes. It includes a list of issues: 24 jukeboxes with incomplete location information, 339 jukeboxes OK, 8 jukeboxes with unstable links, and 254 jukeboxes with communication difficulties. A link to 'My Reports/Jukeboxes' is provided for more details.

Label 'c' points to the 'What's New' section, which lists recent updates and announcements. It includes 'TouchTunes at ASI Show—The Ultimate In-Bar Entertainment Experience' (March 20, 2009), 'Dashboard Maintenance Wed. March 22nd, 2009' (March 19, 2009), and a hardware upgrade announcement for March 22nd, 2009, between 1pm and 4pm (E.S.T.).

Figure 9 a) Dashboard function area b) Jukeboxes Summary area c) What's New area

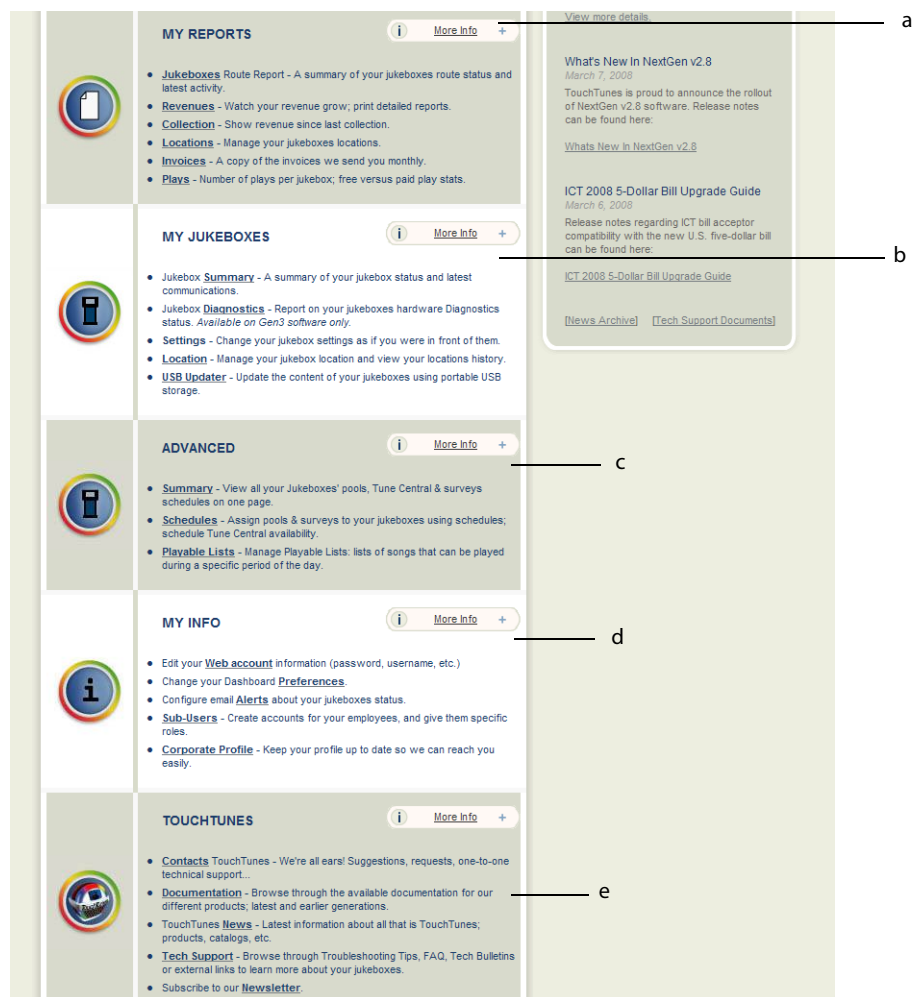


Figure 10 a) Reports b) Jukebox information c) Advanced settings d) My Info e) Contacting TouchTunes

You can use your Dashboard home page to do the following:

- Jump directly to a Dashboard function, such as searching for music, creating a report or contacting TouchTunes.
- View a summary of your Jukeboxes and their status in the **Jukeboxes Summary** area.
- View any new TouchTunes-related news or technical support documentation in the **What's New** area.

For more on these Dashboard functions, see the section "Navigating the TouchTunes Dashboard" on page 11.

Customize Your Dashboard User Account

You can customize the user account for the TouchTunes Dashboard by doing the following:

- Change the username and password for the TouchTunes Dashboard user account.
- Enter the contact information of the person responsible for the administration of the TouchTunes Dashboard.

Note that customizing your user account has no impact on the Dashboard itself. To change the way your Dashboard appears and works, see “Set Dashboard Preferences” on page 26.

Tip: If you are setting up the Dashboard for the first time, use these procedures to enter the contact information of the person responsible for administering the TouchTunes Dashboard.

To customize your Dashboard user account:

1. Click **My Info | Web account** in the Dashboard navigation bar.

The Edit Your Web Account page appears. You use this page to customize your Dashboard user account.

The screenshot shows the TouchTunes Dashboard interface. At the top, there's a navigation bar with the TouchTunes logo and 'Dashboard' text. On the right, there are links for HOME, MUSIC CART (with a shopping cart icon and '0 songs'), HELP, and LOGOUT. Below this is a secondary navigation bar with tabs: My Music, My Reports, My Jukeboxes, Advanced, My Info (selected), and TouchTunes. Under 'My Info', there are sub-tabs: Web account (selected), Preferences, Alerts, Sub-Users, and Corporate Profile. A 'Print' button is visible on the right. The main content area is titled 'Edit Your Web Account'. It contains a form with the following fields: Username (with a red asterisk and a note 'The username used for login.'), Password (with a red asterisk and a note 'The password used for login.'), Password confirmation (with a red asterisk and a note 'Please confirm the password used for login.'), Full Name, Email address, Phone number, Mobile Phone number, and Preferred Language (a dropdown menu set to 'English'). A 'Save User Info' button is at the bottom of the form. A red asterisk and the text '* fields are mandatory' are at the top left of the form area.

Figure 11 Editing Your Web Account Page

2. To change the username and password for your user account, do the following:

- Enter the new username in the Username field.
- Enter the new password in the Password and Confirm Password fields.

Next, enter the contact information for the person responsible for administering the TouchTunes Dashboard. This information may be used by TouchTunes employees to contact this person regarding Dashboard-related issues, such as scheduled Dashboard outages for maintenance.

Note: Fields marked with an asterisk (*) are mandatory.

3. Enter the name of the person responsible for administering the TouchTunes Dashboard in the Full name field.
4. Enter the email address of the person responsible for administering the TouchTunes Dashboard in the Email address field.
5. Enter the phone number of the person responsible for administering the TouchTunes Dashboard in the Phone number field.
6. (Optional) Enter the mobile phone number of the person responsible for administering the TouchTunes Dashboard in the Mobile Phone number field.
7. Enter the language that should be used to communicate with the person responsible for administering the TouchTunes Dashboard in the Preferred Language field.
8. Click **Save User Info**.
If a mandatory field is empty, the Dashboard prompts you to enter information for the person responsible for administering the TouchTunes Dashboard in that field. Otherwise, the user account information is updated.

Set Dashboard Preferences

You can control how the TouchTunes Dashboard appears and works in certain situations using the Dashboard Preferences page. For example, you can set the information for your jukeboxes that appears in the Dashboard.

Note: TouchTunes saves your preferences for the Dashboard in a small text file called a *cookie*. Your web browser must be configured to accept cookies for your preferences to be set properly when you log on to the Dashboard again. Because cookies are saved to your computer's hard disk, if you use more than one computer to access the TouchTunes Dashboard, you must set up your preferences again on the other computer.

To set your preferences for the Dashboard:

1. Click **My Info | Preferences** in the Dashboard navigation bar.

The Dashboard Preferences page appears. You use this page to control how the Dashboard appears and works when you are logged in.

Figure 12 The Dashboard Preferences page

Use the following guide to setting preferences for the TouchTunes Dashboard:

- To change the way your jukeboxes appear in a list, do the next two steps.
 - To set the content for help bubbles appear in the Dashboard by default, do step 4.
 - To control whether selected songs are removed from the Music Cart after a successful operation, do step 5.
2. In Jukeboxes Identification, select one of the following from the left drop-down list to control the identifying information that appears first when a list of your jukeboxes appear in the Dashboard:
 - Jukebox ID:** (Default) Shows the ID number of a jukebox.
 - Jukebox Location:** Shows the current location of a jukebox.
 - Tune Central ID:** • Shows the ID number for Tune Central, if the jukebox is equipped with this option.
 - has Tune Central:** • Shows if the jukebox contains Tune Central.
 3. Repeat the previous step to set up the remaining lists in the Jukeboxes Identification area and configure the remaining information that is displayed to identify your jukeboxes in the Dashboard.

Setting up the Jukeboxes Identification area also sets the way jukeboxes are sorted in the Dashboard. For example, selecting Jukebox Location as the first item means that jukeboxes are sorted in alphanumeric order first.

4. Enable Show Help to show the contents of help bubbles in the Dashboard UI.
This option is enabled by default in the Dashboard.
5. Enable Remove Songs When Done to remove songs involved in an operation (such as a music transfer to a jukebox) from your Music Cart when the operation is successfully completed.
This option is disabled by default, since you may want to transfer the same songs from the Music Cart to other jukeboxes.
6. Click **Save Your Preferences**.
Your Dashboard preferences are saved.

 
Log Out of the TouchTunes Dashboard

How do I log out of TouchTunes Dashboard?

Log out of the TouchTunes Dashboard when you are done using it. Logging out ensures that no one uses the Dashboard from your computer without your knowledge.

To log out of the Dashboard:

Click **Logout** in the Quick Links area.

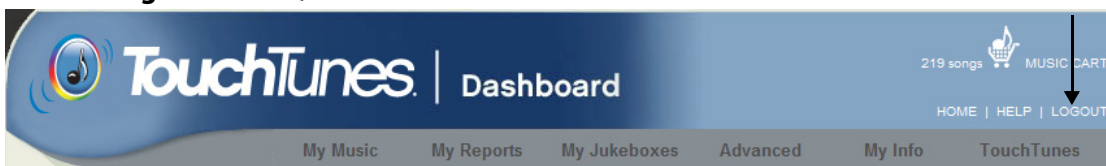

You are logged out immediately. The Login page reappears in your Web browser.

1. You may be prompted to confirm pending changes you have made through the Dashboard to the settings of a Gen 2 jukebox. Once you confirm these changes, you are logged out of the Dashboard automatically.

Resetting Dashboard Passwords

How do I reset my lost or forgotten Dashboard password.

If you lose or forget your password, you can request a new one directly from the login screen. The previous password is invalidated and the new one is e-mailed to you.

Requesting a new password from the login page

Dashboard administrators can also reset passwords for their sub-users from the **My Info > Sub-Users** page by pressing the **Reset Password** button.

An account administrator resetting a password for a sub-user

Once they have logged back on to Dashboard with their new password, users can always change their passwords from the **My Info > Web Account** page.

4

Setting Up TouchTunes Dashboard Sub-User Accounts

This chapter explains how you set up and manage sub-user accounts in the Dashboard to delegate jukebox management tasks to employees or location owners.

Contents

<i>Overview</i>	<i>31</i>
<i>Adding a Sub-User Account to the TouchTunes Dashboard</i>	<i>32</i>
<i>Removing a Sub-User Account from the TouchTunes Dashboard</i>	<i>37</i>

Overview

A *sub-user account* (also called a *sub-user*) is a user account for the TouchTunes Dashboard that you create to allow other people to view and manage your jukeboxes in the Dashboard. You create sub-user accounts to delegate certain management tasks (such as music selection) to your employees or location owners.

Because you create and manage sub-users, you also control the Dashboard functionality and jukebox locations to which they have access. Properly implementing these security restrictions is important to ensure employees only have access to the functionality and/or locations that are relevant to their jobs. For example, you can configure sub-user accounts for your technical support staff so they can view the settings on all of your jukeboxes but not view revenue reports or TouchTunes invoices.

In this chapter, you will find answers to the following questions:

- “Can I give my technicians, jukebox music managers and/or location owners restricted access to the Dashboard, such as preventing them from viewing my jukebox revenues?” (p. 32)
- “How do I remove a sub-user account from the TouchTunes Dashboard?” (p. 37)

Adding a Sub-User Account to the TouchTunes Dashboard

Can I give my technicians, jukebox music managers and/or location owners restricted access to the Dashboard, such as preventing them from viewing my jukebox revenues?

Add a sub-user account for each person who needs to perform tasks using the TouchTunes Dashboard. When you create a sub-user account, you also set what Dashboard functionality and jukebox locations the person is able to access. For example, you can allow the following:

- Browsing the TouchTunes music catalog.
- Accessing Technical Documentation, related News articles and Technical Support documents.

Conversely, you can also restrict the following actions:

- Viewing and accessing all jukebox locations.
- Creating additional sub-users.

You can customize the Dashboard functionality for a sub-user by assigning them a pre-defined *role* that corresponds to their job description or responsibilities. When you assign a sub-user a role, you give them permission to access certain Dashboard features while preventing them from accessing others. For example, assigning the “Money Manager” role to an employee who handles your accounting tasks allows them to view jukebox revenue reports and TouchTunes invoices in the TouchTunes Dashboard. Using roles simplifies the setup of permissions for a sub-user account since you do not have to indicate what individual Dashboard features are available to them.

The TouchTunes Dashboard also provides a special role for location owners that allows them to choose and manage music for their location. This allows the location owner to tailor the music on their jukebox based on their knowledge of their clientele’s musical taste. For example, assume that one of your locations is a Latin dance club. You create a Dashboard sub-user account for Estaban, the club owner, because you yourself are unfamiliar with Latin dance music. Estaban can then use the Dashboard to view the music catalog and select music that he knows will be popular with his patrons.

Before creating and assigning Dashboard sub-user accounts, you should establish a set of best practices that all employees and location owners must follow when using the Dashboard. Explaining these practices allows everyone to understand what the rights, expectations and responsibilities are for their sub-user account. The following examples are good practices to assume when creating sub-users:

- Ensure there is only one sub-user account per person. This helps to simplify the tracking of sub-user accounts and ensures that you can find the role(s) assigned to each person.
- Forbid sub-users from sharing their Dashboard user account usernames and passwords. This helps to ensure the overall security of the Dashboard against outside abuse.

To add a sub-user account:

1. On the TouchTunes Dashboard, choose **My Info | Sub-Users**.

The Dashboard Sub-Users page appears, showing all current Dashboard sub-user accounts.

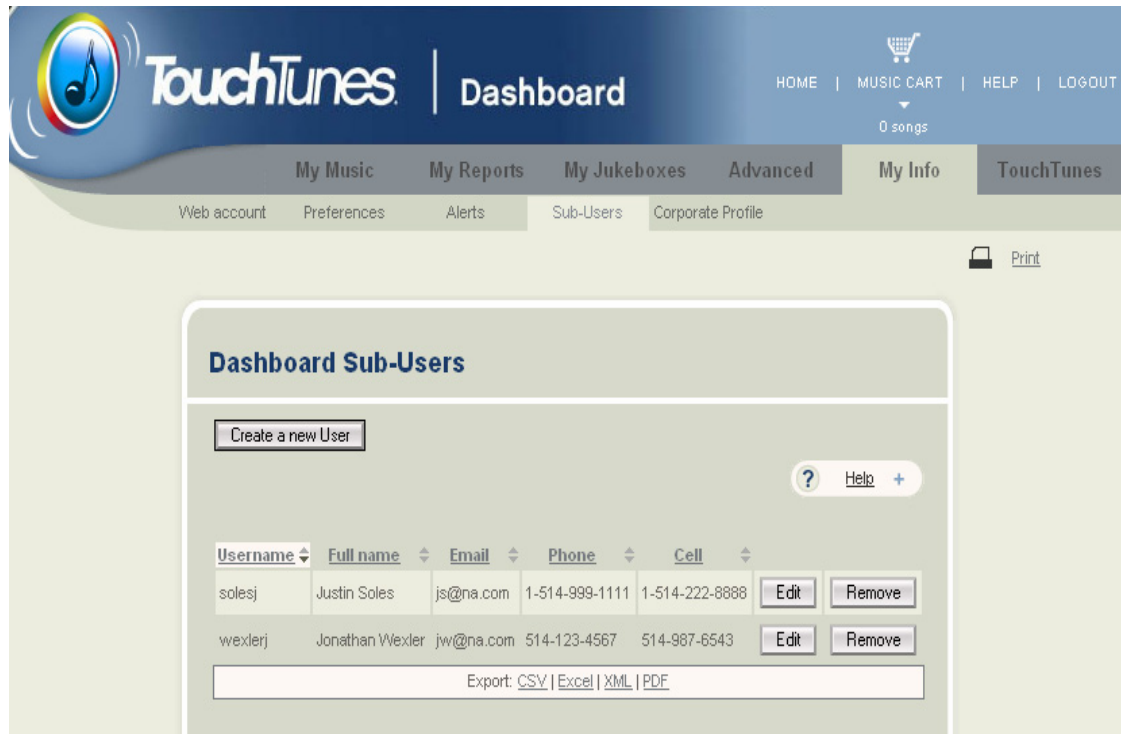 


Figure 5 Dashboard Sub-Users page

2. Click **Create a New User**.

The Create a New Sub-User page appears. You use this page to create a new Dashboard sub-user account.

Create a New Sub-User

* fields are mandatory

Username *	JohnnyJ455
<small>The username used for login.</small>	
Password	XXXXXXXXXX
<small>The password used for login.</small>	
Password confirmation	XXXXXXXXXX
<small>Please confirm the password used for login.</small>	
Full Name *	John Jackson
Email address *	JohnnyJ455@hotmail.com
Phone number *	1-514-555-4578
Mobile Phone number	1-514-555-7845
Preferred Language *	English
Permissions	

Create a New Sub-User page

3. At the top of the Create a New Sub-User page, enter the following information for the new account in the fields indicated:

- The username and password for the account.
- The full name, email address and phone number of the person using the account.
- (Optional) The mobile phone number of the person using the account.
- The preferred language of the person using the account (English/French/Spanish).

Entering this information allows you to maintain contact details for the person using the new sub-account.

In the next four steps, you set the roles for and jukebox locations available to the new sub-user. Although these steps are not mandatory, doing them ensures that the sub-user can only access the Dashboard functionality and locations that are relevant for their job.

4. Navigate to the **Permissions** area.

PERMISSIONS

Default Permissions

All Dashboard Users can:

- Browse our music catalog;
- Contact TouchTunes;
- Read Documentation, News & Tech Support documents;
- View jukeboxes settings & locations.

If you ever want to restrict access to some of the above sections to specific Web Users, please [contact TouchTunes Technical Support](#).

Account Administrator	? Details +	<input type="checkbox"/>
Location Owner	? Details +	<input type="checkbox"/>
Money Manager	? Details +	<input type="checkbox"/>
Music Manager	? Details +	<input type="checkbox"/>
Settings Manager	? Details +	<input type="checkbox"/>

Figure 6 Permissions area of the Create a New Sub-User page

5. Select the role (or roles) for the sub-user in the **Permissions** area, using the following table as a guide.

Sub-User Account Role:	What Dashboard functionality is available when you assign this role?	To whom should I assign this role?
Account Administrator	Account Administrators can search for and manage music, view jukebox revenues, monitor jukebox status and diagnostics and configure jukebox settings.	Assign this role to senior staff or trusted employees in your organization as this role allows the most Dashboard functionality.
Location Owner	This user can manage music for a single location. Location Owners can search for, order and transfer songs from the TouchTunes music library to their jukebox, as well as view and delete songs on their jukebox.	Assign this role to a location owner so they can manage music for their location. Location Owners cannot be assigned any other roles.
Money Manager	This user can monitor and manage jukebox-related revenues. Money Managers can access and view reports showing jukebox revenue, plays and content, view TouchTunes invoices, as well as the history showing song transactions and songs played.	Assign this role to employees who are responsible for monitoring jukebox revenues and expenses.

Sub-User Account Role:	What Dashboard functionality is available when you assign this role?	To whom should I assign this role?
Music Manager	This user can manage music for multiple locations. Music Managers can search for, order and transfer songs from the TouchTunes music catalog to any jukebox, as well as delete content and view song transactions for multiple jukeboxes.	Assign this role to employees responsible for selecting and managing music content on your jukeboxes.
Settings Manager	This user can monitor the status and manage and settings for multiple locations. Settings Managers can add and manage jukebox locations, view the status and diagnostics for jukeboxes and modify their settings for setup or troubleshooting.	Assign this role to employees responsible for installing, supporting, monitoring, and maintaining your jukeboxes.

You can assign multiple roles to a sub-user account. For example, you can assign your technicians both the Settings Manager and Music Manager roles to allow them to troubleshoot jukebox problems and help location owners download music through the Dashboard.

In order to simplify the creation of sub-users, their creation now employs a more useful logic flow. When a sub-user is created or edited and given the rights of a Location Owner, they cannot also be assigned any other rights, as these other rights would be mutually exclusive.

For the same reasons, when the **Account Administrator** checkbox is selected, sub-users are also automatically given all other rights except those of a Location Owner, namely Account Administrators, Money Manager, Music Manager or Settings Managers. However, these automatically selected profiles are only recommendations and can be deselected before saving the sub-users profile.

Tip: If you are creating an account for a location owner, make sure you agree in advance how many songs they are permitted to download per week or month. Otherwise, you might end up being charged for a large number of downloads initiated by the location owner.

6. Navigate to the **Locations Access** area.

LOCATIONS ACCESS

Can see all Locations ☒ This will allow this user to see **All** your locations, including locations you'll create in the future.

Can only see the selected Locations

☒ Green and Brown's Coffee Bean

☒ Joe's Bar

☒ Jose's Hideaway

☒ WAREHOUSE

Figure 7 Locations Access area of the Create a New Sub-User page

7. Do one of the following to select the locations that the sub-user can access:

- Enable **Can See All Locations** to allow the sub-user to access jukeboxes in all current and future locations.
- Select the jukeboxes in the **Can Only See the Selected Locations** area to which you want to give the sub-user access. When this is enabled for a sub-user, you must manually add any new jukebox locations to which you want to allow the sub-user access.

Tip: If your employees are organized by geographic area (such as by state/province, county or city), use the **Can Only See the Selected Locations** area to filter out jukeboxes that are not geographically close to them.

8. Click **Save User Info** to create the new sub-user account.

If any mandatory information for the sub-user account is missing, you are prompted to fill it in. Otherwise, the sub-user account is created and appears in the Dashboard Sub-Users page.

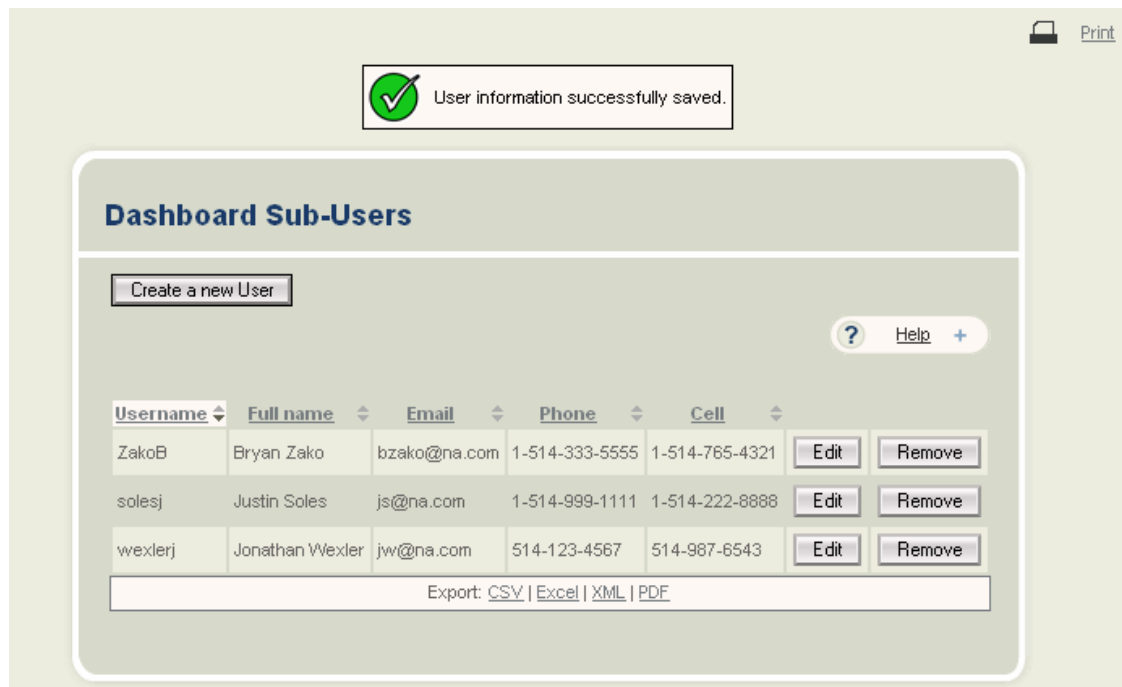 


Figure 8 The new sub-user now appears on the Dashboard Sub-Users page

Removing a Sub-User Account from the TouchTunes Dashboard

How do I remove a sub-user account from the TouchTunes Dashboard?

You can remove sub-user accounts when a person no longer needs access to the Dashboard, such as for employees who leave your company. Regularly removing Dashboard sub-user accounts is a good way to maintain Dashboard security and protect yourself and your customers against abuse by past employees.

To remove a sub-user account:


1. In the TouchTunes Dashboard, choose **My Info | Sub-Users**.
The Dashboard Sub-Users page appears, listing all current Dashboard sub-user accounts. You use the controls on this page to edit and/or delete sub-users.
2. Click **Remove** for the sub-user to be deleted.



Figure 9 Removing a Sub-User

Figure 10

 You are prompted to confirm this action before the indicated sub-user account is deleted.

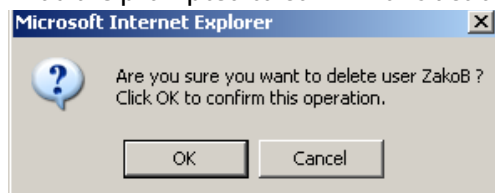

Note: The next step permanently deletes a Dashboard sub-user account. Before continuing, ensure that the indicated sub-user is the one that you want deleted. If you delete the wrong sub-user account by accident, you will need to manually recreate it.

3. Click **OK** to confirm the action.
The sub-user account is deleted and the Dashboard Sub-Users page shows the sub-user accounts remaining.

5

Entering Your Jukebox Locations in the TouchTunes Dashboard

This chapter explains how to add and manage locations in the TouchTunes Dashboard so you can track where each of your jukeboxes is installed and who is responsible for them.

Contents

<i>Overview</i>	<i>39</i>
<i>Adding a Location to the TouchTunes Dashboard</i>	<i>40</i>
<i>Moving a Jukebox to a Location in the TouchTunes Dashboard</i>	<i>44</i>
<i>Modifying Location Details in the TouchTunes Dashboard</i>	<i>46</i>
<i>Modifying the Public and Private Details in the TouchTunes Dashboard</i>	<i>47</i>

Overview

A *location* is a generic term used to identify any establishment where you install a TouchTunes jukebox, such as a bar, a club or a restaurant. You manage your locations through the TouchTunes Dashboard to keep track of where each of your jukeboxes is located and identify who is responsible for them.

Setting up your locations in the Dashboard also allows you to:

- Identify the origin of jukebox revenues, since the revenue reports will later be categorized by location.
- View music-related operating expenses for each location, since a TouchTunes music service invoice is broken down by location.
- Track the operating history of a jukebox, such as the date when your jukebox was delivered to a location and how long it has been there.

In this chapter, you will find answers to the following questions:

- “How do I set up my locations in the TouchTunes Dashboard?” (p. 40)
- “How do I move a jukebox to a different location in the TouchTunes Dashboard?” (p. 44)
- “How do I change a location’s name or contact information in the TouchTunes Dashboard?” (p. 46)

Adding a Location to the TouchTunes Dashboard

How do I set up my locations in the TouchTunes Dashboard?

Add a location to the TouchTunes Dashboard to record the details for the location, such as its name, address and the name of the contact person at the establishment who is responsible for the jukebox.

To add a location and associate a jukebox with it:

1. In the TouchTunes Dashboard, choose **My Jukeboxes | Summary**.

The Jukebox Manager page appears. You use the **Location Information** area on this page to add or modify the location for a jukebox.


Figure 6 Jukebox Manager page

- From the **Choose a Jukebox** list, select the jukebox you want to associate with the new location.


If the jukebox is currently associated with a location, its information appears in the **Location Information** area. Otherwise, this area shows that the jukebox is located in your warehouse and is not associated with a location.

- Do one of the following:

 - If the jukebox is currently associated with an existing location, click **Change This Jukebox Location**, choose **Add a New Location for this Jukebox** in the window that appears and then click **Create**.

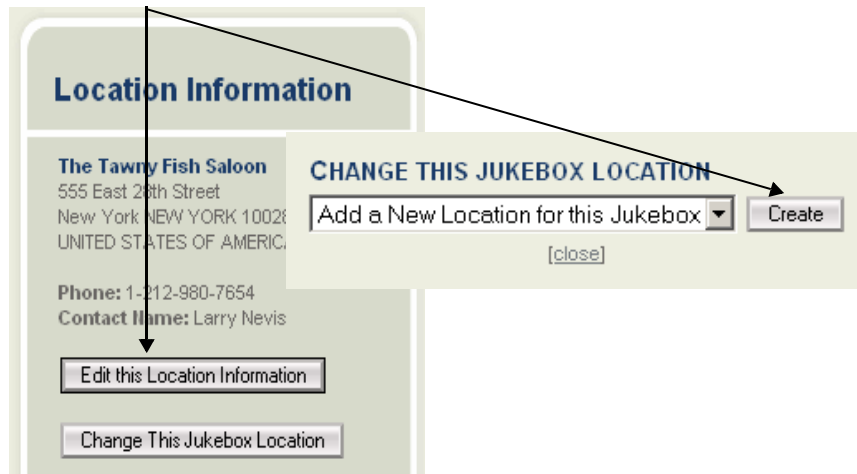

 - If the jukebox is in your warehouse and is not currently assigned to a location, click **Add New Location**.

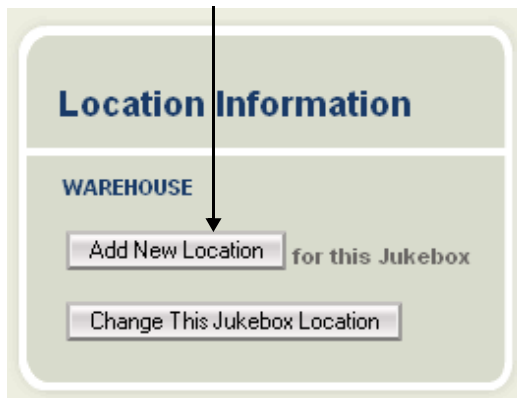

The Create Location page appears. This page is divided between the **Location Profile** and **Help** areas:

Locations List > Create Location

Public Profile
 * fields are mandatory

Public Name * Jerry's Bar and Grill

Location Type * Business/Retail

Public Description Best Grill in Town

Location Address * 462
 West End Street
 Brampton

City * Brampton

Province * NEWFOUNDLAND

Country * CANADA

Zip Code * T6r %r\$

Verify the address on Google Maps.

Phone Number * 414-555-8989

Location * ☒ Private ☐ Public

The above information will be available to end users and will appear on the mytouchtunes.com website providing Public has been selected.

Private Information
 The information below will not be publicized.

Location Internal Name Jerry's Bar and Grill
 Used on Dashboard, and on invoices.

Contact Name Jerry Liu

Preferred Language English

Fax Number 414-555-8989

By submitting this information, you certify that, to the best of your knowledge, it is accurate and truthful. You further acknowledge that the Public Profile data submitted here will be made available to the public unless the Private option is selected above.

Help

This screen allows you to create a new location description for a TouchTunes jukebox.
 To change a jukebox's location, use My Jukeboxes > Location page.

GET YOUR SPOT ON THE MAP!

Get more people in your locations.
 How? It's easy...

Step 1
 Fill out the form on the left. Click to verify your address is recognized by Google Maps.

Step 2
 Make it PUBLIC.

Users of mytouchtunes.com will know where to find your locations. It's that easy.

Get your Spot on the Map.

Thank You...
 for helping us collect and verify the information we need to launch mySpots on mytouchtunes.com. We will notify you prior to the mySpots launch so that you will know when you can login to mytouchtunes.com and see your locations on the map.

RSVP YOUR SPOT ON THE MAP TODAY!

Figure 7 Creating a new Location in Dashboard

The **Public Profile** area is used to record contact information for the establishment, while the **Private Profile** area is used to record information about the clientele of the establishment.

4. In the **Public Profile** area, enter the following information for the location in the fields indicated:

- The name of the location. *
- The location type (from the drop-down menu).*
- A brief description of the place of business
- The street address of the location, including suite number if necessary.
- The city and state, province or territory where the establishment is located. *

- The zip code or postal code of the location. *
- The business phone and fax number for the location. *
- Location (Public or Private)

Note: Asterisks (*) indicate required fields. If you are unable to modify the **Private/Public** setting, you may have the **Keep all locations private** set on the **My Info | Corporate Profile** page.

5. In the **Private Profile** area, enter the following information for the location in the fields indicated:

- The location's internal name
- The name of a contact
- The preferred language for the contact person, in case TouchTunes needs to contact them directly, such as when providing technical support (English/French/Spanish).
- The fax number for the contact

Note: The information you enter in the Private Profile area will never be made public.

Locations List > Create Location

Public Profile
* fields are mandatory

Public Name *

Location Type * Choose the location type ▼

Public Description

Location Address *

City *

State * Choose the State/Prov ▼

Country * USA ▼

Zip Code *

[Verify the address on Google Maps.](#)

Phone Number *

Location * ☒ Private ☐ Public

The above information will be available to end users and will appear on the mytouchtunes.com website providing Public has been selected.

Figure 8 Location Profile area completed for new location

Note: You cannot modify the **Country** field for a location. If this field is incorrect, contact TouchTunes Technical Support.

Next, enter demographic information for the location in the **Private Profile** area.

The location is added to the Dashboard. The Jukebox Manager page reappears, showing that the jukebox is associated with the new location.

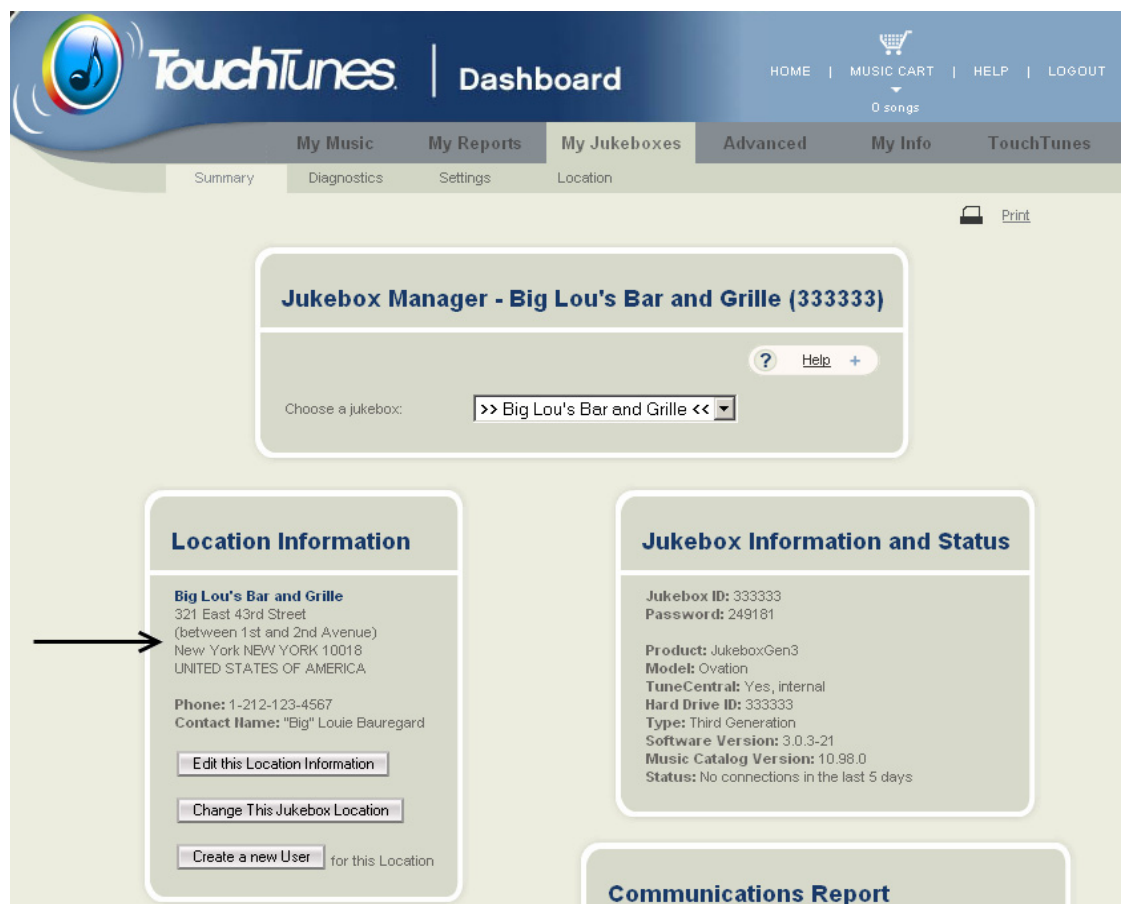 


Figure 9 Jukebox associated with its new location

Moving a Jukebox to a Location in the TouchTunes Dashboard

How do I move a jukebox to a different location in the TouchTunes Dashboard?

You can associate (or move) any jukebox to any location in the TouchTunes Dashboard. When you associate a jukebox with a location in the Dashboard, you can monitor jukebox activity (such as revenue or plays) for that location.

Moving a jukebox in the TouchTunes Dashboard has no effect on where the jukebox is physically located. For example, assume a new bar across town agrees to use one of your jukeboxes. Although you move the jukebox to the new location in the TouchTunes Dashboard, the physical jukebox remains in your warehouse. You (or the bar owner) must arrange for the physical transport of this jukebox to the bar.

To move a jukebox from one location to another:

1. In the TouchTunes Dashboard, choose **My Jukeboxes | Summary**.
2. From the **Choose a Jukebox** list, select the jukebox you want to move.
The current location of the selected jukebox appears in the **Location Information** area. You use the controls in this area to move the jukebox, edit the location information or create a new sub-user for this location.

Tip: You can also display the Jukebox Manager page for a particular jukebox by clicking the name of the jukebox on the Jukeboxes Route Report page that appears when you choose **My Reports | Summary**.
3. In the **Location Information** area, click **Change this Jukebox Location**.

Location Information

Big Lou's Bar and Grille
321 East 43rd Street
(between 1st and 2nd Avenue)
New York NEW YORK 10018
UNITED STATES OF AMERICA

Phone: 1-212-123-4567
Contact Name: "Big" Louie Bauregard

Edit this Location Information

Change This Jukebox Location

Create a new User for this Location

The Change this Jukebox Location window appears, showing all locations currently entered in the Dashboard.

4. Select the new location for the jukebox from the list and then click **Move**.

CHANGE THIS JUKEBOX LOCATION

The Tawny Fish Saloon ▼

Move

[close]

The jukebox is moved. Its new location appears in the **Location Information** area of the Jukebox Manager page.

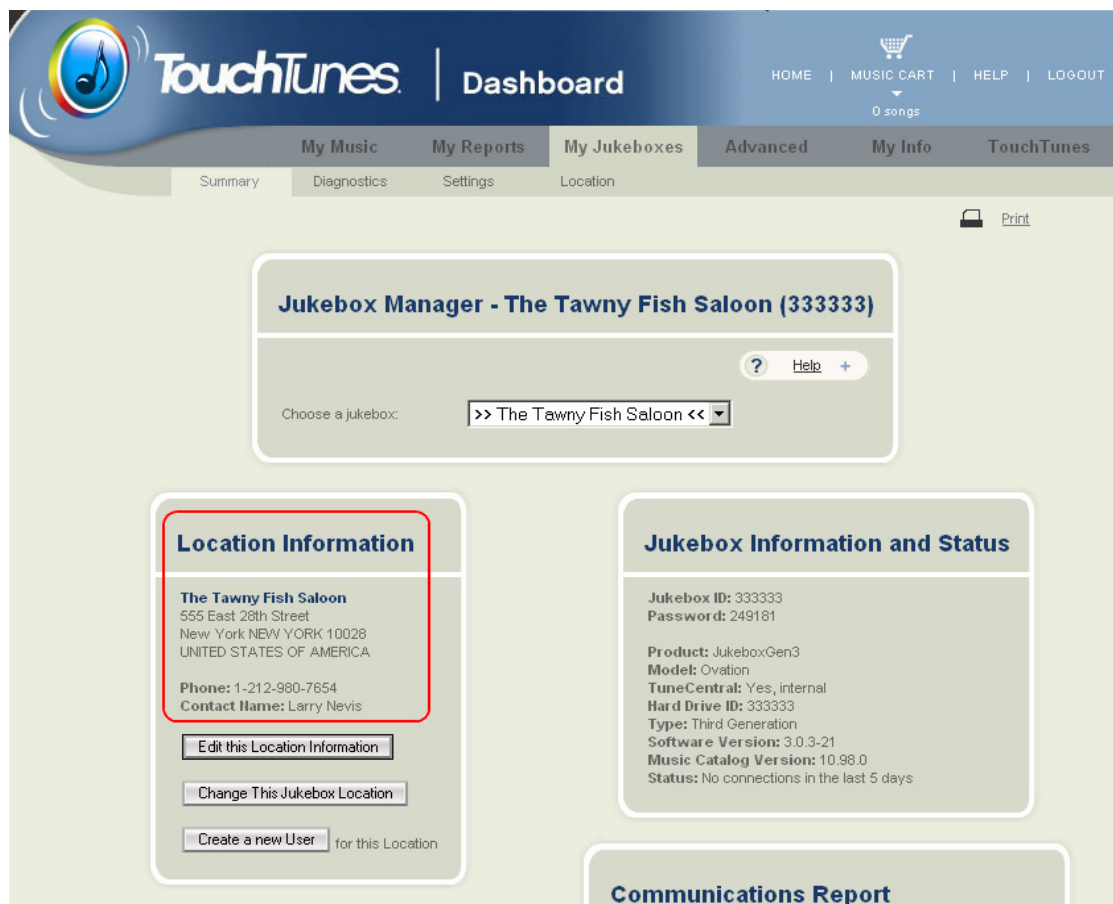 


Figure 10 Jukebox Manager page showing new location of the jukebox

Modifying Location Details in the TouchTunes Dashboard

How do I change a location's name or contact information in the TouchTunes Dashboard?

You can modify the details for a location in the TouchTunes Dashboard to track location-related changes, such as when a restaurant moves or changes its name. You also do this to add or update demographic information for a location to track changes in its clientele.

The following procedure explains how you modify the details for an existing location in the Dashboard. You cannot use this procedure to move an existing jukebox to a brand new location. To move a jukebox to a new location, first set up the new location for the jukebox in the Dashboard using the procedures in "Adding a Location to the TouchTunes Dashboard" on page 40, and then move it to this new location using the procedures in "Moving a Jukebox to a Location in the TouchTunes Dashboard" on page 44.

To modify the details for a location:

1. Choose **My Jukeboxes | Summary**, select the jukebox associated with the location you want to edit from the list, and then click **Edit this Location Information** on the Jukebox Manager page that appears.
2. Change the details for the location on the Modify Location page, then click **Confirm and Agree** at the bottom.,

Locations List > Modify Location

Public Profile
* fields are mandatory

Public Name * Jerry's Bar and Grill

Location Type * Business/Retail

Public Description Best Grill in Town

Location Address * 462
West End Street
Brampton
City * Brampton
Province * NEWFOUNDLAND
Country * CANADA
Zip Code * T6r %r\$
[Verify the address on Google Maps.](#)

Phone Number * 414-555-8989

Location * ☒ Private ☐ Public
The above information will be available to end users and will appear on the [mytouchtunes.com](#) website providing Public has been selected.

Private Information
The information below will not be publicized.

Location Internal Name Jerry's Bar and Grill
Used on Dashboard, and on invoices.

Contact Name Jerry Liu

Preferred Language English

Fax Number 414-555-8989

By submitting this information, you certify that, to the best of your knowledge, it is accurate and truthful. You further acknowledge that the Public Profile data submitted here will be made available to the public unless the Private option is selected above.

Confirm and Agree

Help

This screen allows you to create a new location description for a TouchTunes jukebox.
To change a jukebox's location, use [My Jukeboxes > Location](#) page.

GET YOUR SPOT ON THE MAP!

Get more people in your locations.
How? It's easy...

Step 1
Fill out the form on the left. Click to verify your address is recognized by Google Maps.

Step 2
Make it PUBLIC.

Users of [mytouchtunes.com](#) will know where to find your locations. **It's that easy.**

Get your Spot on the Map.

Thank You...
for helping us collect and verify the information we need to launch mySpots on mytouchtunes.com. We will notify you prior to the mySpots launch so that you will know when you can login to mytouchtunes.com and see your

Figure 11 Modify Location page

Modifying the Public and Private Details in the TouchTunes Dashboard

How do I allow my jukeboxes to be found more easily by potential customers?

Making the location of your jukeboxes public lets **myTouchTunes.com** users find your location easily with the upcoming *mySpots* feature. When you indicate on the Dashboard that you would like to make the location of your jukeboxes public, your location is added to the myTouchTunes database. Then, through Google Maps™ functionality, the myTouchTunes Web page overlays indicators on the *mySpots* map to let potential customers know where they can find your place of business.

1. In the Dashboard, choose **My Jukeboxes | Summary**.
The Jukebox Manager page appears. You use the **Location Information** area on this page to add or modify the location for a jukebox.
2. Click **Edit this Location Information**.

3. Change the setting from **Private** to **Public**, or vice versa, and click **Confirm and Agree**.

Jukebox Location > Modify Location

Public Profile

* fields are mandatory

Public Name * George's Bar & Grill

Location Type * Business/Retail

Public Description

Location Address * 60 Elm Road

City * San Dimas

State * CALIFORNIA

Country * USA

Zip Code * 90416

Verify the address on Google Maps.

Phone Number * 214-555-3542 #975

Location * ☒ Private ☐ Public

The above information will be available to end users and will appear on the mytouchtunes.com website providing Public has been selected.

Figure 12 Make your jukeboxes public from the Dashboard and put your locations on the map

Note: If you are unable to modify this setting, you may have the **Keep all locations private** set on the **My Info | Corporate Profile** page.

6

Locating Music and Sending it to Jukeboxes Using the Dashboard

This chapter explains how to use the TouchTunes Dashboard to search for new music, manage music selections and download music to jukeboxes or USB devices.

Contents

<i>Overview</i>	<i>49</i>
<i>Searching for Music using Keywords</i>	<i>50</i>
<i>Staying Informed</i>	<i>54</i>
<i>Searching for Music by Song or Album ID Number</i>	<i>55</i>
<i>Adding Songs from Compiled Lists</i>	<i>58</i>
<i>Identifying New Music Added to the TouchTunes Music Library</i>	<i>61</i>
<i>Requesting Music from TouchTunes</i>	<i>63</i>
<i>Adding Music for Jukeboxes to the Music Cart</i>	<i>65</i>
<i>Downloading Music from the Music Cart to a Jukebox</i>	<i>67</i>
<i>Transferring Pending Music and Software to a USB Device</i>	<i>70</i>
<i>Updating a Jukebox on Location with the USB Content Updater</i>	<i>76</i>
<i>Reviewing Music Transfers</i>	<i>78</i>

Overview

You can use the TouchTunes Dashboard to help you search for and download music to any of your jukeboxes from the TouchTunes music library. Using the Dashboard centralizes all of the following music search and transfer functions in a single tool that you can access at any time:

- Search for music using the song title, album name, artist name or TouchTunes ID number

- View various music lists compiled by TouchTunes or one of its partners, such as Billboard Magazine.
- Request music to be added to the TouchTunes music library.
- Store music to be downloaded to your jukeboxes.
- Initiate and review music downloads to your jukeboxes.

In this chapter, you will be able to answer the following questions:

- “How do I use the TouchTunes Dashboard to search for music by song title, album name or artist?” (p. 50)
- “Can I find music in the TouchTunes library by song or album ID using the TouchTunes Dashboard?” (p. 55)
- “How do I add songs from compiled lists, such as Sylvie’s Picks or Billboard’s Top 100, using the TouchTunes Dashboard?” (p. 58)
- “How do I use the TouchTunes Dashboard to find songs that were recently added to the TouchTunes library?” (p. 61)
- “Can I use the TouchTunes Dashboard to request music that is not in the TouchTunes library?” (p. 63)
- “What is the Music Cart? How do I move songs from a music search or a pre-compiled list in the TouchTunes Dashboard to the Music Cart?” (p. 65)
- “How do I use the TouchTunes Dashboard to download music to my jukeboxes?” (p. 67)
- “How can I tell which songs have recently been downloaded to, or are pending download to a jukebox through the TouchTunes Dashboard?” (p. 78)

Searching for Music using Keywords

How do I use the TouchTunes Dashboard to search for music by song title, album name or artist?

You can search the TouchTunes music library for a song, album or artist by supplying one or more words (called *keywords*) from its name. Searching for music by keyword is the easiest way to find songs in the TouchTunes music library.

To search for music by keyword:

1. In the TouchTunes Dashboard, go to the **Music Portal** page.
2. In the **Quick Search** area, type in your keyword to search for a song, album or artist and choose the type of search to be run based on your keyword, such as a song title, album, artist

or ID.

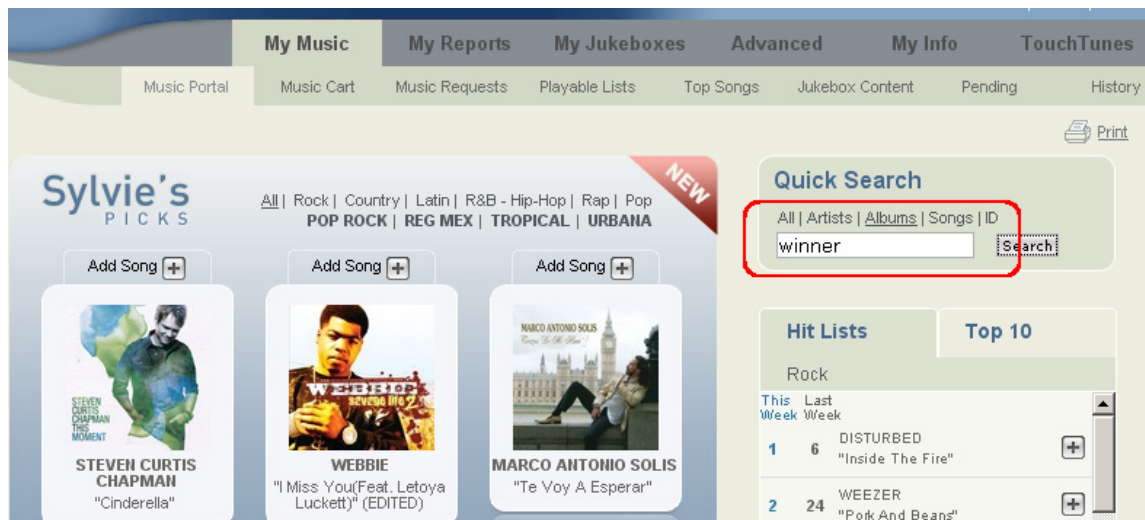 


Figure 7 Music Portal page

The Search for Music page appears with your results.

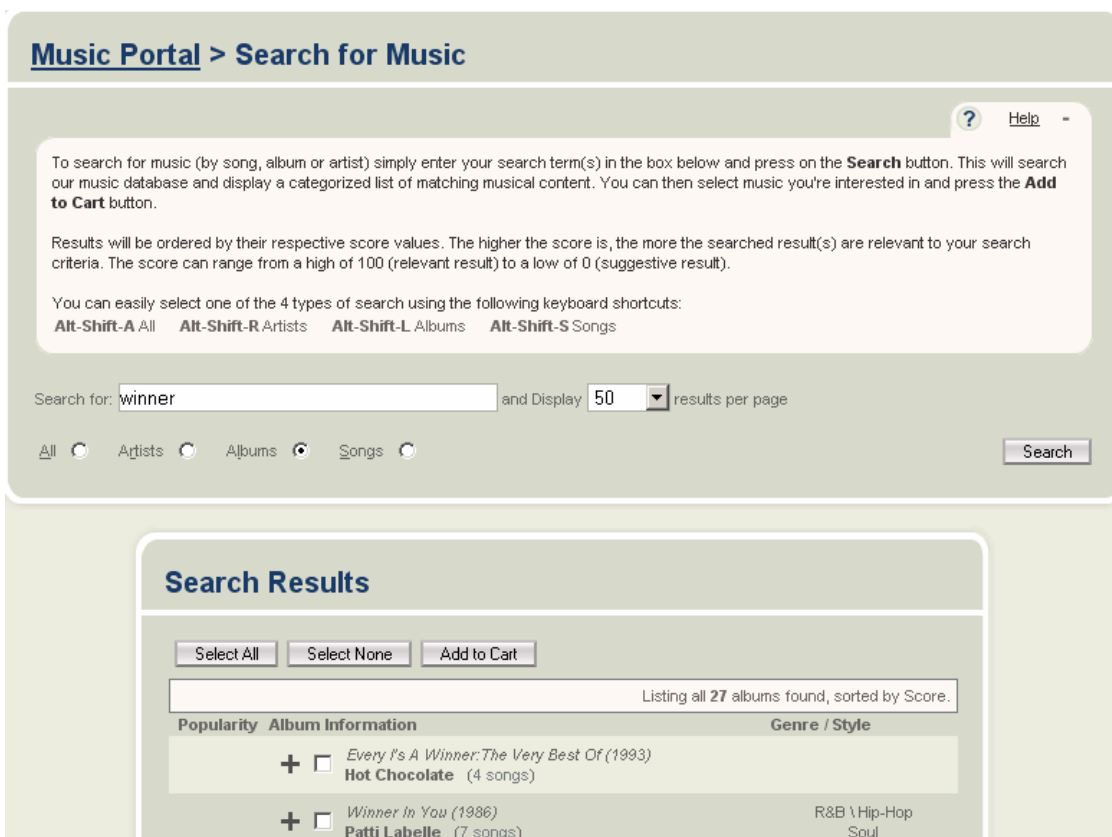 


Figure 8 Search for Music page

- From the **Search for Music** page, you can refine your Quick Search by limiting the number of results, or perform a new search.

To start a new search from the Search for Music page:

- Enter the keyword(s) for the music you are looking for in the **Search For** field.
- Choose the type of search to be run using the keyword, such as a song title or artist name search.
- (Optional) Set the number of matching search results to be displayed in the Dashboard.

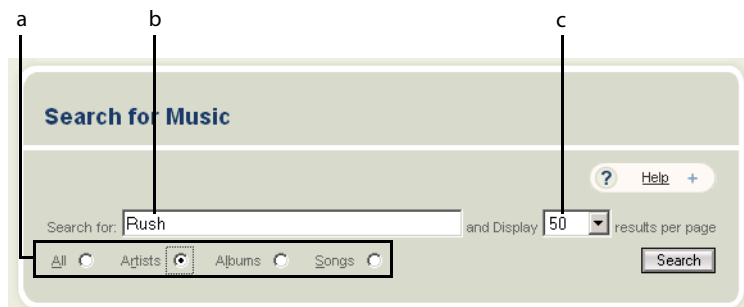 


Figure 9 a. Keyword search type b. Search For field c. Search result display control

Tip: You can use a keyboard shortcut to quickly select the type of keyword search. Press **Alt+Shift+R** to search artists, **Alt+Shift+S** to search song titles, **Alt+Shift+L** to search album names and **Alt+Shift+A** to search artist, song and album names.

1. Click **Search**.

The Dashboard searches the TouchTunes music library and displays matches for the keyword in the **Search Results** area.

Search Results

Your search found 103 items grouped in 3 categories. Click on a link below to view a category.

View results for: 11 artists | [16 albums](#) | [76 songs](#)

Displaying artists ...

Select All Select None Add to Cart

Listing artists 1 - 5 of 11, sorted by Score.

Page: [First] [Previous] 1, 2, 3 [Next] [Last]

Score		Artist Information	Genre / Style
100	+ <input type="checkbox"/>	Rush (24 albums)	
91	+ <input type="checkbox"/>	Frank Marino & Mahogany Rush (1 album)	
91	+ <input type="checkbox"/>	Otis Rush (2 albums)	
91	+ <input type="checkbox"/>	Bobby Rush (2 albums)	
91	+ <input type="checkbox"/>	Tom Rush (1 album)	

Listing artists 1 - 5 of 11, sorted by Score.

Page: [First] [Previous] 1, 2, 3 [Next] [Last]

Export: [CSV](#) | [Excel](#) | [XML](#) | [PDF](#)

Select All Select None Add to Cart

Figure 10 Search Results area

Note the following about keyword searches and their search results:

- Keyword searches look for matches that either sound (or are spelled) like the search term. The closeness of the match is reflected in the score assigned to each search result. In the example above, the group Rush receives the maximum score of 100 because it is a perfect match to the search term “rush”. Artists with the search term in their names (such as Otis Rush) or who have similar sounding names (such as Lush or Russ Ballard) earn lower scores.
- The Dashboard provides search results for artist, album and song title for every keyword search, even if you only specified one of these types. Each set of results is independent, meaning search results for song titles containing “rush” are independent of search results with artist or album names containing the same term.
- The keyword that you entered in step 2 remains in the **Search For** field in case you want to refine your search.

2. (Optional) Use the controls in the **View Results For** area to view other songs, artist or albums found by the search.



Figure 11 a. View Results For area

3. Browse through the search results to find music for your jukebox(es):
 - Click + (plus sign) to expand an album or artist and show its associated music in the **Search Results** area.
 - Click - (minus sign) to hide the music associated with an artist or album in the **Search Results** area.

Score	Artist Information	Genre / Style
100	<input type="checkbox"/> Rush (24 albums)	
	<input checked="" type="checkbox"/> All Albums (226 songs)	
	<input type="checkbox"/> 2112 (6 songs)	Rock Progressive Rock
	<input type="checkbox"/> 2112 (53462601)	Rock Progressive Rock
	<input type="checkbox"/> A Passage To Bangkok (53462602)	Rock Progressive Rock
	<input type="checkbox"/> Lessons (53462604)	Rock Progressive Rock
	<input type="checkbox"/> Something For Nothing (53462606)	Rock Progressive Rock
	<input type="checkbox"/> Tears (53462605)	Rock Progressive Rock
	<input type="checkbox"/> The Twilight Zone (53462603)	Rock Progressive Rock
	<input checked="" type="checkbox"/> A Farewell To Kings (6 songs)	Rock Hard Rock

Figure 12 Album and songs associated with an artist expanded in Search Results area

4. (Optional) Export the search results from the TouchTunes Dashboard to any of the file formats listed at the bottom of the **Search Results** area.
5. Once you have found the music you were looking for, add it to the Music Cart so you can download it to your jukeboxes. See “Adding Music for Jukeboxes to the Music Cart” on page 65.

Staying Informed

How do I use the Dashboard to see what is going on in the music industry?

The Music Portal page has several areas to keep you informed of the goings-on in the music industry.

- **Hit Lists** and **Top 10** keep you up to date with the most popular songs on TouchTunes jukeboxes, including a song's position from the previous week.
- **Big Buzz** keeps you in the loop with the happenings of the music industry.
- The **Upcoming New Releases** area alerts you to upcoming release dates for music that will be soon be available for your jukeboxes.

The screenshot displays the TouchTunes Music Portal interface. On the left, the 'Hit Lists' and 'Top 10' sections are visible. The 'Hit Lists' section shows a table of songs with columns for 'This Week' and 'Last Week'. The 'Top 10' section shows a list of songs with their positions. The 'BIG Buzz' section features a featured song by Depeche Mode. The 'Upcoming New Releases' section lists upcoming releases with columns for 'Artist' and 'Release Date'.

	This Week	Last Week	Song	
1	6		DISTURBED "Inside The Fire"	+
2	24		WEEZER "Pork And Beans"	+
3	1		3 DOORS DOWN "It's Not My Time"	+
4	2		SEETHER "Rise Above This" (EDITED)	+
5	4		THEORY OF A DEADMAN "So Happy" (EDITED)	+

Position	Song
1	PUDDLE OF MUDD

Country
Latin
R&B/Hip-Hop
Rap
Top40

BIG Buzz

Depeche Mode - "Wrong"

Groundbreaking, chart-topping legends Depeche Mode proudly present their brand new single: "Wrong". Still dark, still electric, still edgy. Featuring retro-futuristic arrangements conjured up with vintage gear, this is their most dazzling and diverse album in decades. Enjoy this week's pick and sample the makings of timeless classic from the eagerly anticipated album "Sounds Of The Universe".

Upcoming New Releases

Artist	Release Date
RON BROWZ Jumping Out Da Window	Mar 17, 2009
STATIC-X Cult Of Static	Mar 17, 2009
PET SHOP BOYS Yes	Mar 24, 2009
RAY J For The Love Of	Mar 24, 2009

Figure 13 The Hit Lists, Top 10, BIG Buzz and Upcoming New Releases areas of the Music Portal keep you informed

Searching for Music by Song or Album ID Number

Can I find music in the TouchTunes library by song or album ID using the TouchTunes Dashboard?

You can use the TouchTunes Dashboard to search for songs or albums using the ID numbers used to identify all music in the TouchTunes music library. You can usually find a song's ID number beside its title whenever a list of songs appears in the Dashboard, such as in keyword search results, pre-compiled music lists or jukebox content lists. This type of search can be much faster than a keyword search, but you need to ensure that the ID numbers for your songs and/or albums are correct or you may end up with unwanted music in your search results.

To search for music by ID:

1. In the TouchTunes Dashboard, choose **My Music | Search by ID**.

The Search by ID page appears. You use this page to search for a song or album by its ID number.

Music Portal > Search by ID

?

Help

To add songs to your Music Cart, enter the songs ID in the text area below then press the **Search** button.
You can also search for albums ID using the radio button next to the **Search** button.
Separate the song IDs using commas, spaces or line-feeds.
Select the songs to add to cart and press the **Add to Cart** button.

Can't find it in our catalog? Our music department is always looking to please you; if you can't find a song, an album or an artist, please [contact TouchTunes' music department](#) and send us your request.

69393103
78372311
78275204

Songs ☒ Albums ☐ **Search**

Figure 14 Search by ID page

2. Select the type of search (for songs IDs or for albums IDs) using the controls in the area at the bottom of the page.

You must select the type of ID search as the Dashboard will remove the IDs of the songs (or albums) that do not correspond to the selected search type. If you have song IDs and album IDs, a separate search for each type of ID number is required.

3. In the field provided, enter the song or album ID numbers for either the songs or the albums you want to find, separated by any of the following:
 - Space
 - Comma

- Line break (each ID appears on a new line)

Figure 15 Song IDs entered for search

4. Click **Search**.

The Dashboard searches the TouchTunes music library for the songs or albums matching the ID numbers you entered, and displays its results in the **Search Results** area.

Search Results

Your search found 132 items grouped in 3 categories. Click on a link below to view a category.

View results for: [5 artists](#) | [27 albums](#) | [100 songs](#)

Displaying albums ...

Select All Select None Add to Cart

Listing all 27 albums found, sorted by Score.

Popularity	Album Information	Genre / Style
+ <input type="checkbox"/>	Every I's A Winner: The Very Best Of (1993) Hot Chocolate (4 songs)	
+ <input type="checkbox"/>	Winner In You (1986) Patti Labelle (7 songs)	R&B \ Hip-Hop Soul
+ <input type="checkbox"/>	Walking Away A Winner (1994) Kathy Mattea (9 songs)	Country
+ <input type="checkbox"/>	50th Annual Grammy Winners (2008) 50th Annual Grammy Winners (20 songs)	
+ <input type="checkbox"/>	2007 American Music Awards Winners 2007 American Music Award Winners (36 songs)	
+ <input type="checkbox"/>	2007 Country Music Awards Winners 2007 Country Music Awards Winners (27 songs)	Country

Figure 16 Result set for song IDs entered in Search by ID area

Note the following about ID searches and their search results:

- All songs or albums in the **Search Results** area are automatically selected so you can add them to the Music Cart. You can deselect any songs in this area to stop it from being added to the Music Cart and downloaded to a jukebox. For example, you may deselect a song from

the **Search Results** area if a location inadvertently requested an explicit version of a song rather than the edited version.

- Songs or albums in the **Search Results** area are sorted in ascending order by their ID number. You cannot reorder this list.
 - The ID numbers for songs in the result set also remain visible in the field above the **Search Results** area in case you want to add to your search.
5. (Optional) Check that the songs or albums in the **Search Results** area match the titles you expected to find.
By double-checking the search results against your list of music, you can identify any music that was either included with the search results or removed entirely from the search because of an incorrect song or album ID.
 6. (Optional) Export the search results from the TouchTunes Dashboard to any of the following file formats listed at the bottom of the **Search Results** area.
 7. Once you have found the music you were looking for, add it to the Music Cart so you can download it to your jukeboxes. See “Adding Music for Jukeboxes to the Music Cart” on page 65.

Adding Songs from Compiled Lists

How do I add songs from compiled lists, such as Sylvie's Picks or Billboard's Top 100, using the TouchTunes Dashboard?

You can use the TouchTunes Dashboard to quickly add songs from compiled lists, or entire lists to your music cart. These lists include Sylvie's Picks —current and upcoming hits compiled by TouchTunes' own in-house music expert, as well as lists from Billboard.

To view and add music from a compiled music list:

1. In the TouchTunes Dashboard, choose **My Music | Music Portal**

The TouchTunes **Music Portal** page appears. The Music Portal page contains links to many compiled song lists.

Figure 17 The Music Portal's many compiled song lists (indicated in red for illustrative purposes)


The following table shows the compiled music lists available in the TouchTunes Dashboard.

List:	List Description:
Sylvie's Picks	Current and upcoming hits chosen by the TouchTunes in-house music expert, Sylvie. By clicking a Sylvie's Pick, you can easily add a recommended song, the entire album that contains the song or find other songs from the same artist on different albums.

List:	List Description:
Hit Lists	Billboard Top 25 music list for various music styles, such as Rock or Pop as well as the Billboard Top 40 list.
Special Features - Billboard Charts	Music on the Billboard Top 100 and Top 25 lists for certain music styles.
Special Features - Themes	List for different themed events, such as hits from the 1980's or 90's.
2008 New Albums	Albums released in the current year.
Latest Additions to our Catalog	All the current, back-catalog and classic songs that are new to the catalog.
New Since Last Catalog	The latest songs available since the last catalog release.
Top 100	List of the most played songs on all TouchTunes jukeboxes for various music styles, such as Rock or Latin.
Local Bands	Music lists of local talent.
Stock Hard Drives	The music mix included on each of the stock hard drives provided by TouchTunes.

2. Select the compiled music list that you are interested in using the lists on the Music portal page.

 In this example, a compiled list from Billboard is selected.

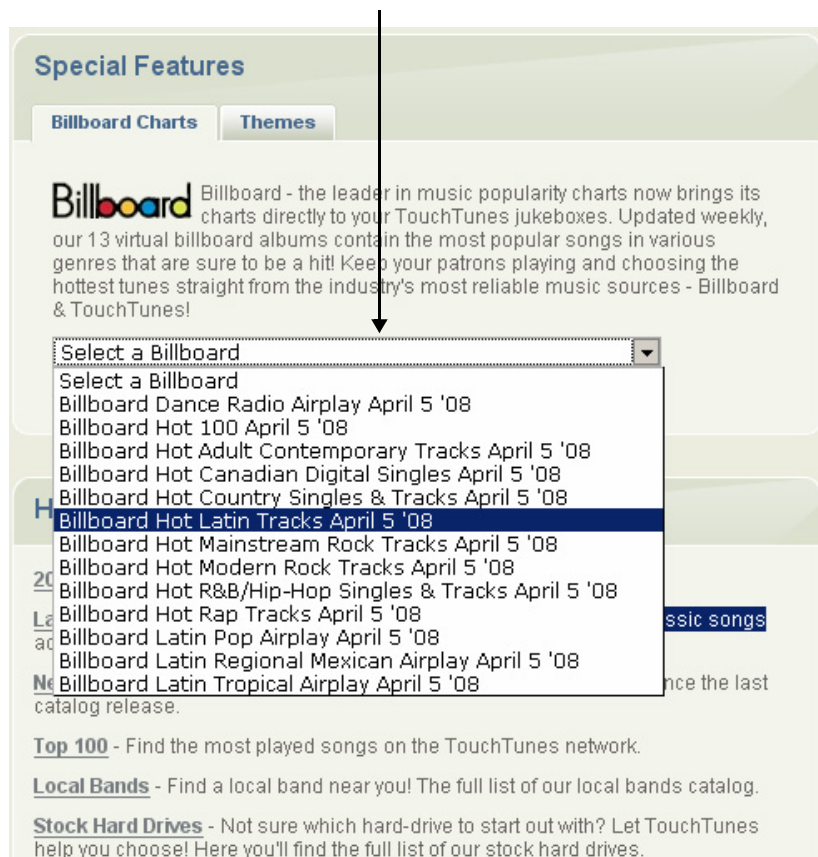

A page showing the contents of the music list opens. You can use the **Show a Different Hot List** drop-down menu to choose another compiled music list.

Music Portal > Billboard Charts - Billboard Hot Latin Tracks April 5 '08

Show a different Hot List
 [Select another Hot List]

or go to the Music Portal.

Rank	Last Week	Song (Song ID) Artist, Album (Year)
1	3	<input type="checkbox"/> Te Quiero (63052901) Flex , <i>Billboard Hot Latin Tracks April 5 '08</i>
2	2	<input type="checkbox"/> Gotas De Agua Dulce (63052902) Juanes , <i>Billboard Hot Latin Tracks April 5 '08</i>
3	1	<input type="checkbox"/> Donde Estan Corazon (63052903) Enrique Iglesias , <i>Billboard Hot Latin Tracks April 5 '08</i>
4	4	<input type="checkbox"/> Sobre Mis Pies (63052904) La Arrolladora Banda El Limon De Rene Camacho , <i>Billboard Hot Latin Tracks April 5 '08</i>
5	5	<input type="checkbox"/> Te Llore (63052905) Conjunto Primavera , <i>Billboard Hot Latin Tracks April 5 '08</i>
6	6	<input type="checkbox"/> Estos Celos (63052906) Vicente Fernandez , <i>Billboard Hot Latin Tracks April 5 '08</i>
7	8	<input type="checkbox"/> El Perdedor (63052907) Aventura , <i>Billboard Hot Latin Tracks April 5 '08</i>
8	9	<input type="checkbox"/> Me Enamora (63052908) Juanes , <i>Billboard Hot Latin Tracks April 5 '08</i>
9	7	<input type="checkbox"/> Cierra Los Ojos (Aka Si Te Agarran Las Ganas) (63052909)

Figure 18 Billboard Hot Latin Tracks April 5 '08

- Browse through the music list to find music for your jukebox(es):
 - Click + (plus sign) to expand an album or artist in the list and show its associated music.
 - Click - (minus sign) to hide the music associated with an artist or album in the list.
- Once you have found the music you were looking for, add it to the Music Cart so you can transfer it to your jukeboxes. See "Adding Music for Jukeboxes to the Music Cart" on page 65.

Identifying New Music Added to the TouchTunes Music Library

How do I use the TouchTunes Dashboard to find songs that were recently added to the TouchTunes library?

TouchTunes is always adding new songs and albums to its music library. You can use the TouchTunes Dashboard to view a list of the latest music added to the library so you can keep your jukeboxes stocked with the most recent songs.

Tip: You can also access a complete content list for the music library, as well as updated lists of new releases in Adobe PDF format from the TouchTunes website.

To identify new music added to the TouchTunes music library:

- In the TouchTunes Dashboard, choose **My Music | Music Portal**.

The Hot Lists area at the bottom of the Music Portal page contains several lists of songs that have been recently added to the TouchTunes music catalog.

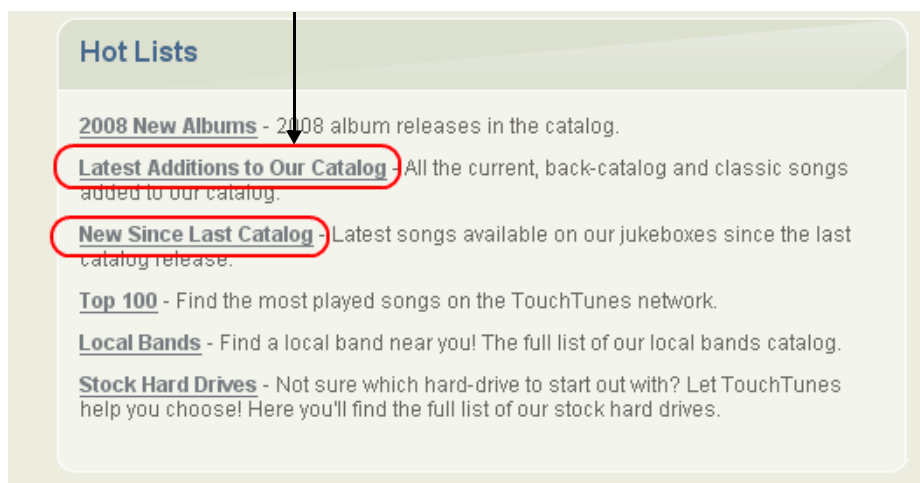


Figure 19 TouchTunes Hot Lists area on the Music Portal

A list of the latest new releases added to the TouchTunes music catalog appears.

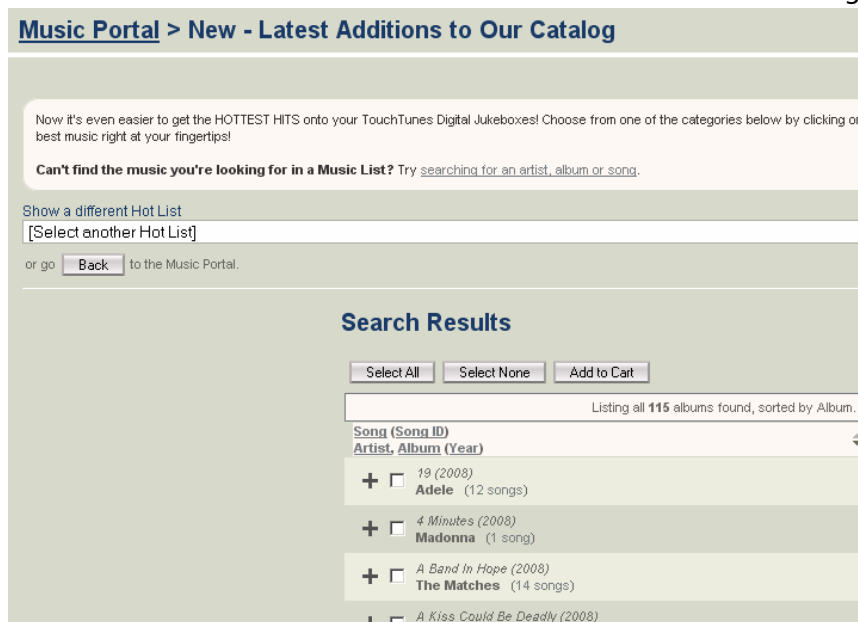 


Figure 20 List of new music added to the TouchTunes music library

2. Once you have found the music you were looking for, add it to the Music Cart so you can transfer it to your jukeboxes. See "Adding Music for Jukeboxes to the Music Cart" on page 65.

Requesting Music from TouchTunes

Can I use the TouchTunes Dashboard to request music that is not in the TouchTunes library?

TouchTunes is always interested in receiving your suggestions to help build and improve its music library. You can use the Dashboard to send your music requests directly to the TouchTunes music department. Once you submit a music request, you receive an e-mail from TouchTunes indicating the status and result of your request. You can also use the Dashboard to monitor music requests.

- To submit a music request, see “To request music from TouchTunes:” on page 63.
- To monitor the status of submitted requests, see “To check the status of your music requests:” on page 64.

To request music from TouchTunes:

1. In the TouchTunes Dashboard, choose **TouchTunes | Contacts**. The **Contact TouchTunes** page opens.
2. Click the Contact the Music Department link.
3. In the **Company's Contact Information** area, check that the contact information for your company is correct.
You can also add the contact details for an alternate person in your company (such as your jukebox music manager) if you want TouchTunes to contact them about this music request instead.
4. If necessary, fill in the required details for the alternate contact person in the **Other Contact Information...** area.
Next, fill in the details for your music requests in the **Request** area. You use this area to list the songs, albums or artists that you want added to the TouchTunes music library.
5. Do the following in the **Your Request** area:
 - Use the list to indicate whether the music you are requesting is a song, an album or an artist.
 - Enter the name of the song, artist or album in the field provided.

Figure 21 a) List for setting type of music requested b) Field for entering name of song, artist or album requested

6. To create additional music requests, click **Add Another Music Request** and then repeat the previous step until all of your music requests appear in the **Requests** area.
7. Click **Send** to submit your request(s).
The Dashboard confirms that your music request is sent to the TouchTunes music department. You receive an e-mail from TouchTunes indicating the status and result of your request.

To check the status of your music requests:

1. In the TouchTunes Dashboard, choose **My Music| Music Requests**.

Your Music Requests page appears, showing all of your current and past music requests with their status.



The screenshot shows the 'Your Music Requests' page in the TouchTunes dashboard. The page has a navigation bar at the top with tabs for 'My Music', 'My Reports', 'My Jukeboxes', 'Advanced', 'My Info', and 'TouchTunes'. Under 'My Music', there are sub-tabs for 'Music Portal', 'Music Cart', 'Music Requests', 'Playable Lists', 'Top Songs', 'Jukebox Content', 'Pending', and 'History'. The 'Music Requests' tab is selected. Below the navigation bar, there is a 'Print' button. The main content area is titled 'Your Music Requests' and contains a message box explaining the page's purpose and a 'New Music Request' button. Below this is a table of music requests.

Date Added	Request	Status
March 16, 2008	Album: Teenage Mutant Ninja Turtles: The Original Motion Picture So	Completed
March 16, 2008	Artist: Mo Thugs Family	Completed
March 16, 2008	Album: The Simpson's Sing The Blues	Completed
March 7, 2008	Artist: Eagles	Completed
February 20, 2008	Artist: Kid Rock	Completed
February 7, 2008	Artist: Datarock	Completed
January 8, 2008	Song: Bankhead, by T.I. on the King album	Completed

Figure 22 Your Music Requests page

The status column shows the current state of your music requests:


- New requests have not been reviewed by the TouchTunes music department.
- Pending requests are being reviewed by the TouchTunes music department.
- Completed requests have been reviewed by the TouchTunes music department.

You can check on any completed request to see if the requested music was added to the TouchTunes music library.

2. (Optional) Click a completed request in the list to view its results.

A page appears, showing the result of your music request. If music you requested was added to the TouchTunes music library, it appears in the **Music Added** area so you can transfer it to your jukeboxes.

 Figure 23

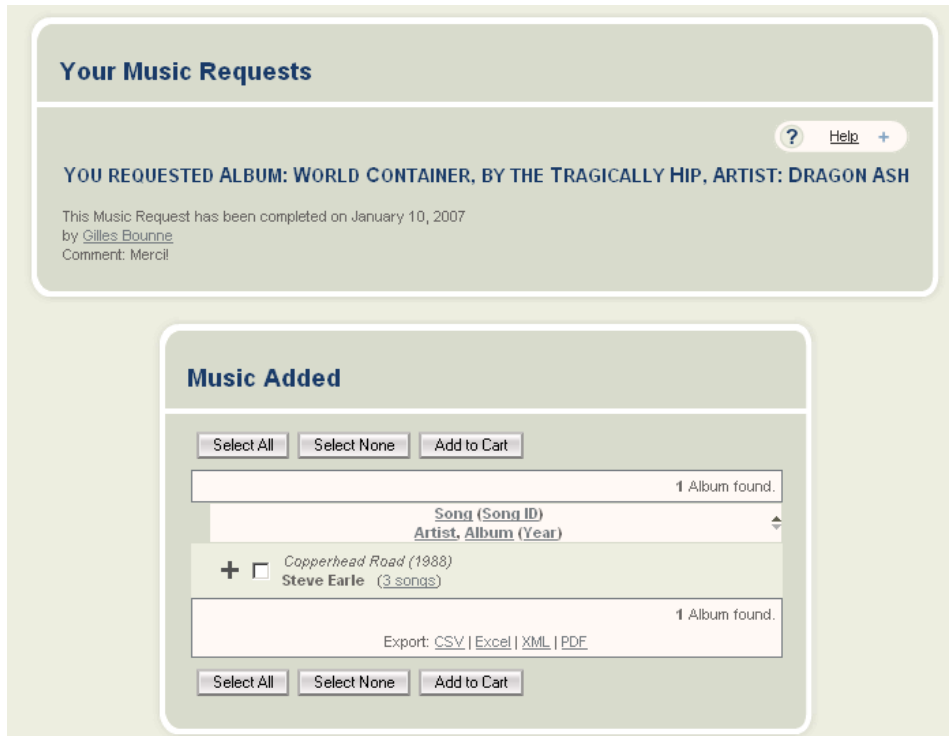

3. (Optional) Export the search results from music request to any of the file formats listed at the bottom of the **Music Added** area.
4. Add the requested music to the Music Cart so you can transfer it to your jukeboxes. See “Adding Music for Jukeboxes to the Music Cart” on page 65.

Adding Music for Jukeboxes to the Music Cart

What is the Music Cart? How do I move songs from a music search or a pre-compiled list in the TouchTunes Dashboard to the Music Cart?

The *Music Cart* is a storage area where you keep selected songs or albums until you are ready to download them to your jukeboxes. As you find music that you want to make available on your jukeboxes, you add it to the Music Cart. Once you have collected all of the music for download in the Music Cart, you transfer it from the Music Cart to your jukeboxes using the procedures in the next section (Downloading Music from the Music Cart to a Jukebox).

To add music for your jukeboxes to the Music Cart:

1. Find the music you want to distribute to your jukeboxes through keyword searches, music ID searches, pre-compiled music lists or music requests.
2. Select the music you want to add to the Music Cart by doing one of the following:

- Select the songs, albums or artists individually in the search results or music list.
- Click **Select All** to select all songs, albums or artists in the search results or music list.

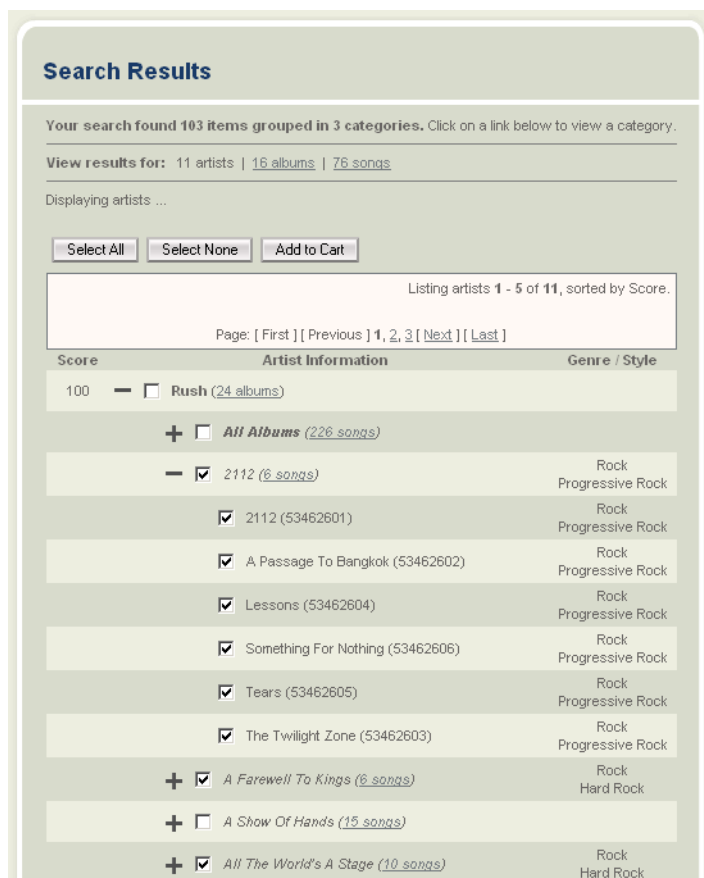 


Figure 24 Selected music to be added to the Music Cart

3. Click **Add to Cart**.

The selected music is added to the Music Cart. When you add music to the Music Cart, a message appears on the current page in the Dashboard to confirm the number of songs added and the Music Cart icon in the Quick Links area is updated to show the number of songs currently in the Music Cart.

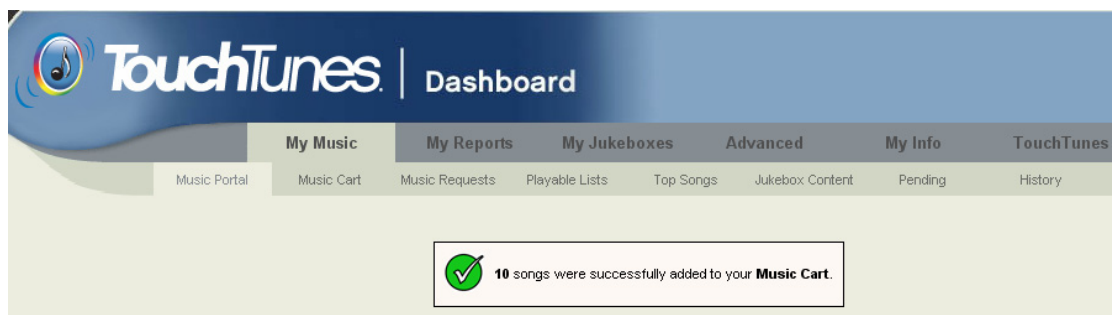 


Figure 25 Songs added to Music Cart

4. Do either of the following:

- To add other more music to the Music Cart, repeat steps 1 to 3.

- To download music from the Music Cart to your jukeboxes, see “Downloading Music from the Music Cart to a Jukebox” on page 67.
- To download music from the Music Cart to your USB device, see “Transferring Pending Music and Software to a USB Device” on page 70.

Downloading Music from the Music Cart to a Jukebox

How do I use the TouchTunes Dashboard to download music to my jukeboxes?

You can transfer music from the Music Cart to any of your jukeboxes using the TouchTunes Dashboard. If any of your jukeboxes are equipped with TuneCentral, you can also transfer music directly to the TuneCentral hard drive.

To transfer music from the Music Cart to a jukebox:

1. Access the Music Cart by doing one of the following:

- Click the Music Cart icon in the Quick Links area.
- Choose **My Music | Music Cart**.

The Music Cart page appears. You use this page to view the current contents of the Music Cart, as well as to transfer music to your jukeboxes.

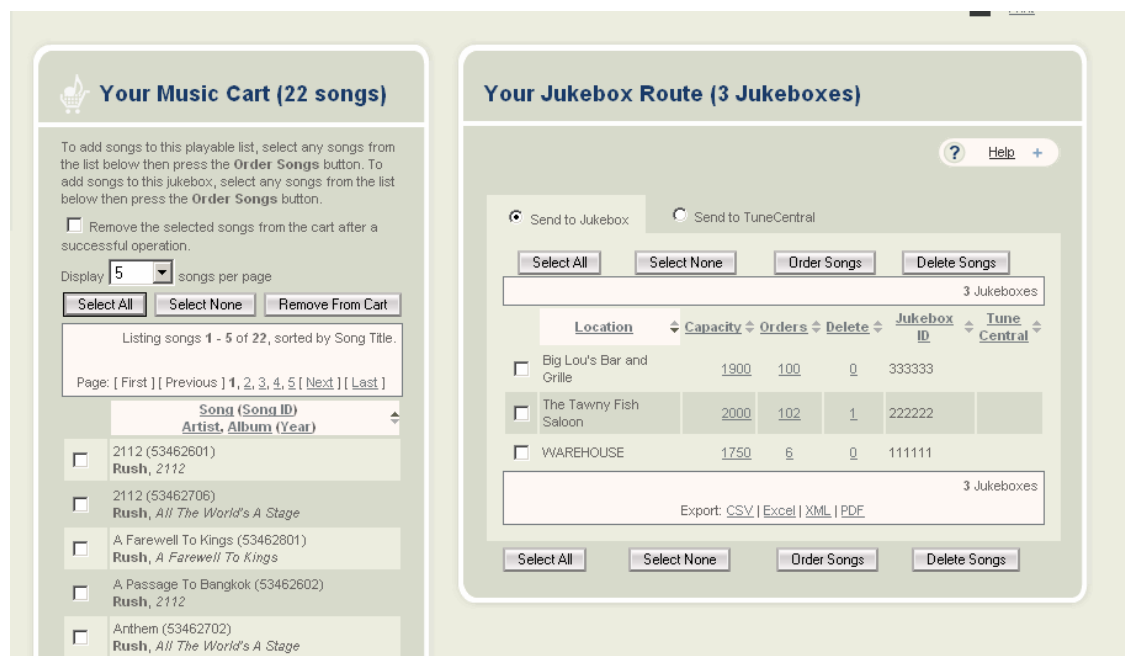 


Figure 26 Music Cart page

The left side of the Music cart page shows the current contents of your Music Cart, while the right side of the page shows a list of your jukeboxes.

2. Select the music to be transferred in the **Your Music Cart** area by doing one of the following:

- Select the songs, albums or artists individually.
- Click **Select All** to select all of the songs in the Music Cart.

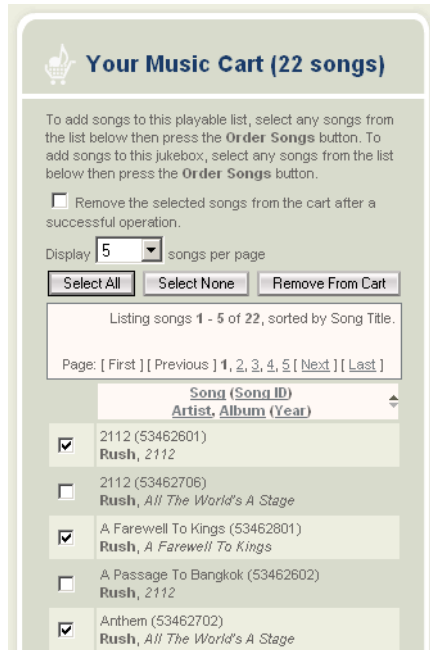 


Figure 27 Songs in Music Cart selected for transfer to jukebox(es)

3. (Optional) Enable **Remove the Selected Songs from the Cart After a Successful Operation** if you want to automatically delete the songs from your Music Cart once they have been transferred to the jukebox.

You normally enable this option to keep your Music Cart organized as you transfer music to your jukeboxes. However, you should disable this option if:

 
- You want to transfer a subset of the selected songs to other jukeboxes later.
- You want to save the Music Cart to reuse it in a future Dashboard session.

Tip: You can remove music from the Music Cart manually by choosing the songs to be deleted and then clicking **Remove From Cart**.

Next, choose the jukeboxes where you want the selected music to be transferred. If any of your NextGen jukeboxes have TuneCentral installed, set whether you want to transfer music to the local drive or the TuneCentral drive.

Note: Gen 3 jukeboxes do not have a separate TuneCentral unit. For Gen 3 jukeboxes, TuneCentral refers to the TouchTunes central music repository.

- If necessary, choose **Send to Jukebox** or **Send to TuneCentral** to determine the drive to which the music will be transferred.

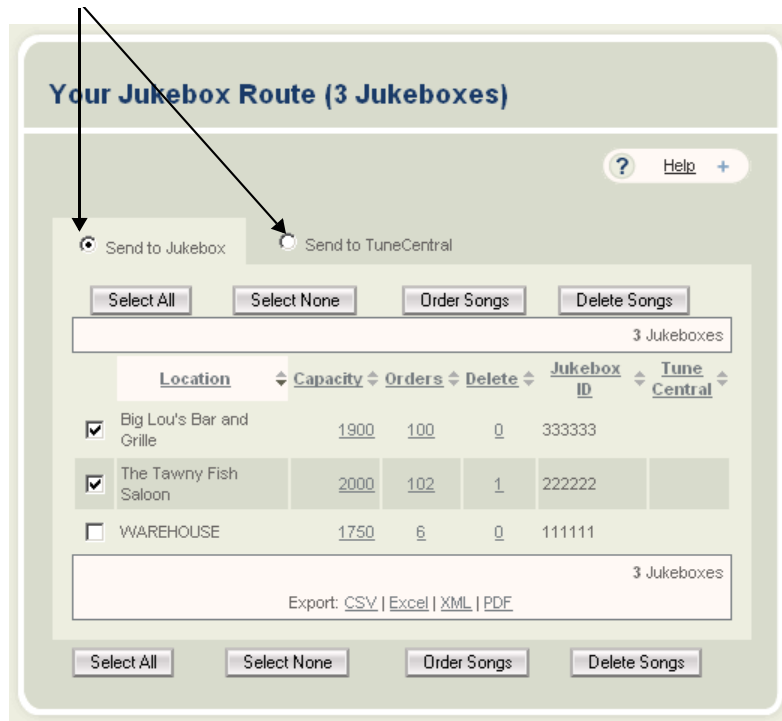

Note: The **Send to TuneCentral** option is available only on NextGen jukeboxes, and only those equipped with a TuneCentral unit.

- Select the jukebox(es) where the selected music from the Music Cart will be transferred. You can transfer the same set of music from the Music Cart to as many jukeboxes as you like. Click **Select All** to transfer the selected music to all your jukeboxes (or to all jukeboxes equipped with TuneCentral).
- Click **Order Songs** to initiate the music transfer to the jukebox(es). The following indicators appear on the Music Cart page to confirm the music transfer:
 - A message appears at the top of the page.
 - The color of the selected jukebox(es) changes to show the jukebox where the music is going.
 - The value in the Orders column for the jukebox is incremented by the number of songs being transferred.

- The value in the Capacity column for the jukebox is recalculated to show the remaining capacity of the jukebox.

The screenshot shows the TouchTunes Dashboard with a notification at the top: "3 songs were successfully queued for download to 2 Jukeboxes." The interface is divided into two main sections: "Your Music Cart (22 songs)" and "Your Jukebox Route (3 Jukeboxes)".

Your Music Cart (22 songs): This section includes instructions on how to add songs to a playable list or a jukebox. It features a list of songs, with the first five displayed: "Rush, 2112", "Rush, All The World's A Stage", "Rush, A Farewell To Kings", "Rush, A Farewell To Kings", and "Rush, A Passage To Bangkok". The list is sorted by Song Title.

Your Jukebox Route (3 Jukeboxes): This section shows a table of jukeboxes with columns for Location, Capacity, Orders, Delete, Jukebox ID, and Tune Central. The table lists three jukeboxes: "Big Lou's Bar and Grille", "The Tawny Fish Saloon", and "WAREHOUSE". Below the table, there are buttons for "Select All", "Select None", "Order Songs", and "Delete Songs".

Figure 28 Confirmation of transfer from Music Cart to jukebox

Music transfers appear to occur instantly in the TouchTunes Dashboard. While this is generally the case with broadband-connected jukeboxes, jukeboxes that connect through a dial-up connection only receive their music the next time they connect to the TouchTunes server. This may result in a lag of up to 24 hours from the time you initiate the music transfer to the time when the music is downloaded from the TouchTunes server to the jukebox. If you have a fast Internet connection to the Dashboard, you may choose to transfer the pending update to a USB device, then physically connect the device to the jukeboxes on your route.

Note: The number of songs that can be downloaded per night to a jukebox connecting to the TouchTunes server over a dial-up network connection may be limited. Using a USB device is an excellent to transfer more songs to these jukeboxes.

Transferring Pending Music and Software to a USB Device

What is the USB Content Updater? How do I use the USB Content Updater to update my jukeboxes?

The USB Content Updater is an online tool that enables you to download software and music updates from the TouchTunes' Operator Dashboard to a USB device. You can then bring this

device with you to locations and transfer its contents directly to a Gen 3 jukebox through its USB port.

The Updater is capable of creating updates for multiple jukeboxes on a single USB device. If a USB device contains updates for more than one jukebox, the USB Content Updater automatically identifies which jukebox the device has been plugged into and updates that jukebox accordingly.



Caution: It is important never to interrupt an in-progress jukebox software upgrade. Doing so may render a jukebox hard drive unusable and require it to be reformatted by TouchTunes.

If you have broadband access to the Operator Dashboard, but maintain jukeboxes that are connected to the Internet through a slower, dial-up connection, your business can benefit considerably from the functionality of the USB Content Updater.

The USB Content Updater can send the following to a USB device:

- The latest Gen 3 jukebox software available
- Songs missing from *Morph* operations
- Songs from a Hard Drive swap
- Popular NextGen (Gen 2) songs, so you can quickly transfer them to a new Gen 3 hard drive
- Pending songs:
 - requested from patrons through TuneCentral
 - ordered to local jukeboxes by operators
 - ordered to local jukeboxes by TouchTunes

The USB Content Updater *does not*:

- Download TouchTunes music catalogs
- Transfer content to jukeboxes running NextGen (Gen 2) software or Gen 3 software prior to release 3.3.1
- Work with USB devices older than the 2.0 standard

To transfer pending songs, NextGen songs from your previous hard drive and software updates to a USB device:

1. Plug your USB device into one of your computer's USB slots.
2. Delete any files on your USB device and ensure its file system is formatted as FAT32.
3. At the top of the Operator Dashboard page, click the **My Jukeboxes** tab, then the **USB Content Updater** tab.

- From the **Select Gen 3 jukeboxes to update** area in the left panel, select the Gen 3 jukeboxes you will be updating on location with the USB Content Updater.

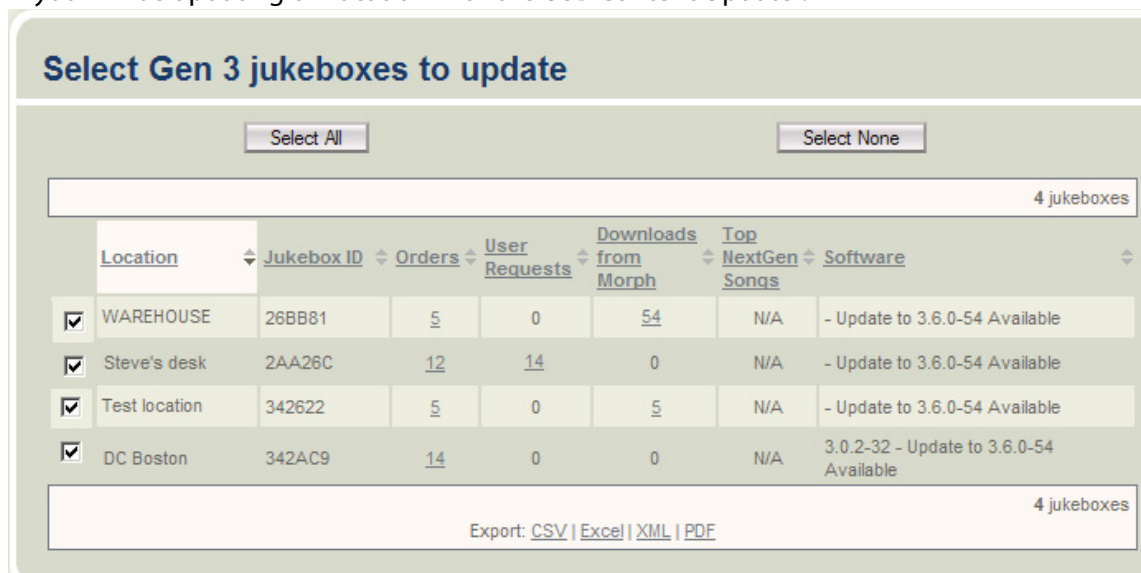 


Figure 29 Selecting Gen 3 jukeboxes to update

Note: Remember that the USB Content Updater can store updates for multiple jukeboxes on a single USB device, so long as you have adequate space on the device.

- Continue to scroll down the left side of the page to the **Select NextGen jukeboxes to prepare for a Gen 3 upgrade** area. Select any NextGen (Gen 2) jukeboxes that you intend to upgrade to Gen 3 in the near future or have recently upgraded to Gen 3.

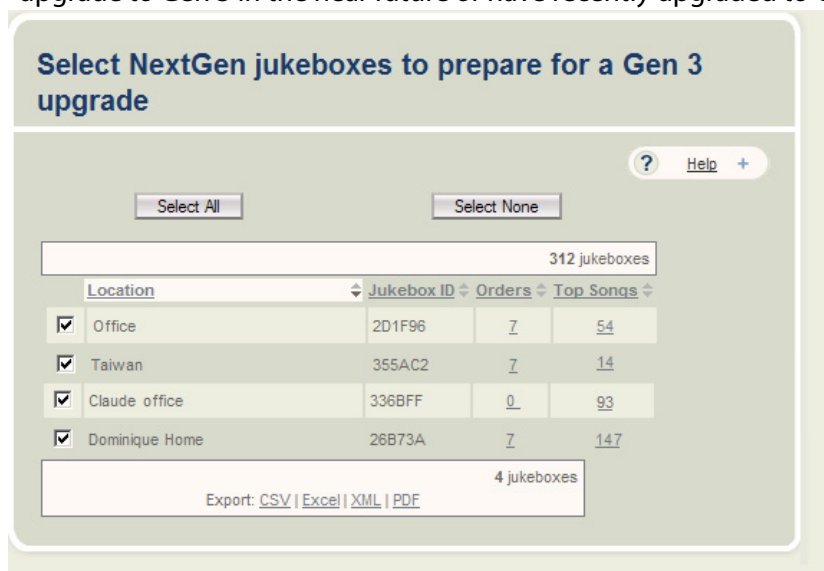 


Figure 30 Selecting NextGen (Gen 2) jukeboxes that have been or will soon be upgraded to Gen 3

6. On the right side of the page, click **Download Content Updates**.

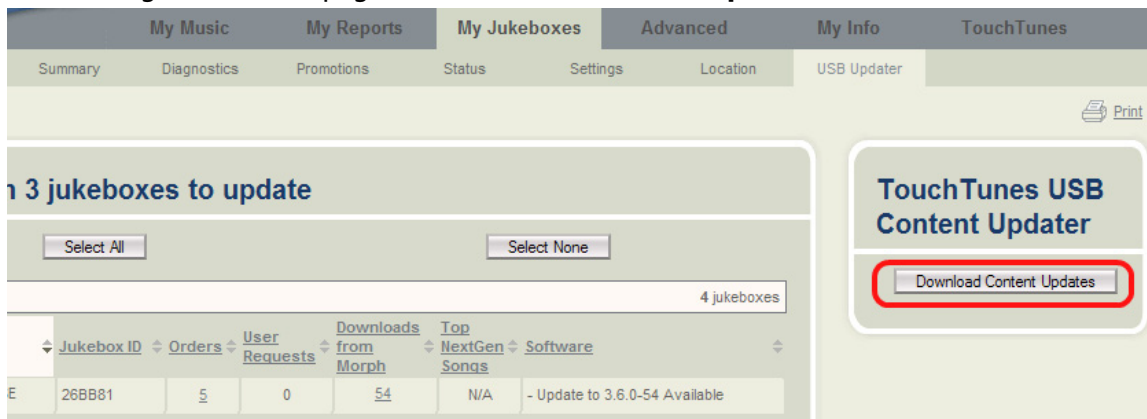 


Figure 31 Initiating the USB Content Updater

The TouchTunes USB Content Updater will load.


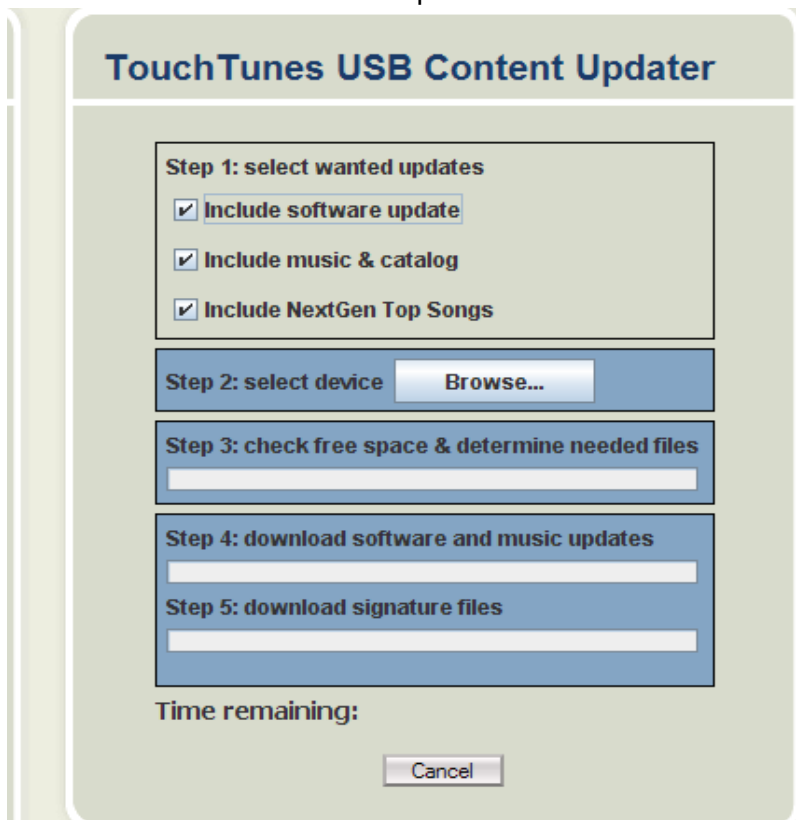 


Figure 32 The USB Content Updater

Note: The USB Content Updater is a Java applet that requires a minimum version of Java 1.6 to be installed on your computer. If the USB Content Updater fails to load, ensure you have the most recent version of Java installed on your computer and that your browser supports it.

7. In the **Step 1** area, check any of the following options to add them to the update package:

- **Include software update** will include the latest TouchTunes jukebox software in the update package
- **Include pending music** will include songs you have ordered from the Operator Dashboard
- **Include Nextgen Top Songs** will add the most popular NextGen (Gen 2) songs from the jukeboxes you selected in **Step 5**. On location, you will be able to quickly restore these NextGen songs to the same jukebox after it is upgraded to Gen 3. You can add these songs to a USB device before or after you have converted a NextGen jukebox to Gen 3.

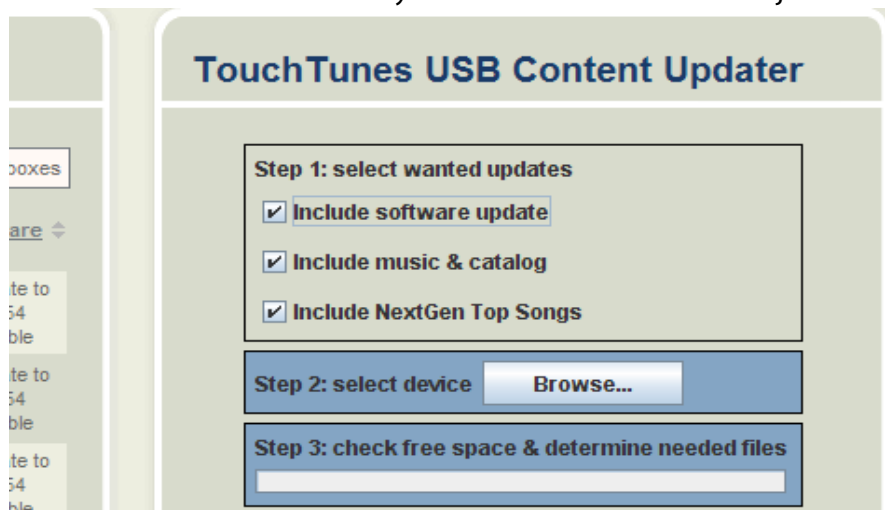

The screenshot shows the 'TouchTunes USB Content Updater' window. It has a title bar and a main content area. The main content area is divided into three sections: 'Step 1: select wanted updates', 'Step 2: select device', and 'Step 3: check free space & determine needed files'. In the 'Step 1' section, there are three checkboxes, all of which are checked: 'Include software update', 'Include music & catalog', and 'Include NextGen Top Songs'. In the 'Step 2' section, there is a 'Browse...' button. In the 'Step 3' section, there is a text input field.

Figure 33 Selecting the content to include in the update package

8. Create a new folder on your computer's hard drive where you can temporarily store the USB Content Updater files.
9. In the **Step 2** area of the USB Content Updater, click the **Browse** button, then browse to the folder you created on your hard drive.

10. Click **Open** from the browse window to begin the transfer of the update files to the folder on your hard drive.

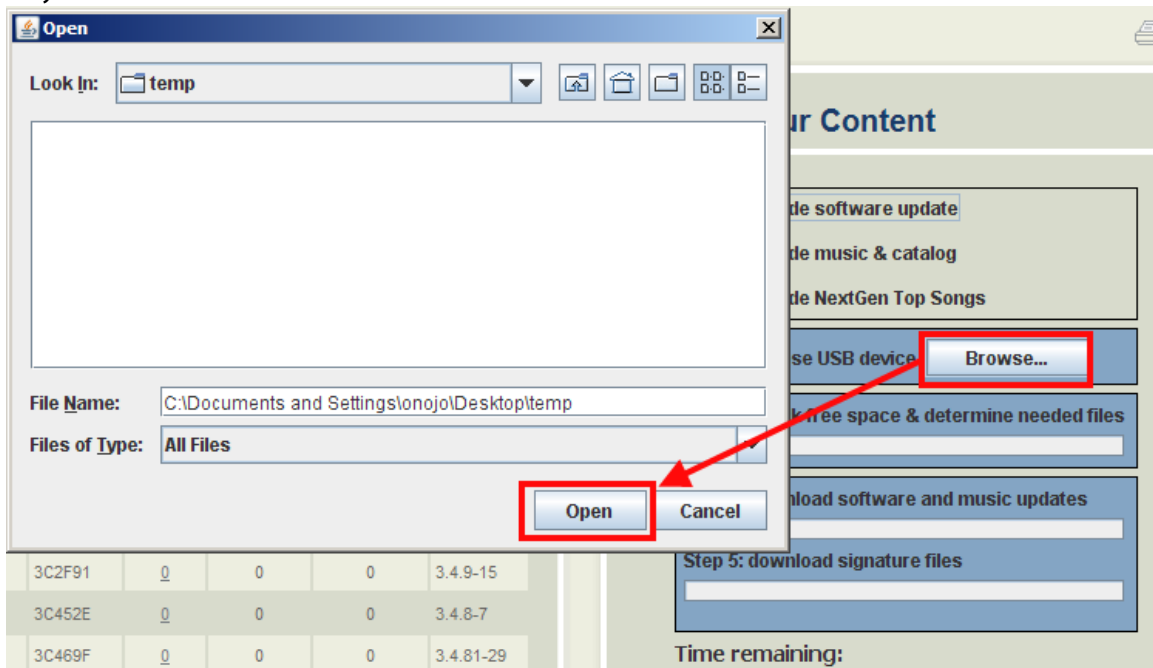 


Figure 34 Saving the update package to a temporary directory on a hard drive

11. When the USB Content Updater status reads "Completed", the files have been successfully transferred from the Operator Dashboard to your temporary hard drive folder.


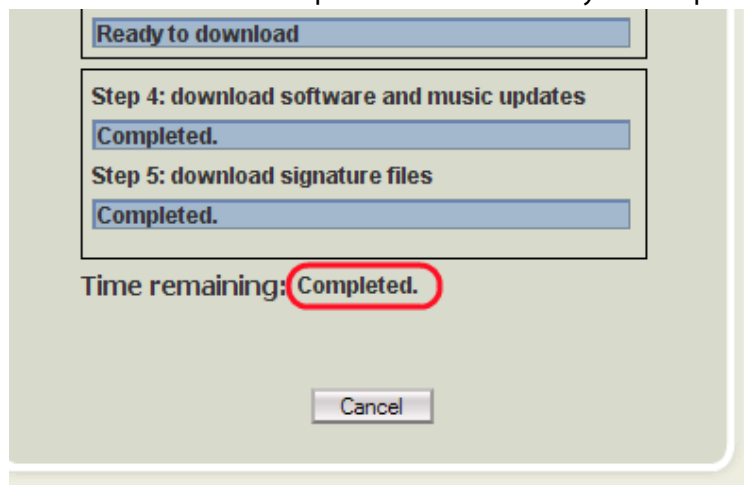 


Figure 35 A successfully created update package

12. Transfer the files in the temporary hard drive on your computer to your USB device. Note that the files must be transferred to the root folder of your USB device in order for your jukebox to

 recognize the update. This means the files on your USB device must not be located in any folder or subfolder on the USB device.

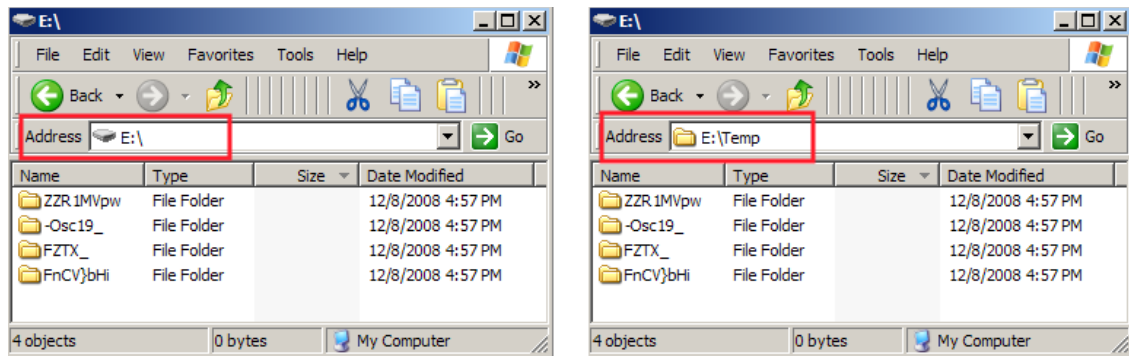

Correct - Update transferred to the USB device's root folder

Incorrect - Update transferred to a subfolder on the USB device named "Temp"

Figure 36 The right way and wrong way to store the update package on a USB device

Updating a Jukebox on Location with the USB Content Updater

Once you have created an update package on a USB key, you are ready to bring that key to your locations, and transfer the content to your jukebox or jukeboxes.

Note: The USB Content Updater is compatible with Gen 3 jukeboxes running Gen 3 software **release 3.3.1** or higher. If your jukebox is running software older than this release, you will need to contact TouchTunes Technical Support about updating your jukebox for you. Once your software has been updated, you will be able to use the USB Content Updater for any future software upgrades.

To update your jukeboxes using your USB device:

1. Open your jukebox so you can access its USB ports.
The USB ports are located on the jukebox's MJS or JCB unit, the main hardware component within your jukebox that houses its hard drive and CPU. You can use any of the available USB slots for the connection.

2. With the jukebox powered on and displaying the main album selection screen (below), plug the USB device into a USB port.



Figure 37 The main customer screen on a Gen 3 jukebox

The USB device is mounted automatically by the jukebox and after a few moments, the USB Content Updater screen appears.



Figure 38 A jukebox's USB Updater page

3. Touching the screen, select whether to update the jukebox's music, its software, or both.
4. Touch **Install** to begin the music and/or software update.



Caution: It is important never to interrupt an in-progress jukebox software upgrade. Doing so may render a jukebox hard drive unusable and require it to be reformatted by TouchTunes.

The update time will vary depending on the number of songs to transfer to your jukebox and whether or not you are upgrading the jukebox's software as well. The jukebox will reboot automatically if you update its software.

Reviewing Music Transfers

How can I tell which songs have recently been downloaded to, or are pending download to a jukebox through the TouchTunes Dashboard?

You can use the TouchTunes Dashboard to review upcoming or completed music downloads to your jukebox(es). You use this feature to respond to questions from location owners about the music requests for their jukebox.

- To view upcoming music transfers, see "To view upcoming music transfers to your jukeboxes:" on page 79.

- To view music transfers that have already occurred, see “To review completed music transfers to your jukeboxes:” on page 80.

If you are troubleshooting issues with music downloads initiated through the TouchTunes Dashboard, keep in mind that transfers involve three separate components: the TouchTunes Dashboard, the TouchTunes server and your jukebox(es). You use the Dashboard to tell the TouchTunes server what music you want and to which jukebox(es) it should go. However, the actual transfer is managed between the TouchTunes server and your jukebox. In most cases, music download problems are due to jukebox communications problems, not with the TouchTunes Dashboard or server.

To view upcoming music transfers to your jukeboxes:

1. In the TouchTunes Dashboard, choose **My Music | Pending**.
The Pending Transactions page appears. Use this page to view the upcoming music transfers to your jukeboxes.
2. If necessary, select the jukebox whose music transfers you want to view from the **Choose Another Jukebox** list.

Songs to be transferred to the jukebox appear.

Pending Transactions - FRED (355B8A)

This jukebox should connect to our servers at April 5, 2008 3:00 AM EDT and perform the actions listed below.

Choose another Jukebox: >> FRED - 355B8A - [TC] - 84E14 <<

Display 100 results per page

7 songs to send to this jukebox

Select All Select None Add to Cart Cancel High Priority Normal Priority

Listing all 7 Transactions found, sorted by Date Added.

<input type="checkbox"/>	Song (Song ID) Artist, Album (Year)	Added	From	Priority	Tune Central
<input type="checkbox"/>	Alice (92121106) Moby , <i>Last Night</i> (2008)	April 4, 2008	Dashboard	Normal	
<input type="checkbox"/>	Ain't Sayin' Nothin' (Feat. Plies & Dre) (EDITED) (20903202) Fat Joe , <i>The Elephant In The Room</i> (2008)	April 4, 2008	Dashboard	Normal	
<input type="checkbox"/>	Airliner (24987213) R.E.M. , <i>Accelerate</i> (2008)	April 4, 2008	Dashboard	Normal	
<input type="checkbox"/>	All You Ever Wanted (69147701) Black Keys , <i>Attack & Release</i> (2008)	April 4, 2008	Dashboard	Normal	

Figure 39 List of songs to send to a jukebox

You can use the controls on this page to remove songs from the music transfer, as well as to set the priority in which songs should be downloaded to the jukebox.

3. (Optional) To remove songs from the download, select the songs to be removed from the download list and then click **Cancel**.

4. To control the order in which songs are downloaded, select the higher-priority songs from the download list and then click **High Priority**.
The status of the selected songs are set to High Priority. High priority songs are downloaded before all other songs when the jukebox connects to the TouchTunes server.
5. (Optional) When you change the song download priority on a single jukebox, you will now be prompted to change the priority for the selected songs on your other jukeboxes as well. This enables you to quickly send specific songs to your jukeboxes more quickly than others.

To review completed music transfers to your jukeboxes:

1. In the TouchTunes Dashboard, choose **My Music | History**.
The Transactions History page appears. Use this page to view completed music transfers to your jukeboxes.

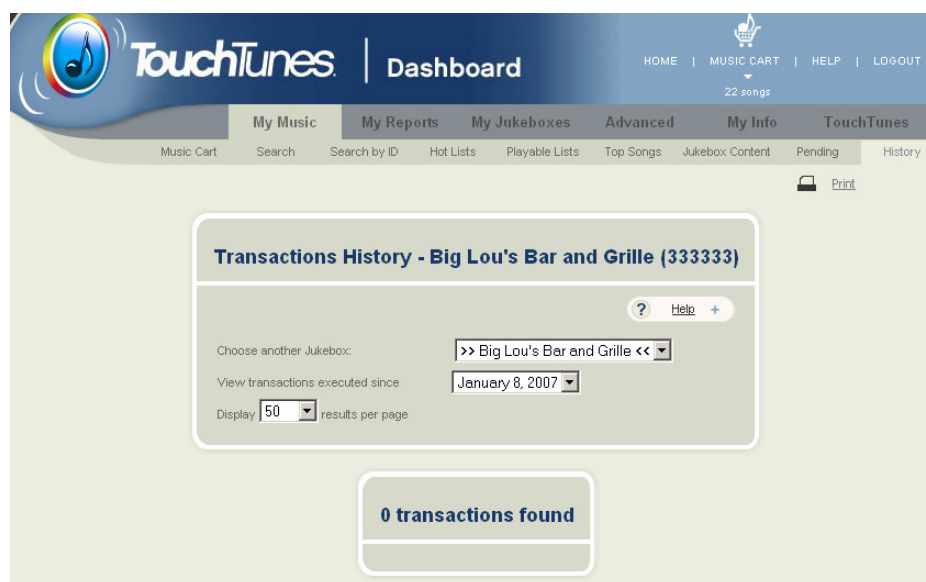 


Figure 40 Transactions History page

2. In the **Transactions History** area, do the following to select the music transfers that you want to review:
 - Select the jukebox whose music transfers you want to view from the **Choose Another Jukebox** list.
 - Select the starting date from which you want to view the music transfer history using the **View Transactions Executed Since...** list.

- (Optional) Set the number of songs to display on each page.

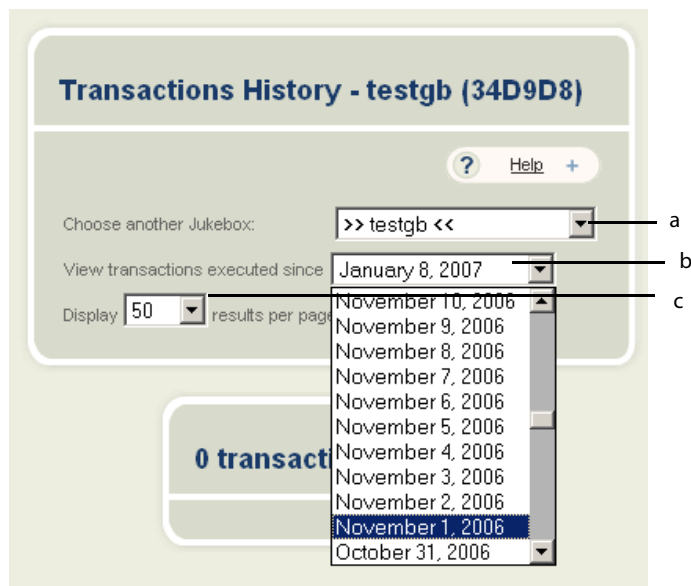 


Figure 41 a. List of jukeboxes b. List of starting dates available c. Number of transferred songs to display on each page

Note: If the selected jukebox has no transaction history, the **View Transactions Executed Since...** list is empty.

Songs that have been transferred to the jukebox since the starting date appear.

289 transactions found

Listing Transactions 1 - 10 of 289, sorted by Date Executed.

Page: [First] [Previous] 1, 2, 3, 4, 5, 6, 7, 8 ... [Next] [Last]

	Song (Song ID) Artist, Album (Year)	From	Type	Created	Executed
<input type="checkbox"/>	Crazy (37000302) Gnarls Barkley, <i>St. Elsewhere</i> (2006)	Dashboard	Delete	November 29, 2006	November 29, 2006
<input type="checkbox"/>	(I Got That) Boom Boom (Feat. Ying Yang Twins) (65374802) Britney Spears, <i>In The Zone</i> (2003)	Dashboard	Delete	November 29, 2006	November 29, 2006
<input type="checkbox"/>	Snake Oil (702) Steve Earle, <i>Copperhead Road</i> (1988)	Dashboard	Delete	November 29, 2006	November 29, 2006
<input type="checkbox"/>	Hillbilly Deluxe (66994605) Brooks & Dunn, <i>Hillbilly Deluxe</i> (2005)	Dashboard	Delete	November 29, 2006	November 29, 2006
<input type="checkbox"/>	Copperhead Road (701) Steve Earle, <i>Copperhead Road</i> (1988)	Dashboard	Delete	November 29, 2006	November 29, 2006
<input type="checkbox"/>	Can't Take Me Home (82606209) Pink, <i>Can't Take Me Home</i>	Dashboard	Delete	November 29, 2006	November 29, 2006
<input type="checkbox"/>	All These Things (77789204) Freddie Fender, <i>25 Golden Hits</i> (2006)	Dashboard	Delete	November 29, 2006	November 29, 2006
<input type="checkbox"/>	Love, Love, Love (74700411) Webb Pierce, <i>Greatest Hits - Finest Performances</i>	Dashboard	Delete	November 29, 2006	November 29, 2006
<input type="checkbox"/>	Crazy (37000302) Gnarls Barkley, <i>St. Elsewhere</i> (2006)	Dashboard	Download	November 29, 2006	November 29, 2006
<input type="checkbox"/>	(I Got That) Boom Boom (Feat. Ying Yang Twins) (65374802) Britney Spears, <i>In The Zone</i> (2003)	Dashboard	Download	November 29, 2006	November 29, 2006

Listing Transactions 1 - 10 of 289, sorted by Date Executed.

Page: [First] [Previous] 1, 2, 3, 4, 5, 6, 7, 8 ... [Next] [Last]

Export: CSV | Excel | XML | PDF

Figure 42 List of songs transferred to the jukebox

- (Optional) Export the list of transferred music to any of the file formats listed at the bottom of the area.

7

Managing Music on Jukeboxes Using the TouchTunes Dashboard

This chapter explains how you can track and manage the music on a jukebox using the TouchTunes Dashboard.

Contents

<i>Overview</i>	<i>83</i>
<i>Viewing Music on a Jukebox</i>	<i>84</i>
<i>Tracking Song Popularity</i>	<i>86</i>
<i>Removing Music from a Single Jukebox</i>	<i>89</i>
<i>Removing Music from Multiple Jukeboxes</i>	<i>91</i>

Overview

You can use the TouchTunes Dashboard to help you perform music management tasks on your jukebox, such as identifying popular songs or removing music from all of your jukeboxes. Using the Dashboard for these tasks allows you to centralize and streamline your music management in a single tool that is accessible anywhere that you have an Internet connection.

In this chapter, you will find answers to the following questions:

- “How do I find out what songs are on a jukebox using the TouchTunes Dashboard?” (p. 84)
- “Can I find out what songs are being played on a jukebox through the TouchTunes Dashboard?” (p. 86)
- “How do I delete songs on a jukebox using the TouchTunes Dashboard?” (p. 89)

- “Can I use the TouchTunes Dashboard to delete a song (or songs) from multiple jukeboxes simultaneously?” (p. 91)

Viewing Music on a Jukebox

How do I find out what songs are on a jukebox using the TouchTunes Dashboard?

You can use the TouchTunes Dashboard to view the songs that are currently loaded on a jukebox. You can also use this list to identify the most popular songs on the jukebox, as well as those songs to be deleted from the jukebox.

To view music on a jukebox:

1. In the TouchTunes Dashboard, choose **My Music | Jukebox Content**.

The Jukebox Content page appears. You use this page to view and manage music on any of your jukeboxes.

Jukebox Content - * LZ Office Chrome * (2D3086)

Choose another Jukebox: >> * LZ Office Chrome * - 2D3086 - [internal TC] - internal TC <<

Display 100 results per page

Search Results

Select All Select None Remove Selected Add to Cart

Listing songs 1 - 100 of 1,585, sorted by Popularity.

Page: [First] [Previous] 1, 2, 3, 4, 5, 6, 7, 8 ... [Next] [Last]

Song (Song ID)	Artist, Album (Year)	Genre / Style	Received	Plays	Popularity (plays/day)	Last Played
<input type="checkbox"/> Low (Feat T-Pain) (EDITED) (85222501)	Flo Rida, Low (Single) (2007)	Rap Rap - Hip-Hop	March 20, 2008	10	0.65	April 2, 2008
<input type="checkbox"/> No One (69717304)	Alicia Keys, As I Am (2007)	R&B \ Hip-Hop R&B - Urban	February 17, 2008	30	0.63	March 29, 2008
<input type="checkbox"/> Here Without You (66165206)	3 Doors Down, Away From The Sun (2002)	Rock Alternative - Rock	March 20, 2008	7	0.45	April 2, 2008

Figure 8 Jukebox Content page

The **Search Results** area shows the songs currently loaded on the selected jukebox (called the *content list*), as well as any songs that are scheduled for download to the jukebox. Use the following table to interpret the information displayed for each song in this area.

Column:	Description:
Song	Name of song
Song ID	ID number for song
Artist	Artist name
Album	Album name
Year	Year that song was released
Genre/Style	Music genre/style of song
Received	Date that song was downloaded to the jukebox
Plays	Number of plays for the song
Popularity	Number of plays per day for the song, based on the length of time the song has been on the jukebox
Last Played	Date and time when the song was last played

2. If necessary, select the jukebox whose songs you want to view from the **Choose Another Jukebox** list.

Finding Duplicate Songs on Jukebox

How do I find and remove duplicate songs on a jukebox?

Duplicate songs can accumulate on a jukebox over time. The Dashboard has a tool that helps you find and remove duplicate songs to free up space for more music.

To find duplicate songs on a jukebox:

1. In the TouchTunes Dashboard, choose **My Music | Jukebox Content**.
2. Select a jukebox from the drop-down menu and click the **Duplicate Songs** button.

This will produce a list of songs by the same artist, with the same title. The resulting list can be filtered to show all duplicates, or just the songs that have an explicit or edited counterpart.

Jukebox Content - Azure Italian Cafe (34A886)

Choose another Jukebox: >> Azure Italian Cafe - 34A886 <<

Display 100 results per page

Now showing **duplicate songs** on this jukebox. Show **All songs**

Find Duplicates

Show **All Duplicate** songs

Duplicate Jukebox Songs

Select All Select None Remove Selected Add to Cart

Listing all 24 songs found, sorted by Song Title.

Song (Song ID)	Artist, Album (Year)	Genre / Style	Received	Plays	Popularity (plays/day)	Last Played
<input checked="" type="checkbox"/> Chick Magnet (54082810)	MXPX , <i>Life In General</i> (1996)	Rock Punk	April 28, 2008	0	0	Never
<input checked="" type="checkbox"/> Chick Magnet (77119604)	MXPX , <i>Ten Years And Running</i>	Rock Punk	April 28, 2008	0	0	Never
<input checked="" type="checkbox"/> Do Your Feet Hurt (54082803)	MXPX , <i>Life In General</i> (1996)	Rock Punk	April 28, 2008	0	0	Never

Sort duplicate songs on a jukebox and use filters to easily remove only the ones you want

- To delete songs from this page, select them with the checkbox on the left, then click **Remove Selected**.

Tracking Song Popularity

Can I find out what songs are being played on a jukebox through the TouchTunes Dashboard?

You can use the TouchTunes Dashboard to find out what the most popular songs (those that are played the most) are for any jukebox. You can access a chart in the Dashboard that shows the most popular songs over the previous 30, 60 and 120 days for your jukeboxes. You can also view a list of the most popular songs on a jukebox for each of these time periods. You can use this feature to identify songs that are increasing in popularity across several jukeboxes so you can transfer these songs to other jukeboxes and maximize your revenues.


Tip: You can also use the Jukebox Content page to identify popular songs on a jukebox. Reordering the content list for a jukebox on this page by the Popularity column shows you the

most popular songs. To access the Jukebox Content page, see “Viewing Music on a Jukebox” on page 84.

To track historical song popularity:

1. In the TouchTunes Dashboard, choose **My Music | Top Songs**.

The Top Songs page appears. The summary chart on this page shows the number the popular songs over the last 30, 60 and 90 days for each of your installed jukeboxes (or TuneCentral installations).

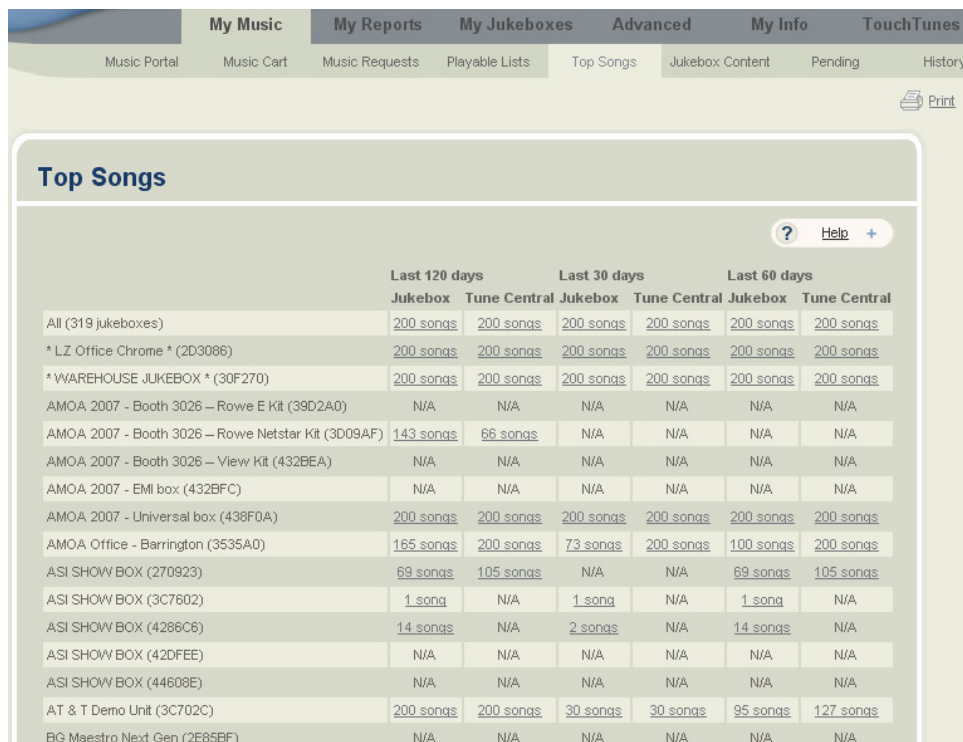

	Last 120 days		Last 30 days		Last 60 days	
	Jukebox	Tune Central	Jukebox	Tune Central	Jukebox	Tune Central
All (319 jukeboxes)	200 songs	200 songs	200 songs	200 songs	200 songs	200 songs
* LZ Office Chrome * (2D3086)	200 songs	200 songs	200 songs	200 songs	200 songs	200 songs
* WAREHOUSE JUKEBOX * (30F270)	200 songs	200 songs	200 songs	200 songs	200 songs	200 songs
AMOA 2007 - Booth 3026 — Rowe E Kit (39D2A0)	N/A	N/A	N/A	N/A	N/A	N/A
AMOA 2007 - Booth 3026 — Rowe Netstar Kit (3D09AF)	143 songs	66 songs	N/A	N/A	N/A	N/A
AMOA 2007 - Booth 3026 — View Kit (432BEA)	N/A	N/A	N/A	N/A	N/A	N/A
AMOA 2007 - EMI box (432BFC)	N/A	N/A	N/A	N/A	N/A	N/A
AMOA 2007 - Universal box (438F0A)	200 songs	200 songs	200 songs	200 songs	200 songs	200 songs
AMOA Office - Barrington (3535A0)	165 songs	200 songs	73 songs	200 songs	100 songs	200 songs
ASI SHOW BOX (270923)	69 songs	105 songs	N/A	N/A	69 songs	105 songs
ASI SHOW BOX (3C7602)	1 song	N/A	1 song	N/A	1 song	N/A
ASI SHOW BOX (4286C6)	14 songs	N/A	2 songs	N/A	14 songs	N/A
ASI SHOW BOX (42DFEE)	N/A	N/A	N/A	N/A	N/A	N/A
ASI SHOW BOX (44608E)	N/A	N/A	N/A	N/A	N/A	N/A
AT & T Demo Unit (3C702C)	200 songs	200 songs	30 songs	30 songs	95 songs	127 songs
BG Maestro Next Gen (2E85BF)	N/A	N/A	N/A	N/A	N/A	N/A

Figure 9 Top Songs page

Each statistic in the chart is a link to a list of the most popular songs for all of your jukeboxes or TuneCentrals, or to each jukebox or TuneCentral. You can follow these links to identify songs that have been steadily rising in popularity on a jukebox (or on several jukeboxes) that should be available on your other jukeboxes.

Note: The top song statistics listed for a jukebox and TuneCentral are independent of each other. This means that the list of top songs for a jukebox excludes the top songs on its TuneCentral and vice-versa.

- Follow one of the links in the chart.

	Last 30 days		Last 60 days	
	Jukebox	Tune Central	Jukebox	Tune Central
All (3 jukeboxes)	200 songs	200 songs	200 songs	200 songs
Big Lou's Bar and Grille (333333)	139 songs	118 songs	108 songs	22 songs

- A list showing the top songs for the jukebox or TuneCentral appears. You can use this list to select popular songs on one jukebox (or TuneCentral) that you want to transfer to other jukeboxes (or TuneCentrals), as well as to export the list to an external file.

Top Songs > Top Jukebox Songs

There are 139 Top Songs for the last 30 days on your Jukebox at **Big Lou's Bar and Grille** with ID 333333.

This report was generated on **Monday, January 22, 2007 9:00 AM**.

[Back](#)

[Select All](#)
[Select None](#)
[Add to Cart](#)

Listing all 139 songs found, sorted by Rank.

	Rank	Plays	Last Played	Song (Song ID) Artist, Album (Year)
<input type="checkbox"/>	1	3	December 20, 2006	Beverly Hills (98816801) Weezer , <i>Make Believe</i> (2005)
<input type="checkbox"/>	2	2	December 20, 2006	Beautiful Day (54832901) U2 , <i>All That You Can't Leave Behind</i>
<input type="checkbox"/>	3	2	December 20, 2006	Roxanne (54038001) The Police , <i>Every Breath You Take/The Classics</i>
<input type="checkbox"/>	4	2	December 20, 2006	Zombie (52405004) The Cranberries , <i>No Need To Argue</i>
<input type="checkbox"/>	5	2	December 20, 2006	With Or Without You (84229803) U2 , <i>Joshua Tree</i>
<input type="checkbox"/>	6	2	December 20, 2006	Sexyback (EDITED) (1745102) Justin Timberlake , <i>Futuresex / Lovesounds</i> (2006)
<input type="checkbox"/>	7	2	December 19, 2006	Seven Nation Army (12714801) The White Stripes , <i>Elephant</i> (2003)
<input type="checkbox"/>	8	2	December 19, 2006	Loser (15392002) 3 Doors Down , <i>The Better Life</i> (2000)
<input type="checkbox"/>	9	2	December 19, 2006	My Love (EDITED) (1745104) Justin Timberlake , <i>Futuresex / Lovesounds</i> (2006)
<input type="checkbox"/>	10	2	December 19, 2006	T.N.T. (79241305) A.C.D.C. , <i>High Voltage</i>
<input type="checkbox"/>	11	2	December 19, 2006	War Pigs (292304) Black Sabbath , <i>We Sold Our Soul For Rock 'N' Roll</i>
<input type="checkbox"/>	12	2	December 19, 2006	Highway To Hell (79241901) A.C.D.C. , <i>Highway To Hell</i> (1979)

Figure 10 Top Songs listing of a jukebox for the previous 30 days

- (Optional) Re-order the songs in the list by clicking a column heading so you can to identify increasingly popular songs that should be available on other jukeboxes.

Tip: The arrow icons beside the column heading shows whether the list is in ascending or descending order.

5. Select songs in the list that you want to transfer to other jukeboxes, and then click **Add to Cart**.



Figure 11 Adding Top Songs to the Cart

6. The selected songs in the list are transferred to the Music Cart. You can now transfer these songs to other jukeboxes; see "Downloading Music from the Music Cart to a Jukebox" on page 67.
7. (Optional) Export the list of songs for the jukebox from the TouchTunes Dashboard to any of the file formats listed at the bottom of the **Search Results** area.

Removing Music from a Single Jukebox

How do I delete songs on a jukebox using the TouchTunes Dashboard?

You can use the TouchTunes Dashboard to delete songs from a jukebox. You remove songs from a jukebox either when they are not played anymore and/or when you need to free space for new songs.

Tip: You can identify the least popular songs on a jukebox by using the Popularity column on the Jukebox Content page. See "Viewing Music on a Jukebox" on page 84.

The following procedure explains how you remove songs from a single jukebox. You can also use the TouchTunes Dashboard to remove songs from multiple jukeboxes; see "Removing Music from Multiple Jukeboxes" on page 91.

To remove music from a jukebox:

1. View the content list for a jukebox. See "Viewing Music on a Jukebox" on page 84.

2. Select the song(s) to be removed from the jukebox in the **Search Results** area.


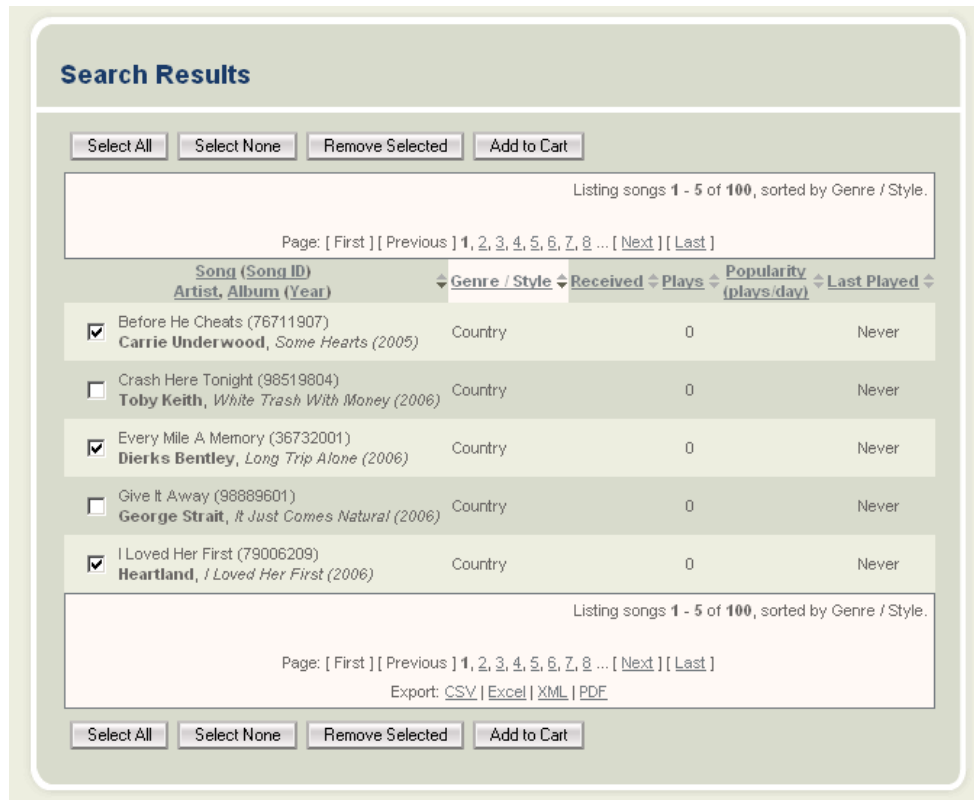 


Figure 12 Songs to be deleted from the jukebox

3. Click **Remove Selected**.

 You are prompted to confirm the removal of the selected songs.

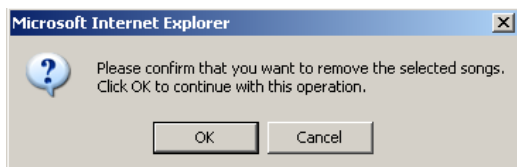

4. When prompted, click **OK**.

The songs are set to be deleted from the jukebox.

Tip: You can view a list of the songs to be deleted from the jukebox from the Pending Transactions page in the Dashboard, in case you deleted a song by accident.

The Jukebox Content page reappears, confirming the removal of the songs. The selected songs are also removed from the **Search Results** area on the page.



Figure 13 Confirmation of the songs removed

Music deletions appear to occur instantly in the TouchTunes Dashboard. While this is generally the case with broadband-connected Gen 3 jukeboxes, jukeboxes that connect through a dial-up connection only delete the selected music the next time they connect to the TouchTunes server. This may result in a lag of up to 24 hours from the time you initiate the removal to the time when the music is deleted from the jukebox.

Removing Music from Multiple Jukeboxes

Can I use the TouchTunes Dashboard to delete a song (or songs) from multiple jukeboxes simultaneously?

You can use the TouchTunes Dashboard to remove the same song (or songs) from multiple jukeboxes. Using this feature can save you a lot of time if you manage music for multiple jukeboxes based on a standard list of songs or a pre-compiled music list, such as the Billboard Magazine lists.

For example, assume that you manage five jukeboxes for a local chain of family restaurants. Every week, you update the music on these jukeboxes with the latest Billboard Top 40 list to ensure that the jukeboxes for all of these restaurants are always stocked with the most popular music. To do this, you first remove the old Billboard Top 40 list from all of the jukeboxes using the following procedure. Once this music is removed from all of the jukeboxes, you add the new Billboard Top 40 music list to the jukeboxes using the procedures in “Adding Songs from Compiled Lists” on page 58.

To remove music from multiple jukeboxes:

1. View the contents of the Music Cart by doing either of the following:

- Click the Music Cart icon in the Quick Links area.
- Choose **My Music | Music Cart**.

The Music Cart page appears. The left side of this page shows the current contents of your Music Cart, while the right side of the page shows a list of your jukeboxes.

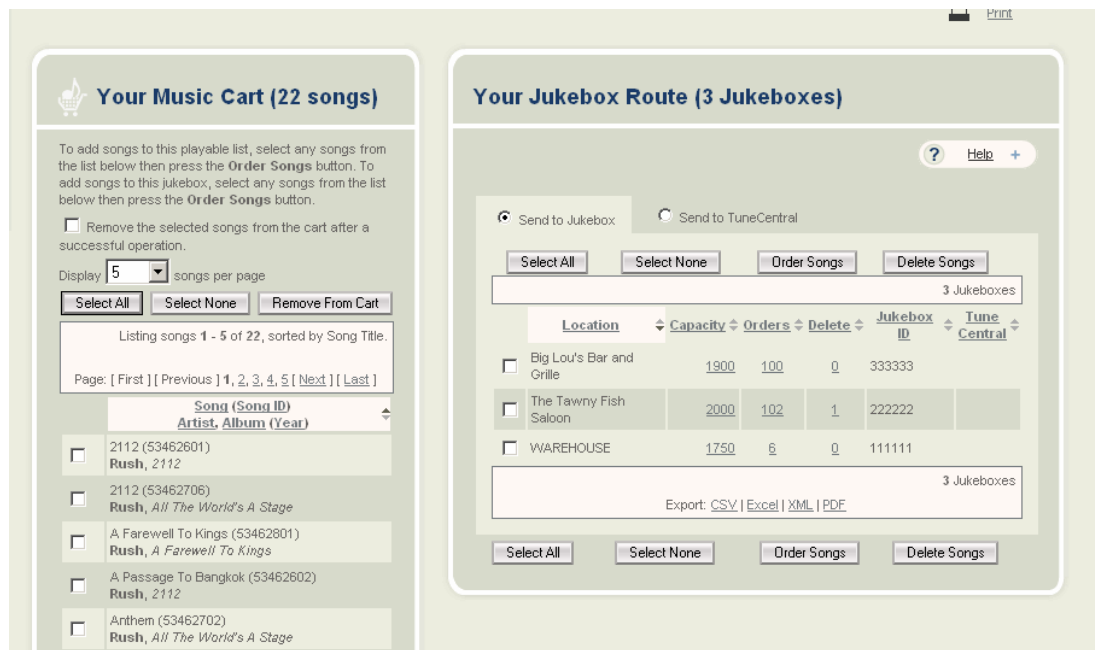 


Figure 14 Music Cart page

2. Do one of the following:

- If your Music Cart is empty, go to step 3 to find the music that you want to remove from your jukeboxes.
- If your Music Cart contains songs, continue to the next step to empty it out before continuing.

Although the Music Cart is usually used to distribute songs to jukeboxes, you can also use it to remove a song or set of songs from multiple jukeboxes. However, you should empty the Music Cart beforehand to prepare for this operation.

3. (Optional) Clean out the contents of the Music Cart by clicking **Select All**, then **Remove From Cart**, and then clicking **OK** when prompted to all the songs in the Cart.

The Music Cart is now empty.

4. Do one of the following to find the music you want to remove from your jukeboxes:

- Find the song(s) on one jukebox that you want removed from other jukeboxes using the procedure in “Viewing Music on a Jukebox” on page 84.
- Find the song(s) on multiple jukeboxes that you want to remove using the procedure in “Viewing Music on a Jukebox” on page 84. DUPE

- Find the song(s) or pre-compiled music list that you want removed from your jukeboxes using any of the search methods listed in the chapter “Locating Music and Sending it to Jukeboxes Using the Dashboard” on page 49.
5. Add the songs to be removed to the Music Cart, using the procedure in “Adding Music for Jukeboxes to the Music Cart” on page 65.
The Music Cart now contains the songs that you want deleted from your jukeboxes.


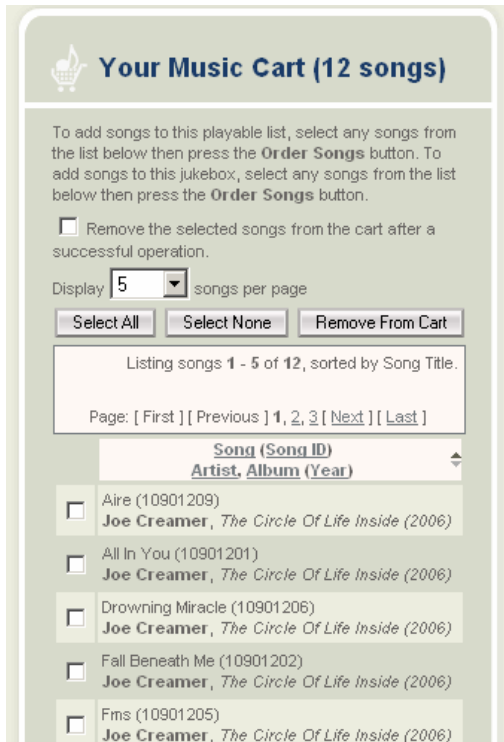 


Figure 15 Music to be removed from jukeboxes in Music Cart

6. (Optional) Enable the **Remove the selected songs...** option to empty the Music Cart automatically once the operation is completed.
Next, select the jukeboxes from which you want to remove the songs in the cart.

 
7. Select the jukebox(es) from which the selected music in the Music Cart will be removed.

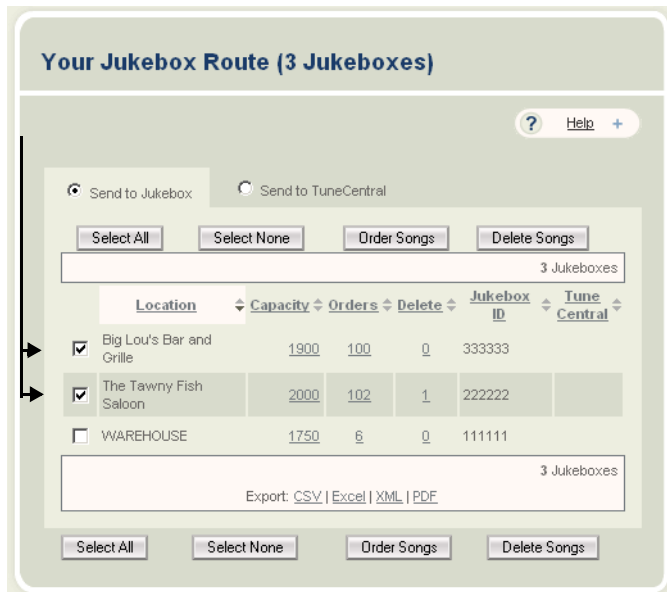


8. You can delete the same set of music in the Music Cart from as many jukeboxes as you like. Click **Select All** to remove the selected music from all of your jukeboxes.

Note: You cannot remove music from the TuneCentral drive of a jukebox.

 9. Click **Delete Songs** to initiate the removal of the songs from the jukebox(es).

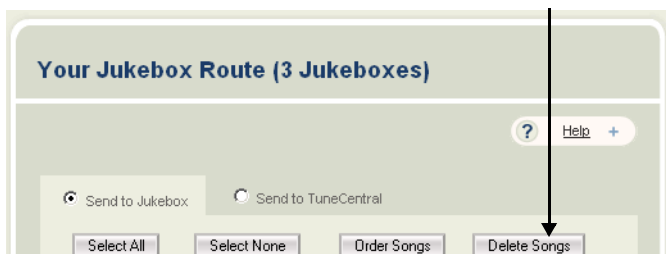

 You are prompted to confirm the removal of the selected songs.

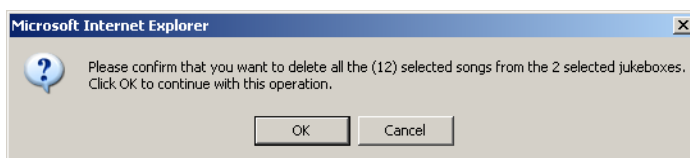

10. When prompted, click **OK**.

The songs are set to be deleted from the jukeboxes and the following indicators appear on the Music Cart page to confirm this operation:

- A message appears at the top of the page.
- The color of the selected jukebox(es) changes to show the jukebox from which the music is being removed.

- The value in the Delete column for the jukebox is incremented by the number of songs being removed.
- The value in the Capacity column for the jukebox is recalculated to show the remaining capacity of the jukebox.

✓ 12 songs were successfully queued for **deletion** from 2 Jukeboxes.

Your Music Cart (0 songs)

There are no songs in your music cart. To add songs to your cart, use our [Search engine](#) or browse our [Hot Lists](#): Top 100, Sylvie's Picks, Special events or Hot New Releases. You can also add songs to your Music Cart from the [Top Songs](#) report, which gives you top played songs on your jukeboxes route.

To order songs for one or more jukeboxes, add songs to your cart, select jukeboxes in the right side column then click the **Order Songs** button.

To delete songs on one or more jukeboxes, add songs to your cart, select jukeboxes in the right side column then click the **Delete Songs** button.

To view pending songs transactions (orders and deletes) for one jukebox, click the number in the **Orders** or **Delete** columns.

To add songs to one or more playable lists, add songs to your cart, select playable lists in the right side column then click the **Copy Songs** button.

To delete songs from one or more playable

Your Jukebox Route (3 Jukeboxes)

? Help +

☒ Send to Jukebox ☐ Send to TuneCentral

Select All Select None Order Songs Delete Songs

3 Jukeboxes

	Location	Capacity	Orders	Delete	Jukebox ID	Tune Central
<input type="checkbox"/>	Big Lou's Bar and Grille	1897	103	18	333333	
<input type="checkbox"/>	The Tawny Fish Saloon	2000	105	14	222222	
<input type="checkbox"/>	WAREHOUSE	1750	6	1	111111	

3 Jukeboxes

Export: [CSV](#) | [Excel](#) | [XML](#) | [PDF](#)

Select All Select None Order Songs Delete Songs

Figure 16 Confirmation of deletion of songs from multiple jukeboxes

Tip: You can view a list of the songs to be deleted from the jukebox from the Pending Transactions page in the Dashboard, in case you deleted a song by accident.

Music deletions appear to occur instantly in the TouchTunes Dashboard. While this is generally the case with broadband-connected Gen 3 jukeboxes, jukeboxes that connect through a dial-up connection only delete the selected music the next time they connect to the TouchTunes server. This may result in a lag of up to 24 hours from the time you initiate the removal to the time when the music is deleted from the jukebox.

8

Managing Jukebox Income Using the TouchTunes Dashboard

This chapter explains how you can set up your revenue model for a location through the TouchTunes Dashboard, track how much revenue is being brought in by a location, and manage split values between you and a location owner.

Contents

<i>Overview</i>	<i>97</i>
<i>Configuring the Revenue Model for a Jukebox</i>	<i>98</i>
<i>Reviewing Jukebox Revenue</i>	<i>114</i>

Overview

A *revenue model* is a term used to refer to the set of rules that determine how a jukebox earns its income. The two general components of a revenue model include:

- Income derived from customers paying to play songs or use services (such as TuneCentral) on a jukebox.
- Expenses required to run the jukebox (also called *splits* or *off-the-top* fees), such as the amount paid to a location owner to cover costs like electricity, as well as their return for the space in their establishment provided for the jukebox.

You can use the TouchTunes Dashboard to set up a revenue model for each of your jukeboxes, as well as monitor statistics that show how well your model is working. Using the Dashboard for these tasks allows you to quickly readjust your jukebox's revenue model and maximize your income for a location.

For example, assume that you install one of your jukeboxes in a new downtown bar. To generate interest around the jukebox at this location, you set the price per song at a low level to

encourage people to use the jukebox. Over the next month, you follow revenue- and play-related statistics for the jukebox using the Dashboard and notice that it is now being used throughout the day. This indicates that the bar's clientele are using the jukebox more regularly. Since you now feel more certain about the long-term success of the jukebox at this location, you raise the price per song to maximize the income this jukebox is generating.

In this chapter, you will find answers to the following questions:

- "How do I use the TouchTunes Dashboard to set up the revenue model (credit rules, Play Next! & TuneCentral credit settings, off-the-top fees and billing splits) for a jukebox?" (p. 98)
- "What are credits and credit rules? How do I set up the credit rules for a jukebox in the TouchTunes Dashboard?" (p. 99)
- "How do I set the cost of Play Next! and TuneCentral through the TouchTunes Dashboard?" (p. 106)
- "Can I set up splits and off-the-top values for my collections using the TouchTunes Dashboard?" (p. 111)
- "Can I view, track and verify location earnings through the TouchTunes Dashboard?" (p. 114)
- "How do I view revenue for my jukeboxes using the TouchTunes Dashboard?" (p. 115)
- "How do I view the revenue in my jukeboxes waiting to be collected using the TouchTunes Dashboard?" (p. 120)
- "How do you track the number of plays for a jukebox through the TouchTunes Dashboard?" (p. 122)
- "Can I check the location take for a jukebox in the TouchTunes Dashboard?" (p. 123)

Configuring the Revenue Model for a Jukebox

How do I use the TouchTunes Dashboard to set up the revenue model (credit rules, Play Next! & TuneCentral credit settings, off-the-top fees and billing splits) for a jukebox?

You use the TouchTunes Dashboard to configure every aspect of the revenue model for your jukeboxes, including the prices for credits and the cost for using Play Next! or TuneCentral. Once your jukebox is operating, you use the Dashboard to adjust its revenue model and maximize your revenue opportunities for the location.

The following procedure shows the general steps involved in setting up a revenue model for a jukebox. Follow these steps in order when you are setting up a jukebox for the first time. Once the jukebox is running, you can perform any individual step at a later date to adjust its revenue model.

To configure the revenue model for a jukebox:

1. Create or modify credit rules that determine the cost per jukebox credit for the location. See "Setting Up the Credit Rules for a Jukebox" on page 99.
Jukebox credits are the "currency" required for customer to play songs, bump up their song's priority in the list or vote for popular music. You set up rules that define the exchange rate between coinage (dollars and coins) and jukebox credits.

2. Set the Play Next! and TuneCentral credit structure for the jukebox. See “Configuring Play Next! and TuneCentral Credit Settings” on page 106.
Play Next! and TuneCentral are two of the most popular features on TouchTunes jukeboxes. You use the Dashboard to configure the cost of these features for a jukebox to enhance jukebox usage and revenue.
3. For Gen 3 jukeboxes, set the billing splits and off-the-top values for the jukebox to refine your revenue model further. See “Setting Billing Splits and Off-The-Top Fees” on page 111.

Setting Up the Credit Rules for a Jukebox

What are credits and credit rules? How do I set up the credit rules for a jukebox in the TouchTunes Dashboard?

All functions for a jukebox are priced in *jukebox credits*, which is a virtual currency used for pricing and paying for services on a TouchTunes jukebox. Customers exchange their real money for credits according to a pre-set exchange rate called a *credit rule* that you set for the jukebox. The credit rule is the most critical component of a revenue model because it determines the price of a song, and has a major resulting impact on the usage and profitability of a jukebox. You can use the TouchTunes Dashboard to set up, review and modify the credit rule(s) for a jukebox. Managing your credit rules using the Dashboard allows you to quickly adjust the revenue model for a jukebox and maximize your revenue for a location. For example, you can create or adjust a credit rule to increase usage of the jukebox, such as reducing the price of songs during Happy Hour. You can also adjust credit rules to take advantage of special events that attract many people to a location, such as Superbowl Sunday.


NextGen and Gen 3 jukeboxes have separate procedures for setting up credit rules through the TouchTunes Dashboard.

- To set up credit rules on NextGen jukeboxes, see “To create or modify credit rules for NextGen jukeboxes:” on page 99.
- To set up credit rules on Gen 3 jukeboxes, see “To modify the credit rule for Gen 3 jukeboxes:” on page 103.

To create or modify credit rules for NextGen jukeboxes:

1. In the TouchTunes Dashboard, choose **My Jukeboxes | Settings**.
The Music & System Settings page appears, which is the default page for jukebox settings. You use this page to select the jukebox that you want to configure.

 2. If necessary, select the jukebox whose credit rules you want to modify from the **Choose Another Jukebox** list.

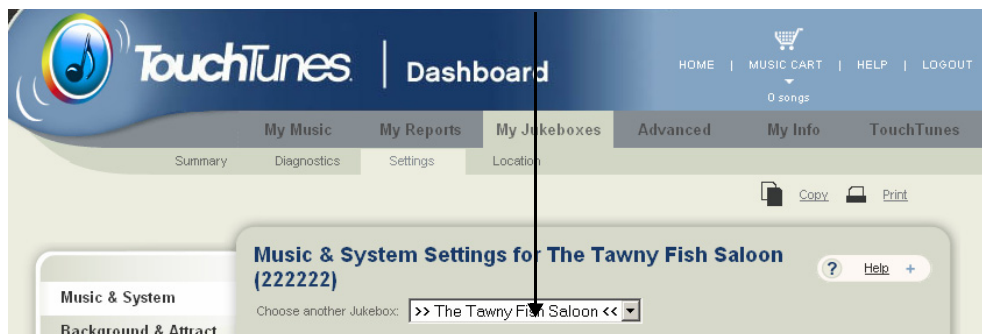

3. Choose **Credits** from the left-side menu.
The Credit Settings page appears. You use the controls on this page to create and manage the credit rules for the jukebox, as well as to set the cost of using the Play Next! and promotional credit settings.

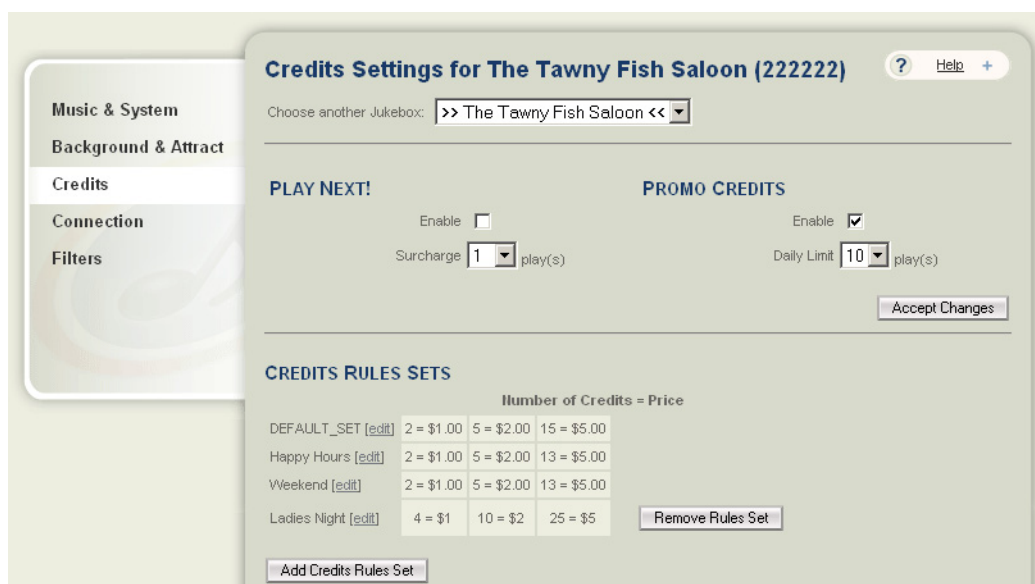 


Figure 9 Credit settings page

4. Navigate to the **Credit Rules Sets** area.

This area shows the credit rules currently in place on a jukebox. The associated **Schedule** area shows when each credit rule is used on the jukebox.

CREDITS RULES SETS

Number of Credits = Price

DEFAULT_SET [edit]	2 = \$1.00	5 = \$2.00	15 = \$5.00
Happy Hours [edit]	2 = \$1.00	5 = \$2.00	13 = \$5.00
Weekend [edit]	2 = \$1.00	5 = \$2.00	13 = \$5.00
Ladies Night [edit]	4 = \$1	10 = \$2	25 = \$5

[Remove Rules Set]

[Add Credits Rules Set]

SCHEDULE

	6:00	7	8	9	10	11	12:00	13	14	15	16	17	18:00	19	20	21	22	23	0:00	1	2	3	4	5	6
Sunday	[Red bar]																								
Monday	[White bar]																								
Tuesday	[White bar]																								
Wednesday	[White bar]																								
Thursday	[White bar]																								
Friday	[White bar]																								
Saturday	[Red bar]																								

[Add period]

LEGEND

- DEFAULT_SET [White box]
- Happy Hours [Blue box]
- Ladies Night [Dark Blue box]
- Weekend [Red box]

Figure 10 Credit Rules and Schedule area

Figure 11

NextGen jukeboxes include the following default credit rules:

- **DEFAULT_SET**: This is the default credit rule used unless otherwise indicated.
- **Weekend**: This is the credit rule set intended for use during the weekend.
- **Happy Hour**: This is the credit rule set intended for use during happy hour (typically 4 PM to 7 PM) on weekdays.

In some cases, you may see additional credit rules set up for a jukebox in this area. For example, the jukebox in this example has a credit rule for the weekly Ladies' Night event that occurs every Wednesday evening at this location.


5. Do one of the following:

- To add a new credit rule, click **Add Credit Rules Set** and continue to the next step.
- To modify a credit rule, click **[edit]** beside the name of the rule and go to step 7.
- To remove a non-default credit rule, click **Remove Rules Set** and confirm the action when prompted.

Note: Make sure you are deleting the right credit rule before confirming the deletion. You cannot recover a credit rule once it is deleted.

6. Enter the name for the new credit rule set in the Rules Set Name field.

Figure 12

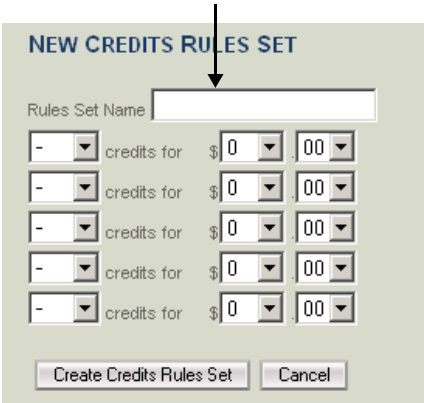

Creating and naming a new credit rule

Tip: Use a descriptive name for a new credit rule as it cannot be renamed once the credit rule is created.

Next, define the credit rule by setting exchange rates between coinage and jukebox credits. You can set up to five exchange rates per credit rule to handle each major coinage denomination (bill or coin) that may be used for the jukebox.

7. Use the controls in the **New Credit Rules Set** or **Edit Credit Rules Set** area(s) to define the exchange rate between coinage and jukebox credits.



Figure 13 Exchange rates modified for an existing credit rule

When you are setting up credit rules, you must make sure that they are *consistent*, meaning that each successive exchange rate in the rule provides at least the same exchange rate as the previous one. You cannot save credit rules for a jukebox that do not meet this rule. To understand this concept, consider the following two credit rules:

Coinage amount:	Credits for inconsistent credit rule:	Exchange Rate (Cost/Credit) for inconsistent credit rule:	Credits for consistent credit rule:	Exchange Rate (Cost/Credit) for consistent credit rule:
\$1	2	50 cents/credit	2	50 cents/credit
\$5	9	55 cents/credit	12	41 cents/credit
\$10	24	42 cents/credit	26	38 cents/credit

Coinage amount:	Credits for inconsistent credit rule:	Exchange Rate (Cost/Credit) for inconsistent credit rule:	Credits for consistent credit rule:	Exchange Rate (Cost/Credit) for consistent credit rule:
\$20	50	40 cents/credit	54	37 cents/credit

The first credit rule is inconsistent because the cost per credit at \$5 (55 cents/credit) is higher than that the cost per credit for the previous entry, \$1 (50 cents/credit). The second credit rule is consistent because the cost per credit for each denomination is at least equal to the one previously.

One guideline you can use to ensure consistency is to use the first line for the credit rule to define the *basic credit rule* (the exchange rate for a single jukebox credit). This helps you compare the cost per credit for successive exchange rates and ensure consistency for the rest of the rule.

Tip: To maximize revenues, avoid setting your basic credit rule at less than two credits for \$1 (each credit equals 50 cents).

- Once you have set up all necessary exchange rates for the credit rule, save it by clicking **Create Credit Rules Set** (for a new credit rule) or **Save Credit Rules Set** (for an existing credit rule).

The credit rule set is saved and the new or updated rule appears in the **Credit Rules Sets** area.

	Number of Credits = Price					
DEFAULT_SET [edit]	2 = \$1.00	5 = \$2.00	15 = \$5.00			
Happy Hours [edit]	2 = \$1.00	5 = \$2.00	13 = \$5.00			
Weekend [edit]	2 = \$1.00	5 = \$2.00	13 = \$5.00	26 = \$10.00	54 = \$20.00	
Ladies Night [edit]	4 = \$1	10 = \$2	25 = \$5			

Buttons: Add Credits Rules Set, Remove Rules Set

If the jukebox is connected through a broadband connection, it is updated when you log out. If the jukebox is connected through a dial-up connection, the credit rule is updated the next time the jukebox connects to the TouchTunes server.

Tip: Make sure you explain the credit rule(s) for a jukebox to the location owner. This allows the location owner to handle customer questions about the price of jukebox credits. Credit rules also appear on the jukebox play screen for easy reference.


- (Optional) Schedule when each credit rule is active on the jukebox using the controls in the **Schedule** area. See "Scheduling Background Music and Attract Modes for a Jukebox" on page 136.

To modify the credit rule for Gen 3 jukeboxes:

- In the TouchTunes Dashboard, choose **My Jukeboxes | Settings**.

The Music Settings page appears, which is the default page for jukebox settings. You use this page to select the jukebox that you want to configure.

 2. If necessary, select the jukebox whose credit rules you want to access from the **Choose Another Jukebox** list.

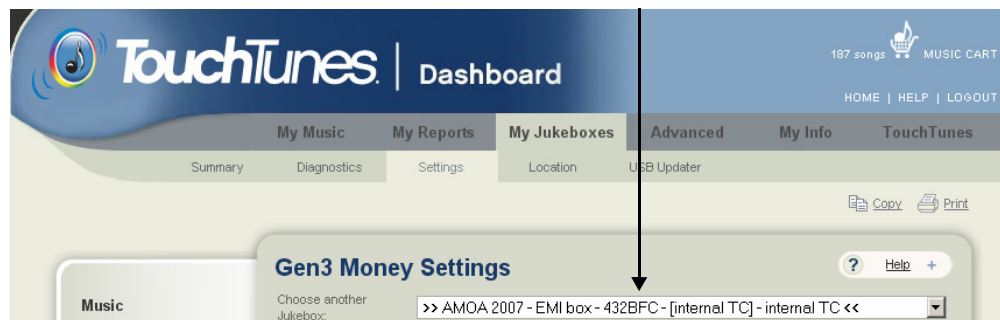

3. Choose **Money** from the left-side menu.
The Gen 3 Money Settings page appears. You use the controls on this page to create and manage the credit rules for the jukebox, as well as to configure its Play Next!, TuneCentral and promotional credit settings.


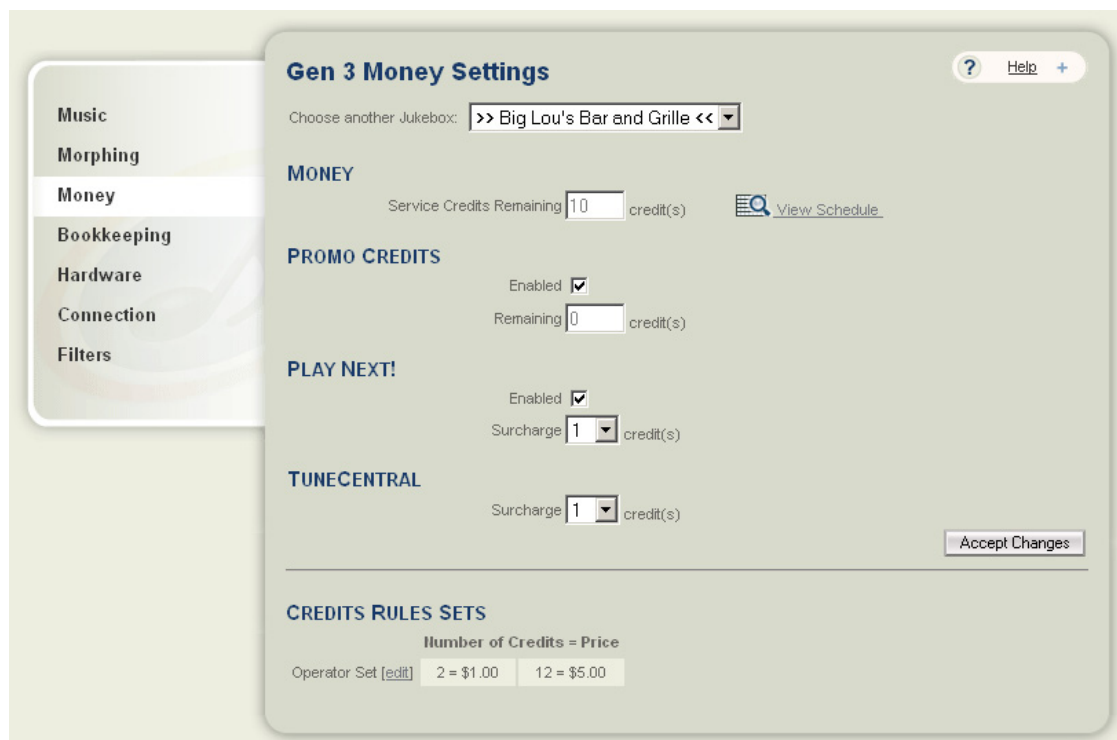 


Figure 14 Money Settings page for a Gen 3 jukebox

4. If necessary, navigate to the **Credit Rules Sets** area.
This area is where you set the default credit rule for the jukebox. Gen 3 jukeboxes support a single default credit rule called the Operator Set.

 5. Click **[edit]** to modify the Operator Set credit rule.

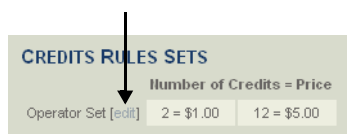

The structure of this credit rule appears. Modify the credit rule by setting exchange rates between coinage and jukebox credits. You can set up to five exchange rates per credit rule to handle each major coinage denomination (bill or coin) that may be used for the jukebox.

6. Use the controls in the **Edit Credit Rules Set** area to define the exchange rate between jukebox credits and coinage.

Figure 15 Exchange rates modified for the default credit rule

When you are setting up credit rules, you must make sure that they are *consistent*, meaning that each successive exchange rate in the rule provides at least the same exchange rate as the previous one. You cannot save credit rules for a jukebox that do not meet this rule. To understand this concept, consider the following two credit rules:

Coinage amount:	Credits for inconsistent credit rule:	Exchange Rate (Cost/Credit) for inconsistent credit rule:	Credits for consistent credit rule:	Exchange Rate (Cost/Credit) for consistent credit rule:
\$1	2	50 cents/credit	2	50 cents/credit
\$5	9	55 cents/credit	12	41 cents/credit
\$10	24	42 cents/credit	26	38 cents/credit
\$20	50	40 cents/credit	54	37 cents/credit

The first credit rule is inconsistent because the cost per credit at \$5 (55 cents/credit) is higher than that the cost per credit for the previous entry, \$1 (50 cents/credit). The second credit rule is consistent because the cost per credit for each denomination is at least equal to the one previously.

One guideline you can use to ensure consistency is to use the first line for the credit rule to define the *basic credit rule* (the exchange rate for a single jukebox credit). This helps you compare the cost per credit for successive exchange rates and ensure consistency for the rest of the rule.

Tip: To maximize revenues, avoid setting your basic credit rule at less than two credits for \$1 (each credit equals 50 cents).

7. Once you have set up all the exchange rates for the credit rule, save the rule by clicking **Save Credit Rules Set**.

The (default) Operator Set credit rule is saved. If the jukebox is connected through a broadband connection, it is updated immediately. If the jukebox is connected through a dial-up connection, the credit rule is updated the next time the jukebox connects to the TouchTunes server.

CREDITS RULES SETS	
Number of Credits = Price	
Operator Set [edit]	2 = \$1.00 12 = \$5.00 24 = \$10.00 56 = \$20.00
Pending change; Current jukebox value is	2 = \$1.00 12 = \$5.00

Figure 16 Updated credit rule applied for the TouchTunes jukebox

Configuring Play Next! and TuneCentral Credit Settings

How do I set the cost of Play Next! and TuneCentral through the TouchTunes Dashboard?

Play Next! and TuneCentral are two premium TouchTunes jukebox features that require additional credits to access. Play Next! makes the selected song the next song played in the queue, while TuneCentral allows access to a larger library of songs than what is available on the standard hard drive of the jukebox.

You can set the cost for Play Next! and TuneCentral using the TouchTunes Dashboard. Using the Dashboard for this allows you to modify the costs for these services and maximize revenue for a jukebox without having to visit the location.

NextGen and Gen 3 jukeboxes have separate procedures for configuring Play Next! and TuneCentral costs through the TouchTunes Dashboard.


- To set the credits required for Play Next! and TuneCentral on a NextGen jukebox, see “To configure Play Next! credit settings for a NextGen jukebox:” on page 106 and/or “To configure TuneCentral credit settings for a NextGen jukebox:” on page 108.
- To set the credits required for Play Next! and TuneCentral on a Gen 3 jukebox, see “To configure Play Next! and TuneCentral credit settings for a Gen 3 jukebox:” on page 109.

To configure Play Next! credit settings for a NextGen jukebox:

1. In the TouchTunes Dashboard, choose **My Jukeboxes | Settings**.

The Music & System Settings page appears, which is the default page for jukebox settings. You use this page to select the jukebox that you want to configure.

 - If necessary, select the NextGen jukebox whose Play Next! credit settings you want to access from the **Choose Another Jukebox** list.

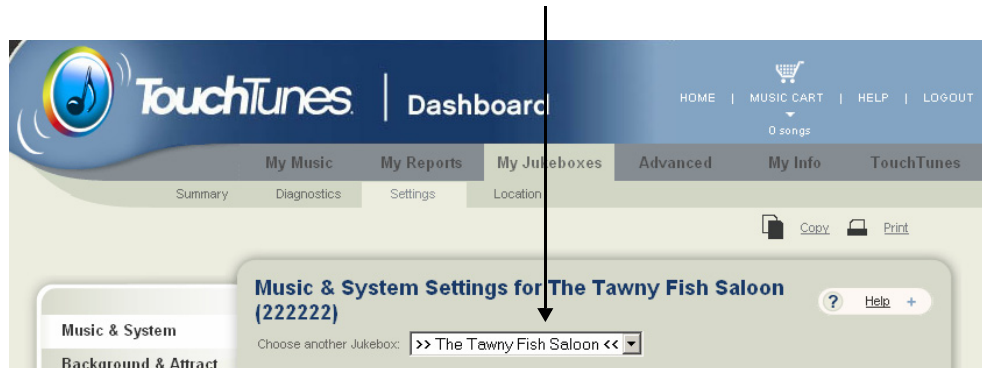

- Choose **Credits** from the left-side menu. The Credit Settings page appears. You use this page to set the cost of using Play Next! on the jukebox.

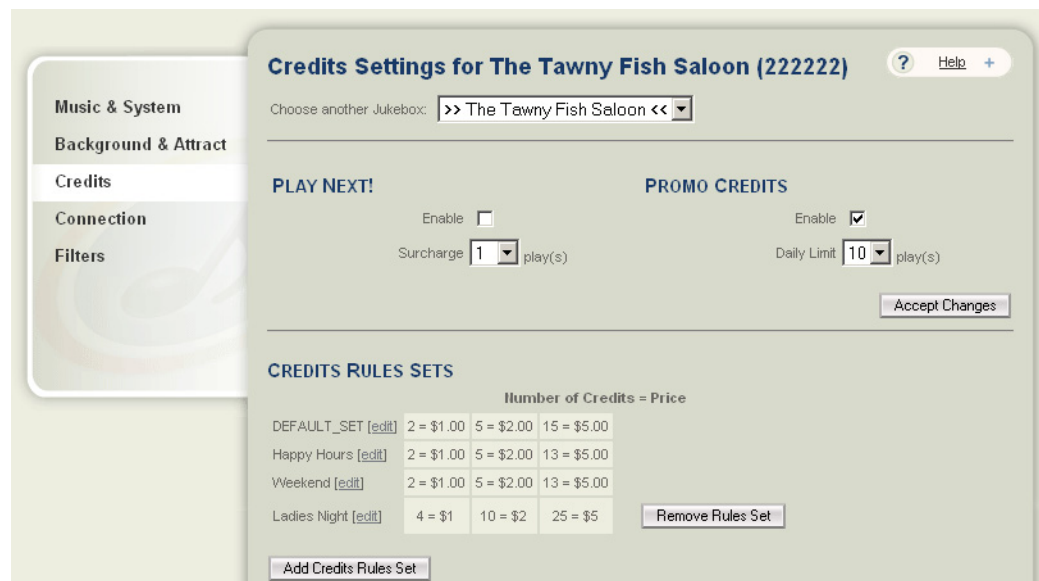 


Figure 17 Credit settings page for a Gen 3 jukebox

- Enable **Play Next!** to activate this feature on the jukebox. When this option is unchecked, the Play Next! feature is not available on the jukebox.
- Use the **Surcharge** list to set the additional cost in credits to use Play Next!.

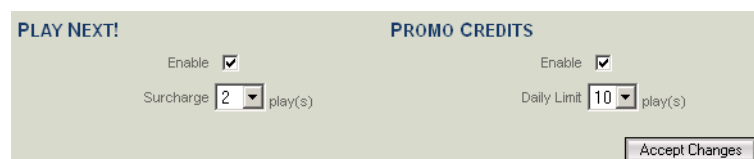 



Figure 18 Play Next! enabled and cost set to 2 credits

The Play Next! **Surcharge** list sets the additional cost in credits for using this feature. For example, if the cost to play a song on the jukebox is 1 credit, and the Play Next! surcharge is 2 credits, the total cost for having the song play next is 3 credits.

6. Click **Accept Changes** to save the Play Next! credit settings for the jukebox.
The Play Next! credit settings for the jukebox are updated.

To configure TuneCentral credit settings for a NextGen jukebox:

1. In the TouchTunes Dashboard, choose **My Jukeboxes | Settings**.
The Music & System Settings page appears, which is the default page for jukebox settings. You use this page to select the jukebox that you want to configure.
2. If necessary, select the jukebox whose TuneCentral credit settings you want to access from the **Choose Another Jukebox** list.

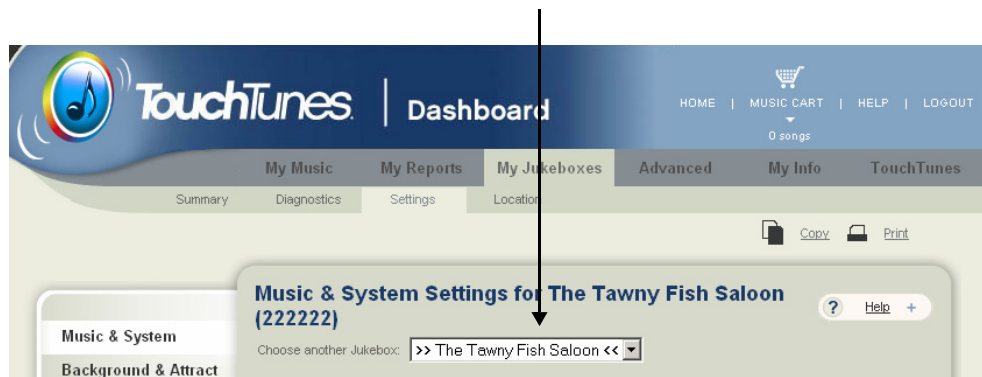 

3. Navigate to the **TuneCentral Feature** area on the page.
4. Do the following to configure the TuneCentral for the jukebox:
 - If necessary, enable **TuneCentral** to activate this feature on the jukebox.
 - Use the **Price** list to set the additional cost in credits for playing a song on TuneCentral.
 - If necessary, enable **Daily Update** to update TuneCentral during the daily communications period between the jukebox and the TouchTunes server.




Figure 19 TuneCentral enabled with the cost set to 2 credits

The TuneCentral **Price** list sets the additional cost in credits for using this feature. For example, if the cost to play a song on the jukebox is 1 credit, and the cost for using TuneCentral is 3 credits, the total cost for having the song play next is 4 credits.

5. Click **Accept Changes** to save the TuneCentral credit settings.
The TuneCentral credit settings for the jukebox are updated.

To configure Play Next! and TuneCentral credit settings for a Gen 3 jukebox:

1. In the TouchTunes Dashboard, choose **My Jukeboxes | Settings**.
The Music & System Settings page appears, which is the default page for jukebox settings. You use this page to select the jukebox that you want to configure.
2. If necessary, select the jukebox whose Play Next! and TuneCentral settings you want to access from the **Choose Another Jukebox** list.

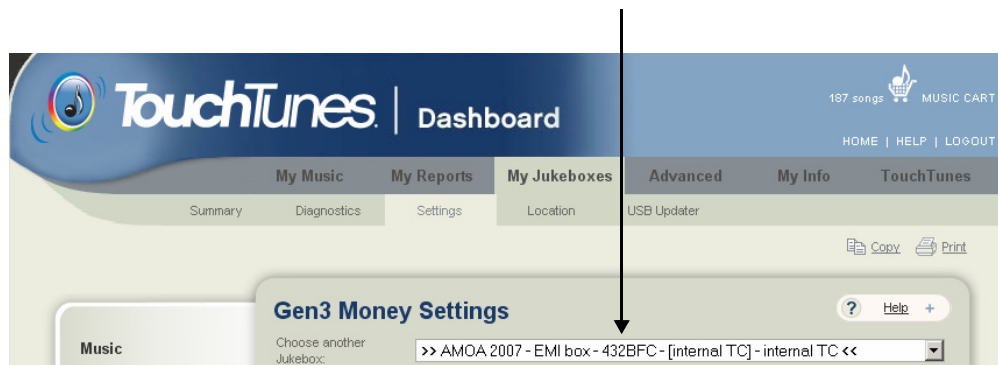 

3. Choose **Money** from the left-side menu.

The Gen 3 Money Settings page appears. You use the controls on this page to configure its Play Next! and TuneCentral credit settings, as well as manage the credit rules for the jukebox.

Figure 20 Gen 3 Money Settings page for a Gen 3 jukebox

4. In the **Play Next!** area, do the following to set the cost of using the Play Next! feature:
 - If necessary, enable **Play Next!** to activate this feature on the jukebox.
 - Use the **Surcharge** list to set the additional cost in credits to use Play Next!.

Figure 21 Play Next! enabled and cost set at 2 credits

When the **Play Next!** option is unchecked, the Play Next! feature is not available on the jukebox. The Play Next! **Surcharge** list sets the additional cost in credits for using this feature. For example, if the cost to play a song on the jukebox is 1 credit, and the Play Next! surcharge is 2 credits, the total cost for having the song play next is 3 credits.

5. Set the additional cost to use TuneCentral (in credits) using the **Surcharge** list in the **TuneCentral** area.

Figure 22 TuneCentral cost set to 2 credits

The TuneCentral **Surcharge** list sets the additional cost in credits for using this feature. For example, if the cost to play a song on the jukebox is 1 credit, and the cost for using TuneCentral is 3 credits, the total cost for having the song play next is 4 credits.

6. Click **Accept Changes** to save the Play Next! and TuneCentral credit settings for the jukebox. The Play Next and TuneCentral credit settings for the jukebox are updated.

Setting Billing Splits and Off-The-Top Fees

Can I set up splits and off-the-top values for my collections using the TouchTunes Dashboard?

The income from each jukebox is divided based on your relationship and contract with the location owner. In most cases, jukebox income is subject to off-the-top fees and billing splits. An *off-the-top fee* is an amount charged for the use of the jukebox and/or TuneCentral. Fees are deducted “off-the-top” from the gross jukebox income first, and then the remaining income may be divided between you and the location owner according to an agreed percentage called a *billing split*.

You can use the TouchTunes Dashboard to set your off-the-top fees and billing split for a Gen 3 jukeboxes. Setting this information up in the Dashboard simplifies the division of income when collecting jukebox revenue. Once the off-the-top values and billing split for a jukebox is set up, you can use the Dashboard to calculate the operator and location take of the income.

To set billing splits and off-the-top fees:

1. In the TouchTunes Dashboard, choose **My Jukeboxes | Settings**.
The Music & System Settings page appears, which is the default page for jukebox settings. You use this page to select the jukebox that you want to configure.
2. If necessary, select the jukebox whose billing split and off-the-top fees you want to access from the **Choose Another Jukebox** list.
3. Choose **Bookkeeping** from the left-side menu.

The Gen 3 Bookkeeping Settings page appears.

Figure 23 Bookkeeping Settings page for a Gen 3 jukebox

You use the controls on this page to set the off-the-top values and billing split for your jukebox.

Note: This Dashboard page is not available for Gen 1 or NextGen jukeboxes.

4. Set the billing split for the location as a percentage in the **Billing Split Settings** area by doing one of the following:
 - Drag the slider to the appropriate value.
 - Enter the percentage in the **Location Percentage** field.

Figure 24 Billing split set to 33% for location

When you modify one control in this area, the other control is updated automatically. Next, enter the values for the jukebox and/or TuneCentral off-the-top fees. You can configure these fees as a fixed amount, as a percentage of the coinage (gross income from the jukebox) or as a fee per play.

5. If you are setting an off-the-top fee for the jukebox, do the following in the **Jukebox Off-The-Top** area:
 - From the **Rule Type** list, select the method used to calculate this fee.

- Set the fee amount or percentage value in the field provided.



Figure 25 Jukebox off-the-top fee set to \$100

Note: You can set the off-the-top fee for a jukebox as a percentage of its revenue, a price per play, or a fixed amount to match your specific business model.

- If you are setting an off-the-top fee for TuneCentral, do the following in the **TuneCentral Off-The-Top** area:
 - From the **Rule Type** list, select the method used to calculate this fee.
 - Set the fee amount or percentage value in the field provided.



Figure 26 TuneCentral off-the-top fee set to 50 cents per play

You have set up the billing split and off-the-top values for the jukebox. Now apply these changes to the jukebox.

- Click **Accept Changes**.

The Gen 3 Money Settings page reappears to confirm that these values are applied to the jukebox.

Gen 3 Bookkeeping Settings ? Help +

✓ Settings successfully saved.

Choose another Jukebox: >> Big Lou's Bar and Grille <<

BILLING SPLIT SETTINGS

Location Percentage: 33 %

JUKEBOX OFF THE TOP

100.0
Rule Type: \$ (Fixed)

TUNECENTRAL OFF THE TOP

0.5
Rule Type: \$ per Play

Accept Changes

BILLING SPLIT EXAMPLE

Highlighted fields can be modified to customize this example.

Jukebox Coinage	\$ 100.00	from 100 plays	Location Split \$ 33.00
Jukebox Off the Top	- \$ 100.00		
TuneCentral Coinage	+ \$ 150.00	from 100 plays	Operator Split \$ 67.00
TuneCentral Coinage Off the Top	- \$ 50.00		
To Be Split	= \$ 100.00		

Figure 27 Billing split and off-the-top fees set for a Gen 3 jukebox

When you collect revenue for this jukebox, you can use the **Billing Split Example** area on this page (or on the jukebox itself) to calculate the off-the-top fees and splits.

Note: The amounts entered for the billing split and off-the-top fees do not appear when you view jukebox revenues on the jukebox itself. Only the location and operator splits appear on the jukebox.

8. Use the **Billing Split Example** area to calculate off-the-top fees and splits. See “Checking a Location’s Take from a Gen 3 Jukebox” on page 123.

Reviewing Jukebox Revenue

Can I view, track and verify location earnings through the TouchTunes Dashboard?

Every TouchTunes jukebox reports certain revenue-related statistics to the TouchTunes server daily. You can use the TouchTunes Dashboard to view your jukebox revenues, as well as to calculate your collections and verify the location’s take from jukebox revenue.

Using the Dashboard to follow your jukebox revenues allows you to assess how well your revenue model is working and identify any changes required to maximize income. For example, assume that you notice that one of your jukeboxes has experienced a spike in the number of plays but that the revenue has not risen accordingly. You investigate and discover that the bar where the jukebox is located launched a promotion that is attracting a large number of customers on the weekend. Once you are aware of this promotion, you can adjust the revenue model for the jukebox to take advantage of this weekend promotion and maximize revenues for your jukebox during this time.

The following sections explain how you can review the revenue generated by your jukeboxes:

- To view a summary or detailed breakdown of jukebox revenues over a certain time period, see “Viewing Jukebox Revenue” on page 115.
- To review the number of plays for a jukebox, see “Tracking Jukebox Plays” on page 122.
- To calculate and/or verify the location take from a Gen 3 jukebox, see “Checking a Location’s Take from a Gen 3 Jukebox” on page 123.

Viewing Jukebox Revenue

How do I view revenue for my jukeboxes using the TouchTunes Dashboard?

You can view the revenue for any of your jukeboxes using the TouchTunes Dashboard. You can view a high-level summary showing revenues from all your jukeboxes, as well as a detailed revenue breakdown for each individual jukebox over a certain time period.

To view jukebox revenue:

1. In the TouchTunes Dashboard, choose **My Reports | Revenues**.

The Revenues page appears.

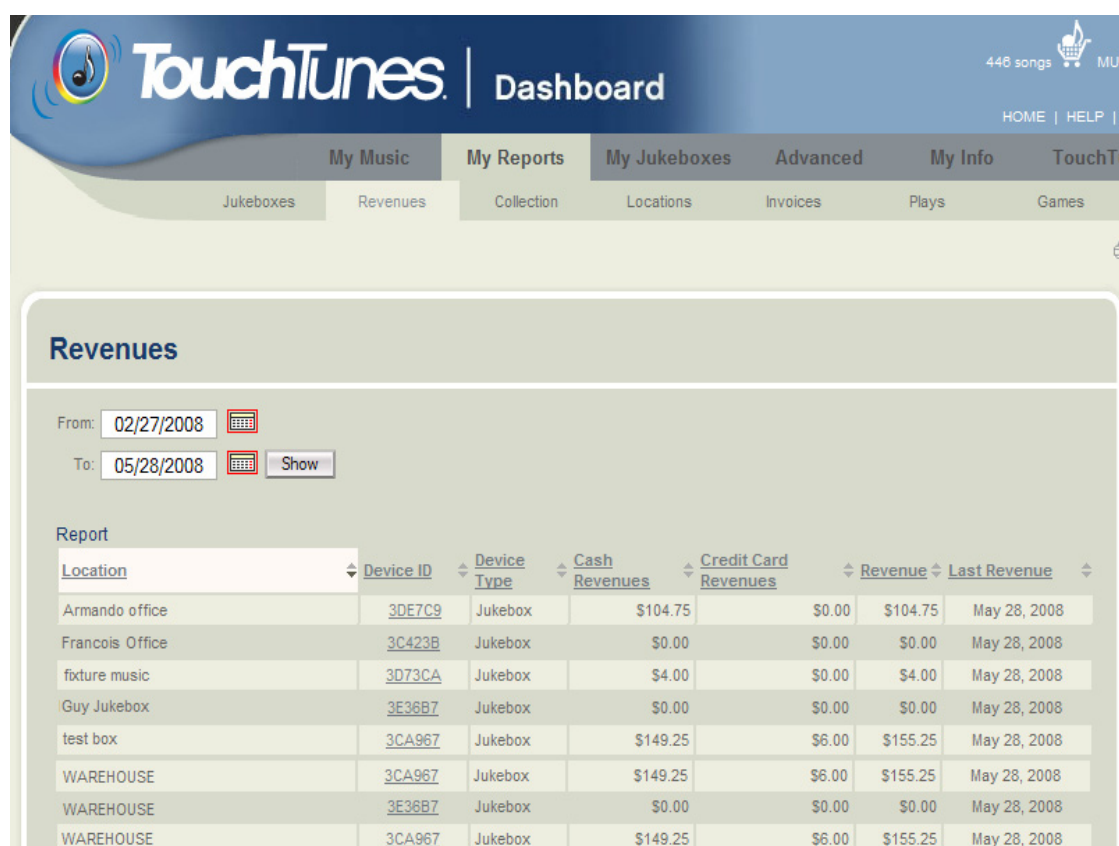 


Figure 28 The Revenues page

The **Report** area on this page shows a revenue summary for all your jukeboxes, which shows revenue for the last 90 days by default. You can adjust this page to reflect the revenues earned over a specified time period. You also use this area to access a detailed revenue breakdown for a jukebox.

2. If necessary, set the time period over which you want to view jukebox revenues by clicking the calendar icon beside the **From** and **To** fields to set the starting and ending date for the revenue summary.
3. Click **Show**.

The Dashboard recalculates the jukebox revenues for the selected time period and updates the Revenues page.

The following table explains the content of the revenue summary report in the **Report** area:

Column:	Description:
Location	The name of the location for the jukebox.
Device ID	The ID number of the jukebox or PlayPorTT.
Device Type	Jukebox or PlayPorTT
Cash Revenues	The total revenue that has come from bills and coins.

Column:	Description:
Credit Card Revenues	The total revenue that has come from credit cards.
Revenue	The total revenue earned by the jukebox over the specified time period.
Last Revenue	The date when the jukebox last reported its revenue to the TouchTunes server.

4. (Optional) Re-order the information in the report by clicking a column heading.



Figure 29 Report reordered by revenue in descending order

Tip: The arrow icons beside the column name shows whether the information is sorted in ascending or descending order.

- Do one of the following additional options:
 - Export the revenue summary for all jukeboxes, by going to step 11.
 - View a detailed breakdown of revenue for a single jukebox, by continuing to the next step.
- In the **Reports** area, click the ID of the jukebox for which you want to view a detailed revenue breakdown.

The Revenue Details page appears. You use this page to view a detailed breakdown of revenue for an individual jukebox.

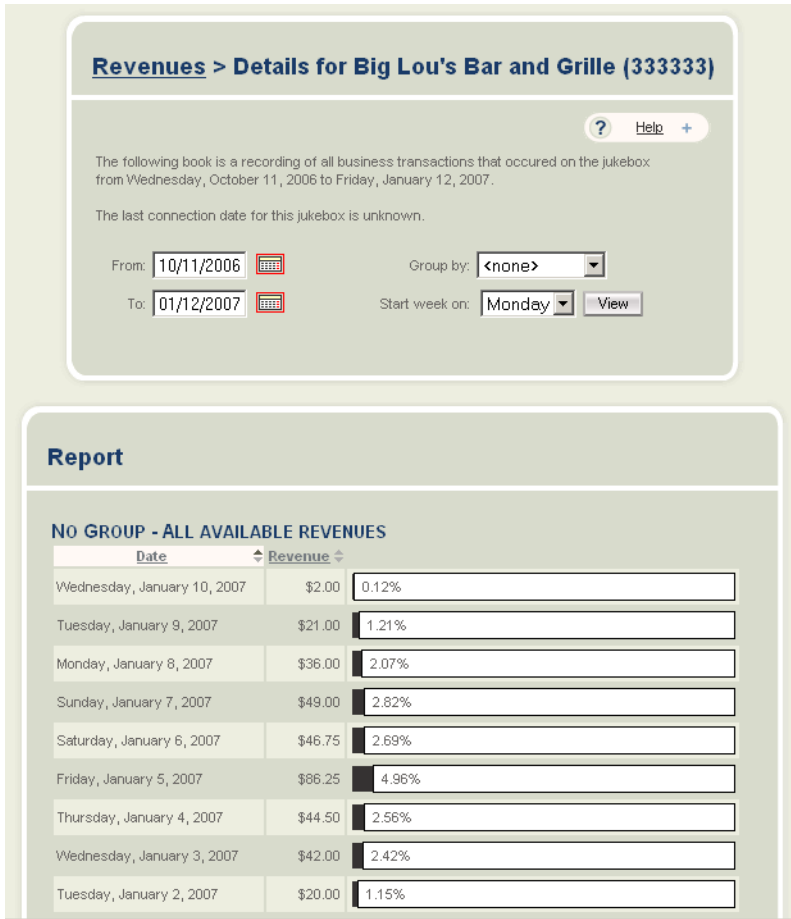 


Figure 30 Revenue Details page

By default, this page shows the amount of revenue earned by the jukebox each day over the period you specified earlier. Each daily amount is also displayed as a bar graph showing the percentage of the total revenue earned by the jukebox during this day.

A **Summary** area also appears at the end of the list showing the total revenue, daily average and group average calculated for the selected time period.



Figure 31 Summary for a detailed revenue breakdown

7. If necessary, set the time period over which you want to view the detailed revenue breakdown by clicking the calendar icon beside the **From** and **To** fields to set its starting and ending dates.

The report is updated and shows the income earned by the jukebox during the specified time period.

You can also reorganize the revenue information in the report by consolidating it into specific groups. The following table shows the different methods of grouping revenue information.

Grouping method:	Description:
None	Revenue is not grouped; each day's revenue is shown individually.
Day of Month	Revenue is grouped by day of the month (1st-31st).
Week	Revenue is grouped by week.
Week Day	Revenue is grouped by weekday (Monday to Sunday).
Month	Revenue is grouped by month.
Quarter	Revenue is grouped by calendar quarter.
Year	Revenue is grouped by year.

8. Set the method by which want to group revenue using the **Group By** list.

The screenshot shows a web application interface for reviewing jukebox revenue. The title is "Revenues > Details for Big Lou's Bar and Grille (333333)". Below the title, there is a help icon and a "+" icon. The main content area contains text explaining that the following book is a recording of all business transactions that occurred on the jukebox from Wednesday, October 11, 2006 to Friday, January 12, 2007. It also states that the last connection date for this jukebox is unknown. Below this text, there are two date pickers: "From: 10/11/2006" and "To: 01/12/2007". To the right of these date pickers, there is a "Group by:" dropdown menu. The dropdown menu is open, showing a list of options: "<none>", "day of month", "week" (which is highlighted), "week day", "month", "quarter", and "year". An arrow points from the "week" option in the dropdown menu to the "Group by:" label. To the right of the dropdown menu, there is a "View" button.

9. From the **Start Week On** list, set whether the starting day of the week is a Sunday or a Monday.
10. Click **View** to re-generate the revenue breakdown for the jukebox using the settings that you defined.

The detailed revenue breakdown is regenerated using the settings selected in steps 7 to 9.

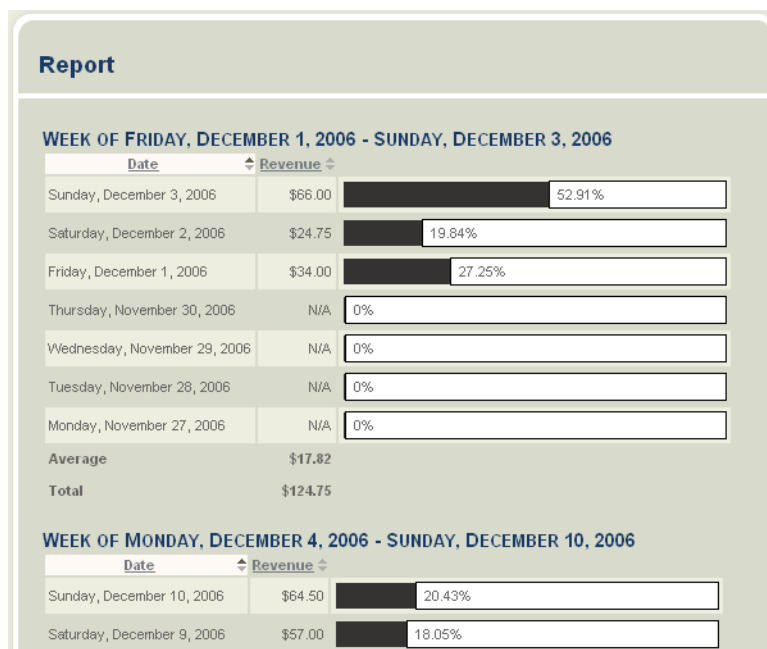 


Figure 32 Detailed breakdown of jukebox revenue grouped by week

11.(Optional) Export the revenue summary or breakdown from the TouchTunes Dashboard to any of the file formats listed at the bottom of the **Search Results** area.

Note: You cannot export a detailed revenue breakdown that is grouped.

Viewing Uncollected Jukebox Revenue


How do I view the revenue in my jukeboxes waiting to be collected using the TouchTunes Dashboard?

You can view the uncollected revenue for any of your jukeboxes using the TouchTunes Dashboard. You can view a high-level summary showing uncollected revenues from all your jukeboxes, as well as a detailed revenue breakdown for each individual jukebox. The detailed summary for a single jukebox contains information about how much revenue has been generated from coins, bills and credit cards as well as how many bills have been rejected.

To view the uncollected revenue of your jukeboxes or a single jukebox:

- In the TouchTunes Dashboard, choose **My Reports | Collection**.

The **Revenues Since Last Collection** page appears with a summary report of uncollected revenue on all your jukeboxes.

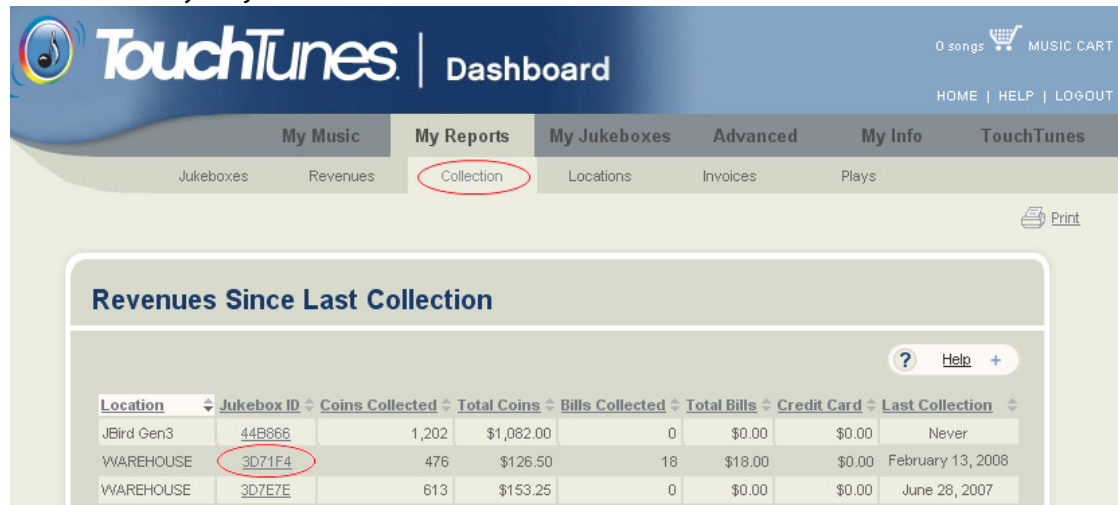

Location	Jukebox ID	Coins Collected	Total Coins	Bills Collected	Total Bills	Credit Card	Last Collection
JBird Gen3	44B866	1,202	\$1,082.00	0	\$0.00	\$0.00	Never
WAREHOUSE	3D71F4	476	\$126.50	18	\$18.00	\$0.00	February 13, 2008
WAREHOUSE	3D7E7E	613	\$153.25	0	\$0.00	\$0.00	June 28, 2007

Figure 33 Revenues Since Last Collection summary report

- To view the income breakdown of the revenue awaiting collection of a specific jukebox, click its ID under the Jukebox ID heading.



Collection > Details for WAREHOUSE (3D71F4)			
Coins Collected			
Coins Value	Count	Amount	
0.25	466	\$116.50	
1.00	10	\$10.00	
Total	476	\$126.50	
Export: CSV Excel XML PDF			
Bills Collected			
Bills Value	Count	Amount	
1.00	18	\$18.00	
Total	18	\$18.00	
Export: CSV Excel XML PDF			
Miscellaneous			
Rejected bills: 27		Credit Card: 0.00\$	

Figure 34 A detailed view of the revenue awaiting collection on a specific jukebox

Tracking Jukebox Plays

How do you track the number of plays for a jukebox through the TouchTunes Dashboard?

You can use the TouchTunes Dashboard to view a report showing the number of plays per week for your jukeboxes. This report also breaks down plays into categories so you can see what features of the jukebox are being used most. You can use this feature to identify excessive free plays or decreasing paid plays for a jukebox.

To view the plays for a jukebox:

1. In the TouchTunes Dashboard, choose **My Reports | Plays**.

The Plays page appears. This page shows a weekly report of play-related statistics for the selected jukebox.

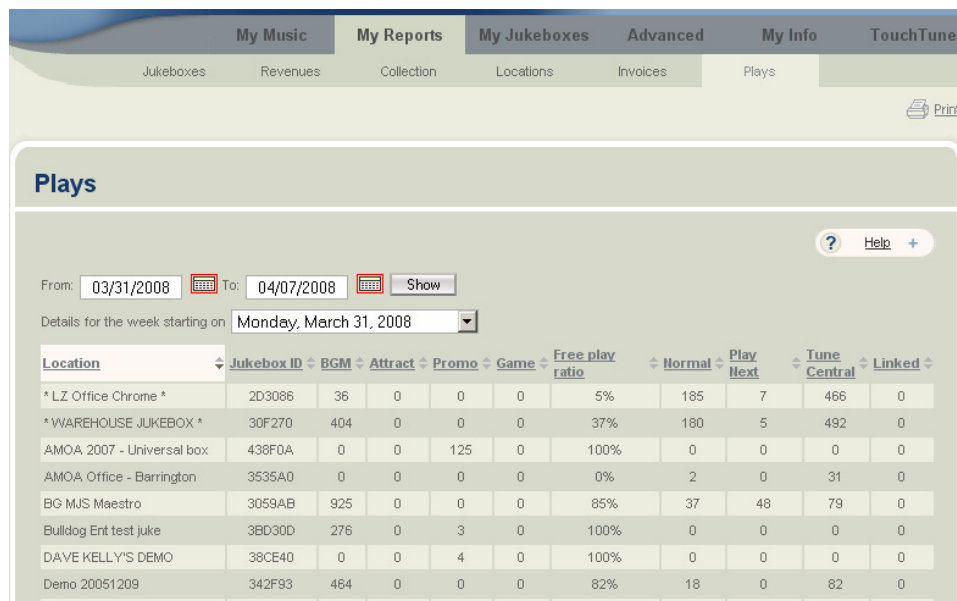 


Figure 35 Plays page


Use the following table to interpret this report.

Column:	Description:
Location	The name of the location for the jukebox.
Jukebox ID	The ID number of the jukebox.
BGM	Number of plays when jukebox is running in background music mode.
Attract	Number of plays when jukebox is running in attract mode.
Promo	Number of promotional plays used on the jukebox.
Game	Number of free plays won from the games on the jukebox.
Free play ratio	Ratio of free plays (including promotional, TuneCentral and other free plays) to total plays as a percentage.
Normal	Number of normal (paid) plays on the jukebox.

Column:	Description:
Play Next	Number of times Play Next! was used.
TuneCentral	Number of plays from TuneCentral.
Linked Games	Number of plays from other systems linked to the jukebox, such as a Merit or JVL countertop system.

Tip: You can re-order the play information in the report by clicking a column heading. The arrow icon beside the column name shows whether the information is sorted in ascending or descending order.

 2. (Optional) Choose the week for which you want to view play related statistics, and then choose **Show**.

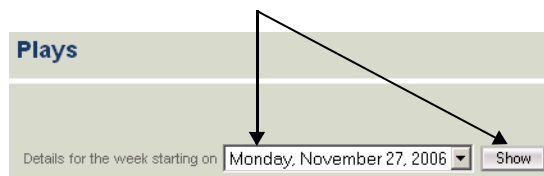

Tip: The weeks in this list reflect TouchTunes billing weeks and may not match your collection schedule for the jukebox.

The Dashboard recalculates the play-related statistics for the selected week.

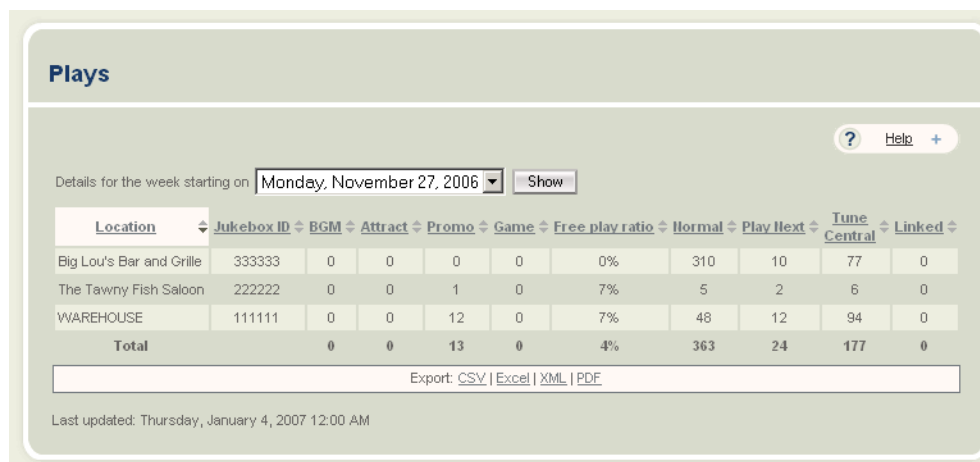 


Figure 36 Plays report showing statistics for another week


Checking a Location's Take from a Gen 3 Jukebox

Can I check the location take for a jukebox in the TouchTunes Dashboard?

If you set up your billing splits and off-the-top fees for a Gen 3 jukebox in the TouchTunes Dashboard using the procedures in "Setting Billing Splits and Off-The-Top Fees" on page 111, you can also use the Dashboard to calculate a location's *take* (the share of jukebox income for a location) from your collections. Using the Dashboard for this shows the calculations for the division of jukebox income to the location owner and allows both of you to verify that these amounts are correct.

To calculate your collections for a jukebox:

1. In the TouchTunes Dashboard, choose **My Jukeboxes | Settings**.
The Music & System Settings page appears, which is the default page for jukebox settings. You use this page to select the jukebox that you want to configure.
2. If necessary, select the jukebox whose billing split and off-the-top fees you want to access from the **Choose Another Jukebox** list.

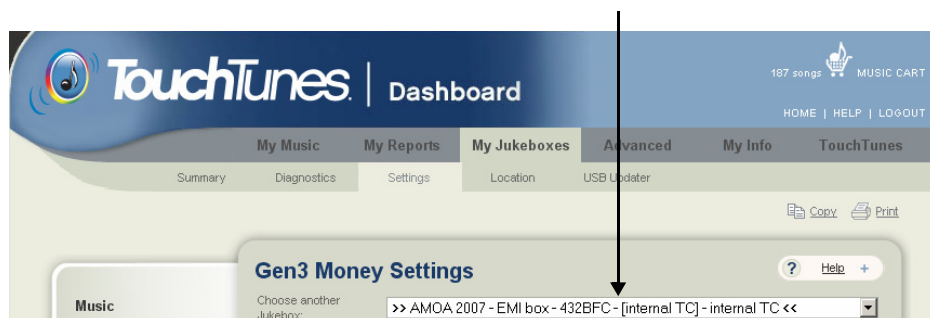 

3. Choose **Bookkeeping** from the left-side menu.
The Gen 3 bookkeeping page appears, showing the off-the-top fees and billing split for the jukebox that you set earlier.

Highlighted fields can be modified to customize this example.			
Jukebox Coinage	+	\$ 100.00	from 100 plays
Jukebox Off the Top	-	\$ 0.00	
TuneCentral Coinage	+	\$ 150.00	from 100 plays
TuneCentral Coinage Off the Top	-	\$ 0.00	
To Be Split	=	\$ 250.00	

Location Split
 \$ 0.00

Operator Split
 \$ 250.00

Figure 37 Bookkeeping page for a Gen 3 jukebox

Note: This Dashboard feature is not available for Gen 1 or NextGen jukeboxes.

You use the controls in the **Billing Split Example** area to calculate the location's take for a jukebox based on the billing split and off-the-top values you set earlier.

4. Navigate to the **Billing Split Example** area at the bottom of this page.

This area shows the most common formula used to calculate the division of jukebox income. You can enter the income for the jukebox and TuneCentral in the highlighted (light yellow) fields, while the billing split and off-the-top fees are derived from the settings in the top half of the page.

As you enter income information, the Dashboard recalculates the jukebox and TuneCentral off-the-top fees, deducts these fees from their respective incomes, and calculates the location and operator takes according to the established billing split. Each calculation appears in the **Billing Split Example** area for your verification.

5. Do one of the following to enter the jukebox income on the Jukebox Coinage line:

- If your off-the-top fee is a fixed amount or is based on a percentage of the income, enter a monetary value in the **\$ (money)** field.
- If your off-the-top fee is based on the number of plays, enter the number of plays for the jukebox in the **Plays** field.

For the jukebox in this simplified example, the jukebox coinage is \$256.00 and the jukebox off-the-top fee is fixed at \$100.

Jukebox Coinage	+	\$ 256.00	from	0	plays
Jukebox Off the Top	-	\$ 100.00			

Figure 38 a. Jukebox Coinage \$ (money) field b. Jukebox Coinage Plays field

6. Repeat the previous step to set up the TuneCentral income on the TuneCentral Coinage line.

For the jukebox in this simplified example, each \$1 equals 2 credits. Since the TuneCentral off-the-top was set to 50 cents per play and the Plays report indicates that there were 77 plays, the resulting TuneCentral off-the-top fee is \$38.50.

TuneCentral Coinage	+	\$ 137.50	from	77	plays
TuneCentral Coinage Off the Top	-	\$ 38.50			

Figure 39 TuneCentral off-the-top fee calculated based on the number of plays

The **Billing Split Example** area shows the resulting income for the operator and the location owner.

BILLING SPLIT EXAMPLE

Highlighted fields can be modified to customize this example.

Jukebox Coinage	\$	256.00	from	0	plays	Location Split \$ 84.15	
Jukebox Off the Top	-	\$	100.00				
TuneCentral Coinage	+	\$	137.50	from	77	plays	Operator Split \$ 170.85
TuneCentral Coinage Off the Top	-	\$	38.50				
To Be Split	=	\$	255.00				

Figure 40 Billing Split Example area, showing Location and Operator takes for a jukebox based on jukebox and TuneCentral coinage and play information



Configuring Music and Game Settings Using the TouchTunes Dashboard

This chapter explains how to view and configure music-related and game-related settings for jukeboxes and playporTTs from the TouchTunes Dashboard.

Contents

<i>Overview</i>	<i>127</i>
<i>Setting Up the Background Music Mode on a Jukebox</i>	<i>128</i>
<i>Setting Up the Attract Mode on a Jukebox</i>	<i>132</i>
<i>Scheduling Background Music and Attract Modes for a Jukebox</i>	<i>136</i>

Overview

You use the TouchTunes Dashboard to configure an idle jukebox to run in one of the following special modes:

- *Background music mode:* In this mode, the jukebox plays background music for a location. You use this mode to provide background music via the jukebox and provide an alternative to BGM services like satellite radio.
- *Attract mode:* In this mode the jukebox plays background music at regular intervals and displays self-promotional advertising on its screen. You use this mode to encourage usage of the jukebox among a location's patrons.

You use these modes to generate interest in the jukebox among the patrons of a location, as well as to demonstrate the value of the jukebox to the location owner by providing him with background music services.

In this chapter, you will find answers to the following questions:

- “How do I set up the background music mode for a jukebox using the TouchTunes Dashboard?” (p. 128)
- “How do I set up the attract mode for a jukebox using the TouchTunes Dashboard?” (p. 132)
- “Can I schedule when the background music and attract modes are active for a jukebox through the TouchTunes Dashboard?” (p. 136)

Setting Up the Background Music Mode on a Jukebox

How do I set up the background music mode for a jukebox using the TouchTunes Dashboard?


You can configure an idle jukebox to play background music by enabling its *background music mode* (also called *BGM mode*) in the TouchTunes Dashboard. When a jukebox is running in this mode, it plays songs at random from its library or a preset music list.

Gen 2 and Gen 3 jukeboxes have separate procedures to set up the background music mode through the TouchTunes Dashboard.

- To set up this mode on a Gen 2 jukebox, see “To set up the BGM mode for a Gen 2 jukebox:” on page 128.
- To set up this mode on a Gen 3 jukebox, see “To set up the BGM mode for a Gen 3 jukebox:” on page 130.

To set up the BGM mode for a Gen 2 jukebox:

1. In the TouchTunes Dashboard, choose **My Jukeboxes | Settings**.
The Music & Systems Settings page appears. You use this page to select the jukebox that you want to configure.
2. If necessary, select the jukebox with the BGM mode that you want to configure from the **Choose Another Jukebox** list.

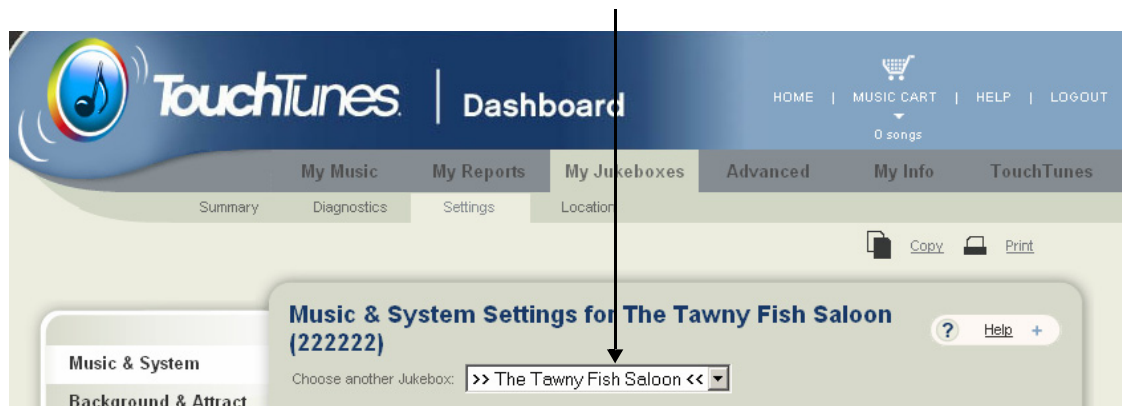 

3. Select **Background & Attract** from the left-side menu.

The Background & Attract Settings page appears.

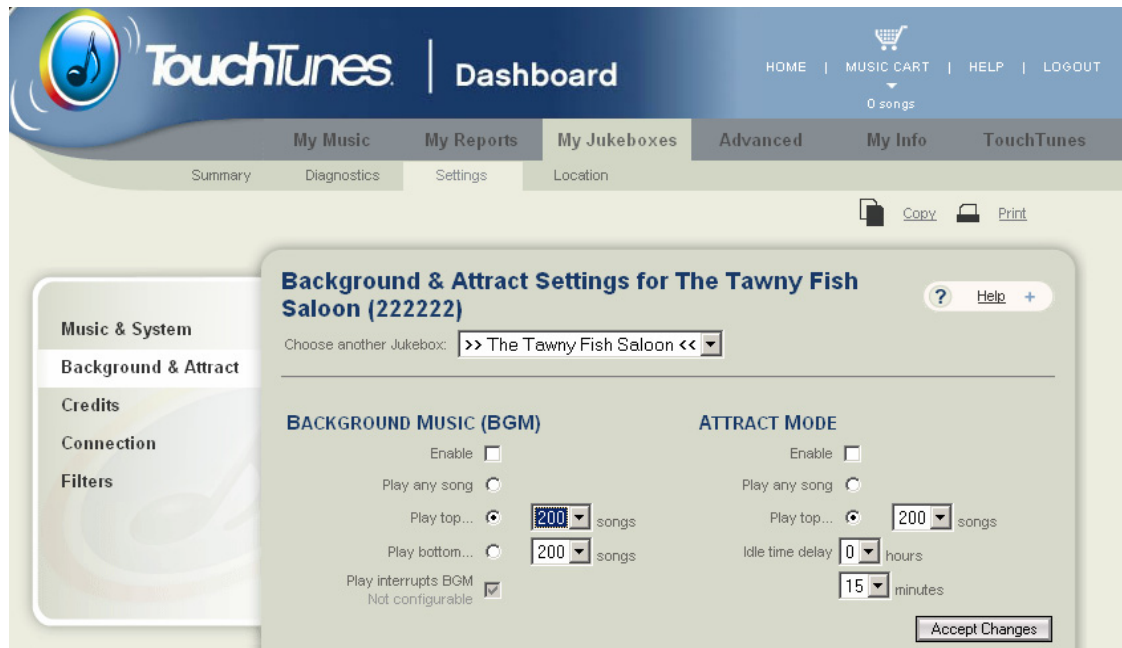 


Figure 10 Background & Attract Settings page

You use the controls in the **Background Music (BGM)** area on this page to activate and configure the background music mode for this jukebox.

4. Enable the background music mode for this jukebox.



5. Choose one of the following options to control the music played by the jukebox when it is running in BGM mode:
 - Choose **Play any song** to allow the jukebox to play any song from its local hard drive at random when in BGM mode.
 - Choose **Play top...** to allow the jukebox to play any of the most popular songs on the jukebox when in BGM mode. You use the associated list to limit the jukebox to choosing among the top 50 to 500 songs when running in this mode.

- Choose **Play bottom...** to allow the jukebox to play any of the least played songs on the jukebox when in BGM mode. You use the associated list to limit the jukebox to choosing among the bottom 50 to 500 songs when running in this mode.

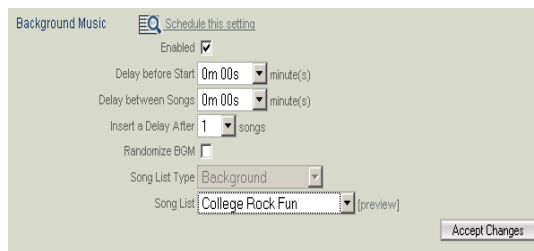 


Figure 11 Background music mode set to play the top 50 songs

6. Click **Accept Changes**.

7. (Optional) Schedule when the BGM mode is active on the jukebox. See “Scheduling Background Music and Attract Modes for a Jukebox” on page 136.

To set up the BGM mode for a Gen 3 jukebox:

1. In the TouchTunes Dashboard, choose **My Jukeboxes | Settings**. The Gen 3 Music Settings page appears.


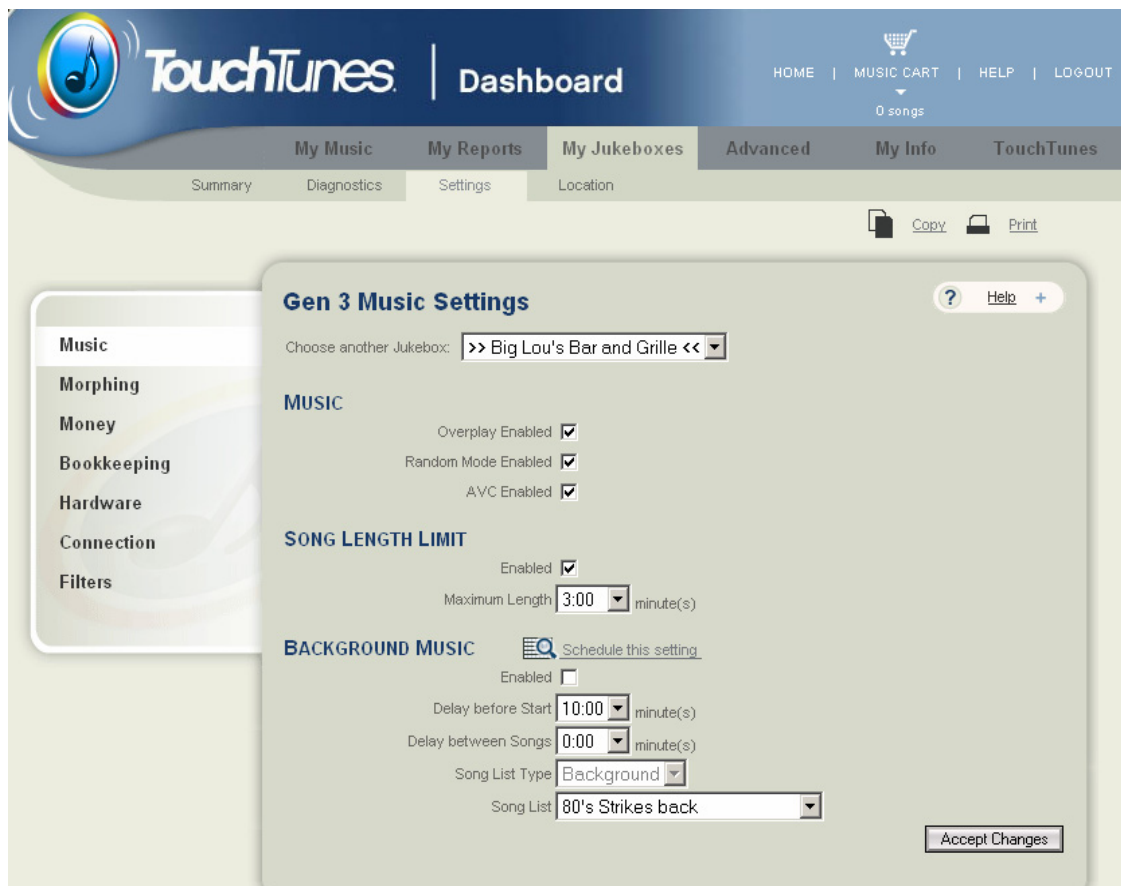 


Figure 12 Music Settings page for a Gen 3 jukebox

You use the controls in the **Background Music** area to activate and configure the background music mode for this jukebox.

 2. If necessary, select the jukebox with the BGM mode that you want to configure from the **Choose Another Jukebox** list.
3. Enable the background music mode for this jukebox.

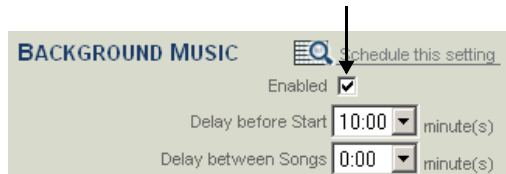

4. Use the **Delay Before Start** list to set the number of minutes a jukebox must wait after playing a song chosen by a customer before it can switch to BGM (or attract) mode.
 5. Use the **Delay Between Songs** list to set the number of minutes between songs when a jukebox is running in BGM mode.
- Next, use the controls in the **Background Music** area to control what music the jukebox can play when in BGM mode.
6. Select the pre-compiled music list containing the songs that the jukebox can play when running in BGM mode from the **Song List** control.
 7. (Optional) To see the list of songs in a background song list before setting it, click the **preview** link.

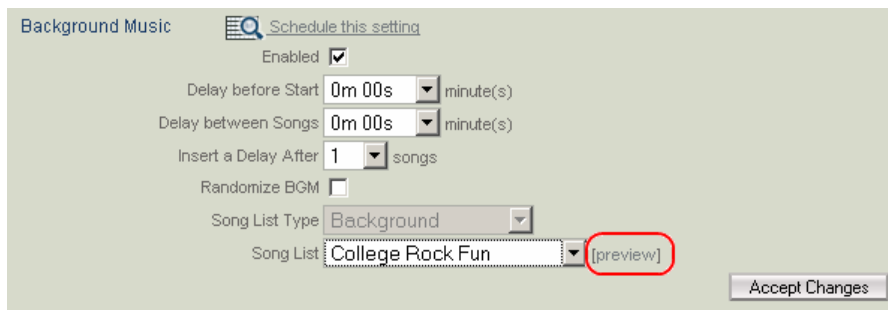 


Figure 13 Previewing a background song list

The preview screen will open with a list of songs. Close the window when you are done with the preview.


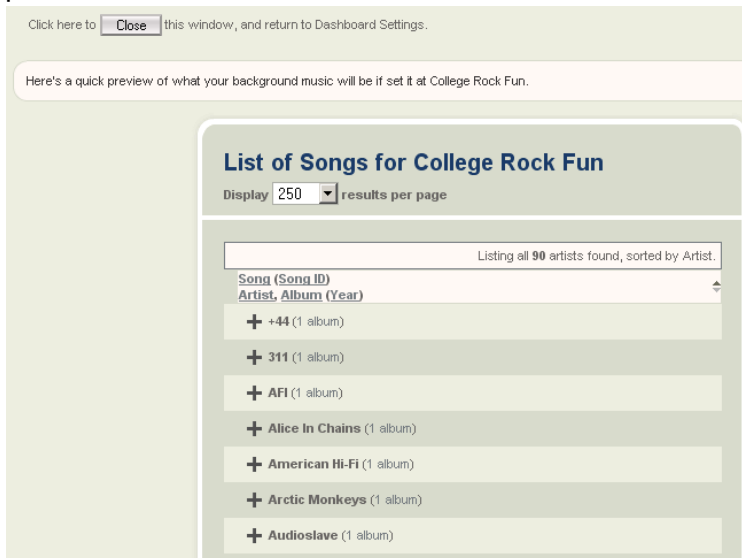 


Figure 14 Background song preview window

 8. Click **Accept Changes**.

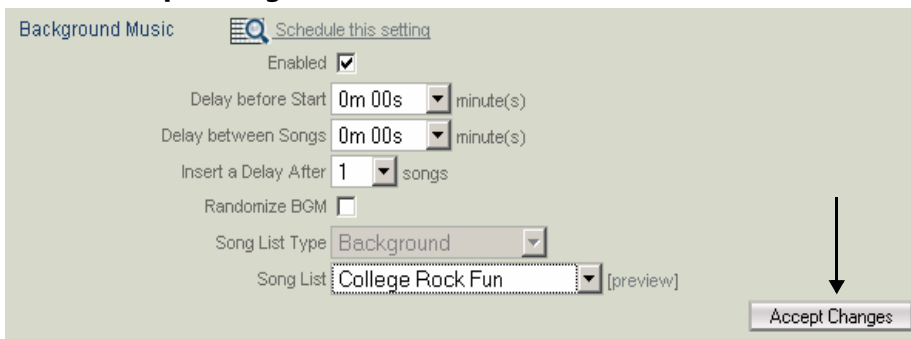

9. (Optional) Schedule when the selected BGM mode is active on the jukebox.
See "Scheduling Background Music and Attract Modes for a Jukebox" on page 136.

Setting Up the Attract Mode on a Jukebox

How do I set up the attract mode for a jukebox using the TouchTunes Dashboard?


You can use the TouchTunes Dashboard to set up a jukebox to run in *attract mode*, where an idle jukebox plays songs at regular intervals and displays promotional messages on its screen to attract business. You can activate attract mode through the Dashboard to generate interest in the jukebox at a location where the jukebox is new or where jukebox usage has been decreasing. Gen 2 and Gen 3 jukeboxes have separate procedures to set up the background music mode through the TouchTunes Dashboard.

- To activate and configure this mode on a Gen 2 jukebox, see "To set up attract mode for a Gen 2 jukebox:" on page 133.

- To activate and configure this mode on a Gen 3 jukebox, see “To set up attract mode for a Gen 3 jukebox:” on page 135.

To set up attract mode for a Gen 2 jukebox:

1. In the TouchTunes Dashboard, choose **My Jukeboxes | Settings**.
The Music & Systems Settings page appears. You use this page to select the jukebox that you want to configure.
2. If necessary, select the jukebox whose attract mode you want to configure from the **Choose Another Jukebox** list.

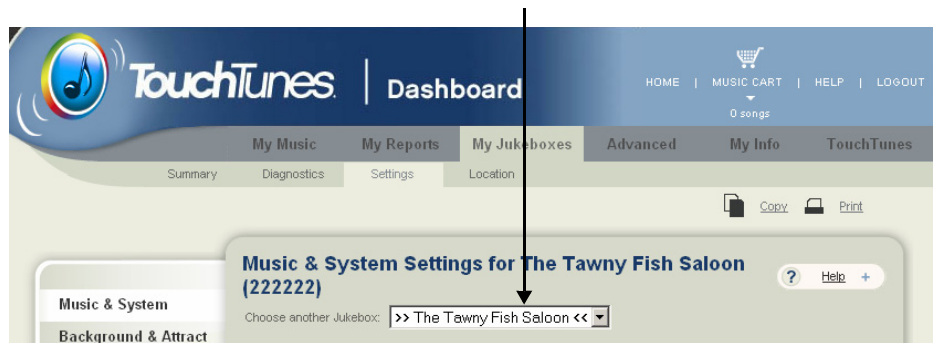 

3. Select **Background & Attract** from the left-side menu.
The Background & Attract Settings page appears.

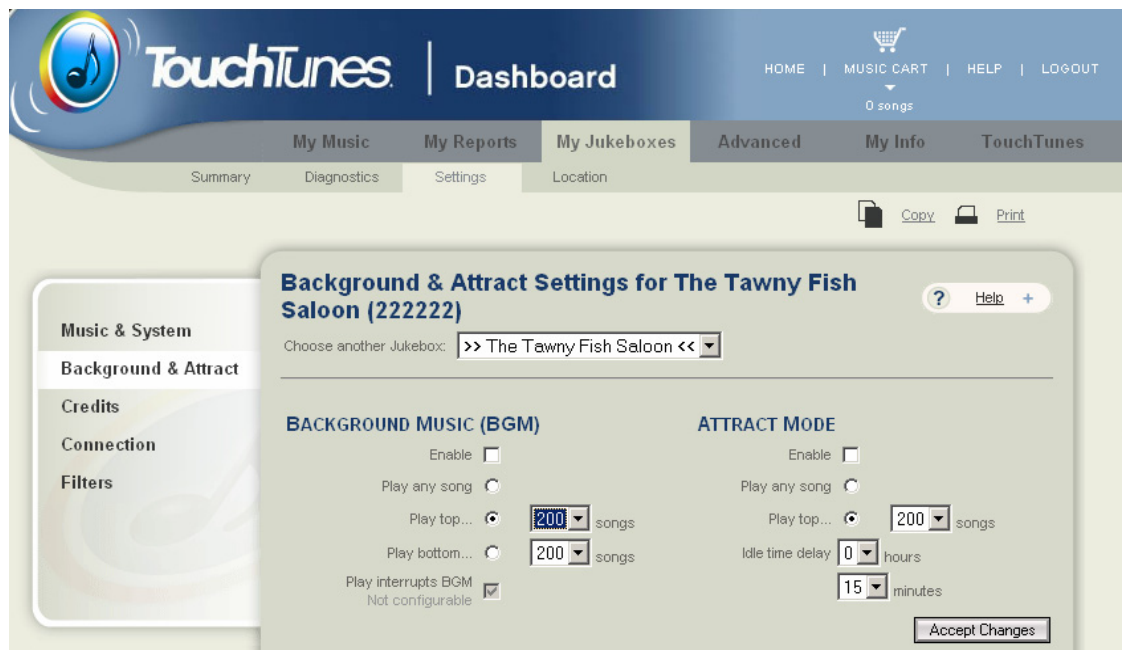 


Figure 15 Background & Attract Settings page

You use the controls in the **Attract Mode** area on this page to activate and configure this mode.

4. Enable the attract mode for this jukebox.



5. Choose one of the following options to control the music played by the jukebox when it is running in attract mode:
 - Choose **Play Any Song** to allow the jukebox to play any song at random when in attract mode.
 - Choose **Play Top...** to allow the jukebox to play any of the most popular songs on the jukebox when in attract mode. You use the associated list to limit the jukebox to choosing among the top 50 to 500 songs when running in this mode.

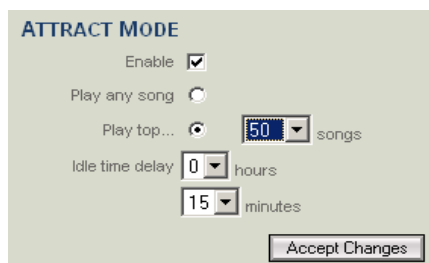 


Figure 16 Jukebox set to play music from the top 50 songs when running in attract mode

Next, set the length of time a jukebox must be idle before it can switch to attract mode.

6. Use the controls in the **Idle Time Delay** area to set the number of hours and minutes that the jukebox must be idle before attract mode can be activated.



Figure 17 Jukebox set to go into attract mode after 30 minutes

A song is played once the jukebox has been idle for the period of time set in the **Idle Time Delay** area. If the jukebox continues to remain idle, a song is played each time the jukebox reaches the interval defined in this area until a customer plays a song.

Tip: To maximize your jukebox revenue, set a delay of at least 15 minutes for the jukebox to be idle before attract mode is activated.

7. Click **Accept Changes**.
8. (Optional) Schedule when attract mode is active on the jukebox. See “Scheduling Background Music and Attract Modes for a Jukebox” on page 136.

To set up attract mode for a Gen 3 jukebox:

1. In the TouchTunes Dashboard, choose **My Jukeboxes | Settings**.
The Gen 3 Music Settings page appears.

Figure 18 Music Settings page for a Gen 3 jukebox


Because attract mode is very similar to background music mode, you use the controls in the **Background Music** area on this page to activate and configure both modes for this jukebox.

2. If necessary, select the jukebox whose attract mode you want to configure from the **Choose Another Jukebox** list.
3. Enable the attract (and background music) mode for this jukebox.

The only difference between background music and attract modes on a Gen 3 jukebox is the amount of time between songs:

- For the background music mode, the delay between songs should be 2 minutes or less.
- For attract mode, the delay between songs should be 15 minutes or more.

4. Use the **Delay Before Start** list to set the number of minutes (and seconds) a jukebox must wait after playing a song chosen by a customer before it can switch to attract mode.
5. Use the **Delay Between Songs** list to set the number of minutes (and seconds) that a jukebox waits between songs when running in attract mode.

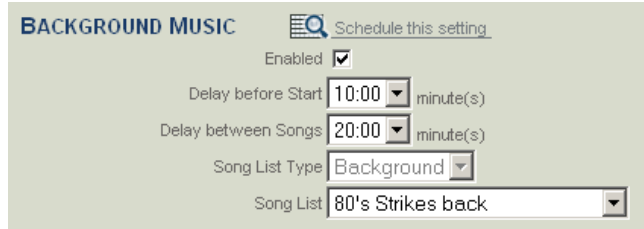

BACKGROUND MUSIC [Schedule this setting](#)

Enabled ☒

Delay before Start: 10:00 minute(s)

Delay between Songs: 20:00 minute(s)

Song List Type: Background

Song List: 80's Strikes back

Figure 19 Jukebox set to wait 20 minutes between songs when running in attract mode

A song is played once the jukebox has been idle for the period of time set in the **Delay Before Start** list. If the jukebox remains idle for the period of time defined by the **Delay Between Songs** list, a song is played each time the jukebox reaches this interval until a customer plays a song.

Tip: To maximize your jukebox revenue, set a delay between songs of at least 15 minutes.

6. Select the pre-compiled music list containing the songs that the jukebox can play when running in BGM mode from the **Song List** control.
Songs are played from the selected list while the jukebox is in attract mode.
7. Click **Accept Changes**.
8. Schedule when attract mode is active on the jukebox. See “Scheduling Background Music and Attract Modes for a Jukebox” on page 136.

Scheduling Background Music and Attract Modes for a Jukebox

Can I schedule when the background music and attract modes are active for a jukebox through the TouchTunes Dashboard?

You can use the TouchTunes Dashboard to set when background music and attract modes (collectively called *jukebox modes*) are active on a jukebox. Using the Dashboard to schedule when jukebox modes are active allows you to customize the behavior of a jukebox for special events at a location, such as a daily Happy Hour.

Gen 2 and Gen 3 jukeboxes have separate procedures to schedule jukebox modes through the TouchTunes Dashboard.

- To schedule these modes on a Gen 2 jukebox, see “To schedule jukebox modes for a Gen 2 jukebox:” on page 137.
- To schedule these modes on a Gen 3 jukebox, see “To schedule background music and attract modes for a Gen 3 jukebox:” on page 139.

To schedule jukebox modes for a Gen 2 jukebox:

1. In the TouchTunes Dashboard, choose **My Jukeboxes | Settings**.
The Music & Systems Settings page appears. You use this page to select the jukebox that you want to configure.
2. If necessary, select the jukebox whose jukebox mode you want to configure from the **Choose Another Jukebox** list.



3. Select **Background & Attract** from the left-side menu.

The Background & Attract Settings page appears.

TouchTunes | Dashboard

HOME | MUSIC CART | HELP | LOGOUT

0 songs

My Music | My Reports | My Jukeboxes | Advanced | My Info | TouchTunes

Summary | Diagnostics | Settings | Location

Copy | Print

Background & Attract Settings for The Tawny Fish Saloon (222222) ? Help +

Choose another Jukebox: >> The Tawny Fish Saloon <<

BACKGROUND MUSIC (BGM)

Enable ☒

Play any song ☐

Play top... 50 songs

Play bottom... 200 songs

Play interrupts BGM ☒ Not configurable

ATTRACT MODE

Enable ☒

Play any song ☐

Play top... 50 songs

Idle time delay 0 hours 15 minutes

Accept Changes

SCHEDULE

	6:00	7	8	9	10	11	12:00	13	14	15	16	17	18:00	19	20	21	22	23	0:00	1	2	3	4	5	6
Sunday																									
Monday																									
Tuesday																									
Wednesday																									
Thursday																									
Friday																									
Saturday																									

Add period

LEGEND

Normal ☐

Attract ☐

Background ☐

Figure 20 Background & Attract Settings page

You use the **Schedule** area on this page to view and set when the BGM and attract modes are active on this jukebox. By default, a jukebox always runs in normal mode (BGM and attract mode disabled) unless otherwise indicated.

- Do one of the following to schedule a mode for the jukebox:
 - Click on any event listed on the schedule to modify its settings.
 - Click **Add period** to add a time period when you want to run the jukebox in the background music or attract mode.

The **Add a New Period** area (for new events) or **Edit Period** area (for scheduled events) appears below the schedule legend. You use these controls to create and configure events on

a jukebox's schedule, including the jukebox mode and the credit rule used during the scheduled event.

Figure 21 Add a New Period area

5. Do the following to set up or modify the event:

- Use the **Day(s)** list to set the days of the week when the jukebox mode and/or credit rule is active on the jukebox.
- Use the **From** and **To** lists to set the time period when the jukebox mode and/or credit rule is active on the jukebox.
- Use the **Credit Rules** list to choose the credit rule used to price songs and services on the jukebox during the event. See “Setting Up the Credit Rules for a Jukebox” on page 99.
- Use the **Play Mode** list to set the jukebox mode used during the event (Normal, Background [music], or Attract mode).

6. Update the schedule by clicking **Add Period** (to add a new event to the schedule) or **Change Period** (to update an existing event on the schedule).

The schedule is updated. If you set an event to run in BGM or attract mode, its color changes to indicate its mode. For example, the jukebox whose schedule is shown below runs in background mode during weekends and runs in attract mode during the location's weekly Ladies Night event on Wednesday evenings. Otherwise, the jukebox runs in normal mode.

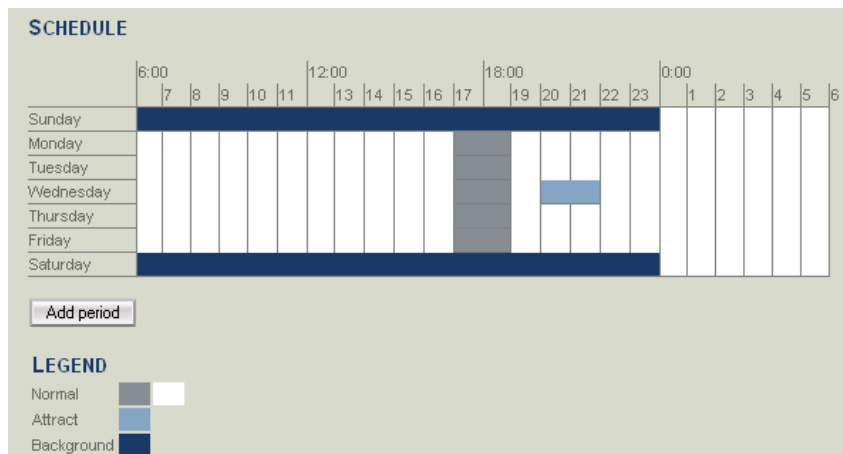 


Figure 22 Jukebox whose BGM mode is active on weekends and attract mode is active Wednesday from 7 to 9 PM

To schedule background music and attract modes for a Gen 3 jukebox:

1. In the TouchTunes Dashboard, choose **My Jukeboxes | Settings**.

The Gen 3 Music Settings page appears.

The screenshot shows the TouchTunes Dashboard interface. At the top, there's a header with the TouchTunes logo and a navigation bar with links: HOME, MUSIC CART (0 songs), HELP, and LOGOUT. Below this is a secondary navigation bar with tabs: My Music, My Reports, My Jukeboxes (selected), Advanced, My Info, and TouchTunes. Under 'My Jukeboxes', there are sub-tabs: Summary, Diagnostics, Settings (selected), and Location. On the left, a sidebar lists various settings categories: Music, Morphing, Money, Bookkeeping, Hardware, Connection, and Filters. The main content area is titled 'Gen 3 Music Settings' and includes a 'Choose another Jukebox:' dropdown set to '>> Big Lou's Bar and Grille <<'. The settings are grouped into three sections:
1. **MUSIC**: Includes 'Overplay Enabled', 'Random Mode Enabled', and 'A/V C Enabled', all with checked checkboxes.
2. **SONG LENGTH LIMIT**: Includes 'Enabled' (checked) and 'Maximum Length' set to '3:00' minute(s).
3. **BACKGROUND MUSIC**: Includes a 'Schedule this setting' link, 'Enabled' (unchecked), 'Delay before Start' set to '10:00' minute(s), 'Delay between Songs' set to '0:00' minute(s), 'Song List Type' set to 'Background', and 'Song List' set to '80's Strikes back'. An 'Accept Changes' button is located at the bottom right of the settings panel.

Figure 23 Music Settings page for a Gen 3 jukebox

2. Click **Schedule This Setting** in the **Background Music** area.

The Background Music Scheduling View window appears. You use this window to schedule when the jukebox is running in BGM or attract modes.

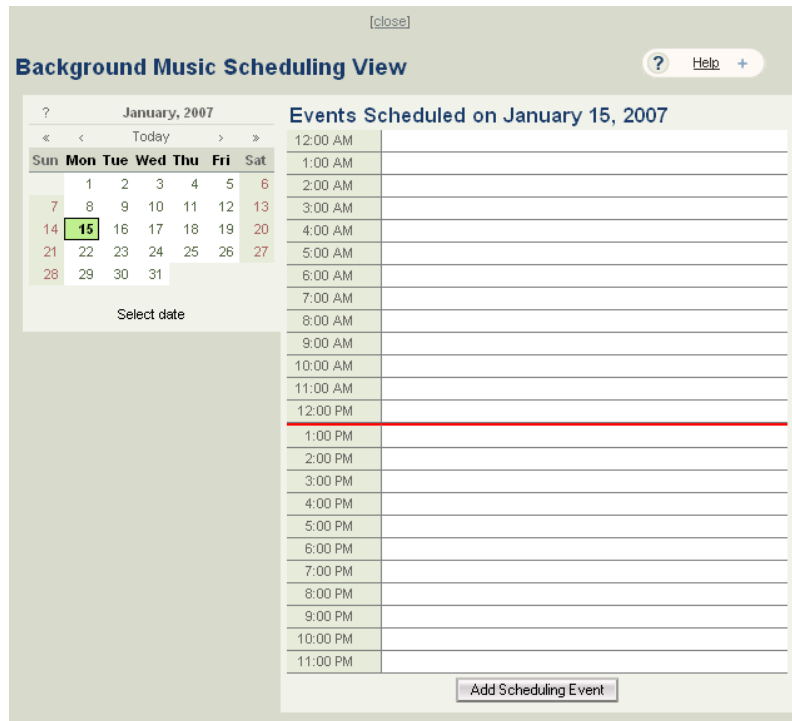 


Figure 24 Background Music Scheduling View window

3. Do one of the following to set the schedule for the background music or attract modes:
 - Click **Add Scheduling Event**.
 - Click any future time slot in the schedule (below the red line) that is open.

The Scheduling window appears. You use this window to create or modify a jukebox mode event for the jukebox schedule that controls when the background music or attract modes are active.

4. In the **Step 1: Choose a Recurrence** area, select one of the following options to set whether and how often the jukebox mode event repeats:

Option:	Result:	Use Case:
Does not repeat	The mode is activated only once on the jukebox.	Use this option when you want to activate BGM or attract mode for certain occasions that do not repeat on a regular basis, such as an office party or wedding reception.
Weekly	The jukebox mode event repeats on the specified day(s) of the week.	Use this option when you want to reactivate BGM or attract mode on the same days each week, such as between 5 and 7 PM each weekday for Happy Hour.
Monthly	The jukebox mode event repeats on the same day each month.	Use this option when you want to activate BGM or attract modes on a particular day each month, such as for special theme-based days on the 5th, 15th and 25th of each month.
Yearly	The jukebox mode event repeats on the day each year.	Use this option to activate BGM or attract modes on a certain day each year, such as for Christmas on December 25th each year.

The controls in the **Set Time** and **Specify Action(s)** areas change depending on what option you choose. Next, use these controls to define the jukebox mode and the duration during which the jukebox may run in this mode.

5. In the **Set Time** area, do the following to set the day(s) and time when the jukebox can run in BGM or attract mode:
 - From the **Setting Value At** list, select the starting time when mode is active on the jukebox.
 - Set the day(s) of the week, month or year that the jukebox can run in the selected mode.
 - (Optional) For weekly events, set the duration (in months) over which the jukebox can run in the selected mode.

Figure 25 Set Time area showing date(s) and time when the background music or attract mode can be run on jukebox

6. In the **Specify Action(s): Background Music** area, configure the background music and/or attract mode using the procedures in “To set up the BGM mode for a Gen 3 jukebox:” on page 130 or “To set up attract mode for a Gen 3 jukebox:” on page 135.

Figure 26 Specify Action area set to run the jukebox in background music mode every weekday from 5 PM

7. (Optional) Click **Add Scheduling Event Template** and then repeat the previous two steps to either extend the time period for the jukebox mode and/or schedule other modes for the jukebox.

The screenshot displays the 'Scheduling' window in the TouchTunes dashboard. It contains two identical event template sections, each with the following fields:

- i) SET TIME:** A dropdown menu for 'Setting value at:' (e.g., 5:00 PM or 6:00 PM), a row of checkboxes for days of the week (Sun, Mon, Tue, Wed, Thu, Fri, Sat), and a 'Range' section with 'from' and 'to' month dropdowns (e.g., January to December).
- ii) SPECIFY ACTION(S) : BACKGROUND MUSIC:** An 'Enabled' checkbox, 'Delay before Start' (e.g., 5:00 minute(s)), 'Delay between Songs' (e.g., 0:00 minute(s)), 'Song List Type' (e.g., Background), and a 'Song List' dropdown (e.g., Pop goes the world or Hipster 90's).


A button labeled 'Remove Scheduling Event Template' is positioned between the two template sections.

Figure 27 Scheduling window showing extension of background music mode

You should be aware of the following when using the Scheduling window:

- You can remove any additional scheduled event by clicking **Remove Scheduled Event Template**. Because the Dashboard does not confirm this action, be sure that you are removing the correct event before clicking this button. Otherwise, you must re-create the event.
- There is no limit as to how many events can be set up in the Scheduling window. A good rule-of-thumb is to set the schedule for one jukebox mode before scheduling the other mode on the same jukebox. Otherwise, you may become confused between schedules.

 8. Once you complete the schedule for the jukebox mode, click **Save Schedule** in the **Step 3: Accept or Discard Changes** area.

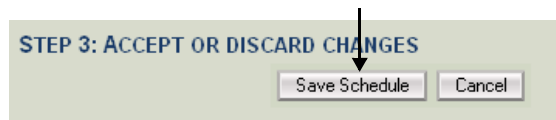

The Background Music Scheduling View window reappears, confirming the jukebox mode events you scheduled.

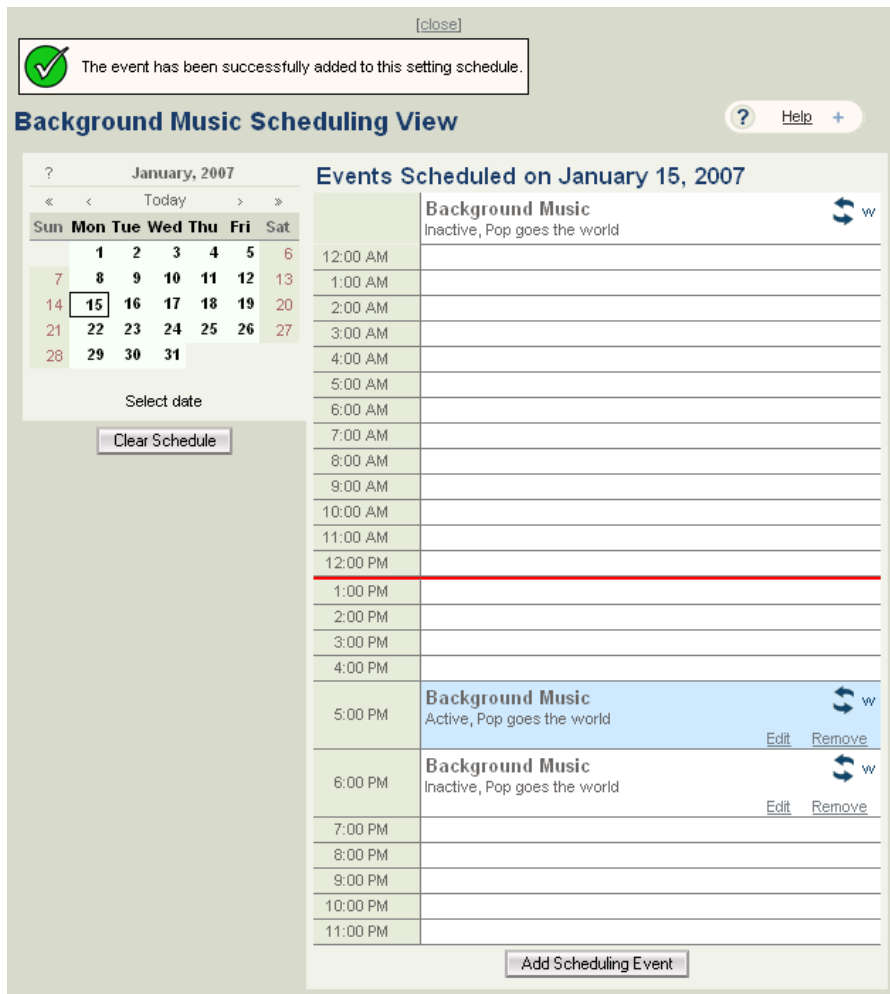 


Figure 28 Dashboard schedule showing when jukebox can run in background music mode

Recurring events in the schedule are identified in the schedule by an arrow icon with the letter following the icon indicating whether the event recurs weekly (w), monthly (m) or yearly (y).

 


Figure 29 Recurring weekly event

9. (Optional) Do any of the following:

- Schedule another jukebox mode event by clicking **Add Scheduled Event** and then repeating steps 4 to 8.
 - Modify a jukebox mode event by clicking **Edit** in the time period for the event and then modifying its details in the Scheduling window that appears. Note that modifying one instance of a recurring jukebox mode event changes all instances of this event. For example, if you move the starting time for the background music mode from 5 PM to 5:15 PM for one weekly event, all other events are also moved to 5:15 PM.
 - Delete a jukebox mode event by clicking **Remove** in the time period for the event and then confirming the action. Note that when you delete one instance of a recurring jukebox mode event, all instances of the events are deleted. You cannot delete a single event from a series of recurring events.
10. Return to the Dashboard by clicking **Close** at the top of the Background Music Scheduling View window.
- The Gen 3 Music Settings page reappears.

10

Viewing Your Invoices with the TouchTunes Dashboard

This chapter explains how you can view monthly invoices for all of your TouchTunes jukeboxes in the TouchTunes Dashboard.

Contents

<i>Overview</i>	<i>147</i>
<i>Viewing TouchTunes Invoices</i>	<i>148</i>

Overview

You can use the TouchTunes Dashboard to view monthly invoices for your TouchTunes jukeboxes. You can use these invoices to view a breakdown of all jukebox costs billed to your account for the month for all of your locations, including music played by type, music and services, leasing costs, internet connection costs if applicable, and sales tax. You can also view other types of invoices and statements in the TouchTunes Dashboard, which provide a subset of related billing and statistical information.

TouchTunes invoices are published in Adobe PDF format. You use the Adobe Acrobat Reader to view these invoices; you can download this free application from a link on the Help Bubble on the Invoices page.

In this chapter, you will find answers to the following questions:

- “How do I view invoices from TouchTunes (such as music services invoices) using the TouchTunes Dashboard?” (p. 148)

Viewing TouchTunes Invoices

How do I view invoices from TouchTunes (such as music services invoices) using the TouchTunes Dashboard?

You can use the TouchTunes Dashboard to view monthly invoices for your TouchTunes jukeboxes.

To view TouchTunes invoices:

1. In the TouchTunes Dashboard, choose **My Reports | Invoices**.



Figure 11 Invoices for the current year are displayed. In this case none are available yet for 2008.

2. If you know the number of the invoice you want to access, type it in the **View Invoice #** field, then click **Show Invoice**.

Note: If you do not know the invoice number, proceed to step 3.

The requested invoice's details appear.

3. If you do not know the number of the particular invoice you want to access, do one of the following to locate it:
 - If necessary, click the year for which you want to view an invoice.

- Sort the invoices in the list in ascending or descending or by month, invoice #, or invoice date, by clicking the corresponding arrow icons.



Figure 12 a. Click to sort invoices by month from earliest to latest b. Click to sort invoices by month, from latest to earliest

4. Click the type of invoice you want to view from the Documents column.

You are provided a list with different types of invoices and statements. The Detailed Invoice includes all information available, while the other invoices listed provide different views of the same information, such as the number of music plays during the invoice period. These different views of the same information may be useful to different people in your organization, such as accounting and sales.

November	000472	December 7, 2006	Summary Invoice
			Detailed Invoice
			Detailed Play & Billing Statement
			Song Download Statement

Figure 13 Different ways of viewing the information in the November invoice

The invoice or statement opens up in Adobe Reader, where you can read, print, or save it for archiving purposes.



TouchTunes
MUSIC CORPORATION

1280 Rose Rd, Lake Zurich, IL, 60047
Tel: 847-419-3300 Toll Free: 888-338-JUKE Fax: 847-419-3304

100 TouchTunes MTL
3 Commerce Place, 4th Floor
Montreal
QC H3E-1H7
lanes0861@aol.com

Invoice Date:
Invoice No.: 946157

Detailed Invoice
Confidential Information
Billing Period 01/03/08 to 01/04/08

Billing Period	Agmt Type	Juk. Free Plays	Juk. Paid Plays	TC Plays	Total Plays	Play Now	Billable Dwnlds	Bok Music %	Jukebox Coinage	Tune Central Coinage	Total Coinage	BGM/Fix Fee (\$)	% Based Fee (\$)	Bok Music Fee(\$)	Base Fee (\$)	Play Based Fee (\$)	Tune Central per Play Fee (\$)	Down loads Fee(\$)	Total Fee (\$)
00000026B73A Location 1																			
12/04-12/10	FXR	0	400	0	400	3	0	0	\$121.00	\$0.00	\$121.00	\$0.00	\$0.00	\$0.00	\$12.95	\$16.00	\$0.00	\$28.95	
12/11-12/17	FXR	0	363	0	363	9	0	0	\$119.00	\$0.00	\$119.00	\$0.00	\$0.00	\$0.00	\$12.95	\$15.32	\$0.00	\$28.27	
12/18-12/24	FXR	0	368	0	368	4	0	0	\$108.00	\$0.00	\$108.00	\$0.00	\$0.00	\$0.00	\$12.95	\$14.72	\$0.00	\$27.67	
12/25-12/31	FXR	0	260	0	260	4	0	0	\$77.00	\$0.00	\$77.00	\$0.00	\$0.00	\$0.00	\$12.95	\$10.40	\$0.00	\$23.35	
		0	1411	0	1411	19	0	0	\$425.00	\$0.00	\$425.00	\$0.00	\$0.00	\$0.00	\$51.80	\$56.44	\$0.00	\$108.24	
00000017A040 Location 2																			
11/27-12/03	NFX	0	24	0	24	1	0	0	\$10.00	\$0.00	\$10.00	\$0.00	\$0.00	\$0.00	\$0.00	\$0.96	\$0.00	\$0.96	
12/04-12/10	FXR	22	300	0	322	5	0	0	\$130.50	\$0.00	\$130.50	\$0.00	\$0.00	\$0.00	\$12.95	\$12.88	\$0.00	\$25.83	
12/11-12/17	FXR	7	329	0	336	11	0	0	\$142.50	\$0.00	\$142.50	\$0.00	\$0.00	\$0.00	\$12.95	\$13.44	\$0.00	\$26.39	
12/18-12/24	FXR	10	286	0	296	2	0	0	\$122.00	\$0.00	\$122.00	\$0.00	\$0.00	\$0.00	\$12.95	\$11.84	\$0.00	\$24.79	
12/25-12/31	FXR	17	365	0	382	3	0	0	\$158.00	\$0.00	\$158.00	\$0.00	\$0.00	\$0.00	\$12.95	\$15.28	\$0.00	\$28.23	
		56	1394	0	1360	22	0	0	\$563.00	\$0.00	\$563.00	\$0.00	\$0.00	\$0.00	\$51.80	\$54.40	\$0.00	\$106.20	
00000018D371 Location 3																			
11/27-12/03	NFX	0	115	0	115	0	0	0	\$50.00	\$0.00	\$50.00	\$0.00	\$0.00	\$0.00	\$0.00	\$4.60	\$0.00	\$4.60	
12/04-12/10	FXR	0	563	0	563	17	0	0	\$254.50	\$0.00	\$254.50	\$0.00	\$0.00	\$0.00	\$12.95	\$22.52	\$0.00	\$35.47	
12/11-12/17	FXR	0	621	0	621	32	0	0	\$285.00	\$0.00	\$285.00	\$0.00	\$0.00	\$0.00	\$12.95	\$24.84	\$0.00	\$37.79	
12/18-12/24	FXR	15	588	0	603	23	0	0	\$271.00	\$0.00	\$271.00	\$0.00	\$0.00	\$0.00	\$12.95	\$24.12	\$0.00	\$37.07	
12/25-12/31	FXR	0	641	0	641	42	0	0	\$301.00	\$0.00	\$301.00	\$0.00	\$0.00	\$0.00	\$12.95	\$25.64	\$0.00	\$38.59	
		15	2528	0	2543	114	0	0	\$1,161.50	\$0.00	\$1,161.50	\$0.00	\$0.00	\$0.00	\$51.80	\$101.72	\$0.00	\$153.52	
00000018D644 Location 4																			
11/27-12/03	NFX	0	58	0	58	0	0	0	\$17.00	\$0.00	\$17.00	\$0.00	\$0.00	\$0.00	\$0.00	\$2.32	\$0.00	\$2.32	
		0	58	0	58	0	0	0	\$17.00	\$0.00	\$17.00	\$0.00	\$0.00	\$0.00	\$0.00	\$2.32	\$0.00	\$0.00	\$2.32



TouchTunes
MUSIC CORPORATION

1280 Rose Rd, Lake Zurich, IL, 60047
Tel: 847-419-3300 Toll Free: 888-338-JUKE Fax: 847-419-3304

100 TouchTunes MTL
3 Commerce Place, 4th Floor
Montreal
QC H3E-1H7
lanes0861@aol.com

Invoice Date:
Invoice No.: 946157

Detailed Invoice
Confidential Information
Billing Period 01/03/08 to 01/04/08

Billing Period	Juk. Agmtmt Free Type	Juk. Paid Plays	TC Plays	Total Plays	Play Now	Billable Dwnlds	Bok Music %	Jukebox Coinage	Tune Central Coinage	Total Coinage	BGM Fix Fee (\$)	% Based Fee (\$)	Bok Music Fee (\$)	Base Fee (\$)	Play Based Fee (\$)	Tune Central per Play Fee (\$)	Down loads Fee (\$)	Total Fee (\$)
4 Jukeboxes		71	5301	0	5372	155	0	\$2,166.50	\$0.00	\$2,166.50	\$0.00	\$0.00	\$0.00	\$155.40	\$214.88	\$0.00	\$0.00	\$370.28
Total																		

Legend

Agmtmt Type: Music and Service Agreement Type.

ELI: Elite Music and Service Program.

FIX: Fixed Rate Music and Service Program.

NEL: New Elite Music and Service Program.

NFX: New Fixed Rate Music and Service Program.

U16: Ultra 16 Music and Service Program.

PLA: Partner Lease Agreement.

PLA: Partner Lease and Service Agreement.

SSA: Sales and Service Agreement.

Juk. Free Plays: Songs played on jukebox without inserting payment into jukebox for such songs.

Juk. Paid Plays: Songs played on jukebox with payment made for such songs.

TC: Tune Central.

Play Now: Songs played on jukebox as Play Now. These songs are included in "Juk. Paid Plays".

Bok Music %: Background music percentages - ie. Jukebox free plays, divided by total plays. (applicable for ELITE, U16, PLA, SSA, PLA and FP type music programs)

FPs: Fixed Percentage Program.

Music & Service Total	\$370.28
Lease Total	\$90.18
DSL Total	\$59.90
SubTotal	\$520.36
Sales Tax	
0.006%	\$0.00
7.500%	\$39.03
Grand Total	\$559.39

Figure 14 Page one and two of a sample invoice

11

Managing Music Filters for a Jukebox in the TouchTunes Dashboard

This chapter explains how to use the TouchTunes Dashboard to create and manage different types of music filters that control the music available for play on a jukebox.

Contents

<i>Overview</i>	<i>151</i>
<i>Viewing Music Filters on a Jukebox using the TouchTunes Dashboard</i>	<i>153</i>
<i>Setting Up Explicit and Edited Music Filters for a Jukebox</i>	<i>156</i>
<i>Determining the Music Styles Allowed on a Jukebox</i>	<i>161</i>
<i>Scheduling TuneCentral for a NextGen Jukebox</i>	<i>167</i>
<i>Scheduling a Music Filter Set on a Gen 3 Jukebox</i>	<i>173</i>

Overview

A *music filter* is a rule that controls the music that is available for play on a jukebox. You create music filters in the TouchTunes Dashboard to restrict or remove the availability of certain songs, artists, albums or musical styles from a jukebox based on requests from a location owner. For example, a family restaurant might request that you put in a music filter that prevents songs with explicit lyrics from being played on their jukebox as this does not fit their image.

Although the most common use for music filters is to prevent certain music from being played on a jukebox, you can also use them to do the following:

- Match the music selection on a jukebox with a location's theme. For example, you may use a filter to restrict a jukebox in a Western-themed bar to Country & Western music.

- Highlight seasonal music that becomes popular during certain times of the year. For example, you can create a filter so Christmas-related songs are only available from late-November through December.
- Disable TuneCentral during certain time periods to restrict the songs available to a list of pre-approved songs. For example, if your employees choose the music that is played in a location, you can create a filter that restricts them to the list of pre-approved songs chosen by the location owner.

TouchTunes jukeboxes support several different types of music filters. The filter types available on your jukebox depend on whether it is a NextGen or Gen 3 unit. While Gen 3 jukeboxes generally support more types of music filters, any music filter that is available on the jukebox itself is also available through the TouchTunes Dashboard. The following table explains the different types of music filters and shows on which jukebox generation they are available:

Filter Type:	Description:	Filter Availability:
Explicit music filters	Enables or disables explicit music from being selected or played.	NextGen and Gen 3 jukeboxes
Edited music filters	Enables/disables <i>edited music</i> (explicit music where the offending text is removed or “bleeped out”) from being selected or played.	Gen 3 jukeboxes only
Allowed Styles filters	Shows/hides a particular style or genre of music from being selected or played.	NextGen and Gen 3 jukeboxes
Name filters	Shows/hides a particular song, album or artist from being selected or played.	NextGen and Gen 3 jukeboxes
Exclusion filters	Allows particular songs, albums or artists to be selected and played that would otherwise have been removed by one of the other music filter types.	Gen 3 jukeboxes only

Note: You cannot create music filters through the Dashboard for any first-generation jukeboxes.

Music filters only set whether certain songs, albums or artists are available for play on a jukebox. Although music that has been filtered out appears to have been removed from the jukebox, its associated music files remain on the jukebox. Because every song on a jukebox occupies space, you should ensure that your music filters and music management practises support each other. This means ensuring that every song that is on a jukebox has a reasonable chance of being played and earning revenue by looking at the music filters for a location and asking the question: “What is the possibility that this music filter may be changed or removed?”

- If there is a possibility that a music filter may be changed or removed, leave the music files on the jukebox.
- If there is no possibility that a music filter may be changed or removed, you should replace the music files on the jukebox that are being filtered out with songs that do stand a reasonable chance of being played and earning revenue.

For example, assume you have downloaded music from a Hot List that includes Pop, Rock, Hip-hop and Rap songs to a jukebox in a family-style restaurant. The restaurant owner asks you to get rid of all the Hip-hop and Rap songs from the jukebox as these songs conflict with their

image. To do this, you create an allowable styles music filter that excludes all songs in the Hip-hop and Rap styles. Although all Hip-hop and Rap songs seem to disappear from the music library once you apply the filter, these songs continue to occupy space on the jukebox that could be used for other music. To ensure that all songs on the jukebox have a reasonable chance of being played and earning revenue, you should remove all the Hip-hop and Rap music from the jukebox and replace it with more Pop and Rock music selections.

In this chapter, you will find answers to the following questions:

- “How do I see what music filters are currently applied to a jukebox using the TouchTunes Dashboard?” (p. 153)
- “How do I prevent music with explicit lyrics from being played on a jukebox using the TouchTunes Dashboard?” (p. 156)
- “Can I control what music styles appear on a jukebox through the TouchTunes Dashboard?” (p. 161)
- “Can I schedule TuneCentral through the TouchTunes Dashboard? Do music filters apply to TuneCentral?” (p. 167)
- “Can I schedule my music filters using the TouchTunes Dashboard?” (p. 173)

Viewing Music Filters on a Jukebox using the TouchTunes Dashboard

How do I see what music filters are currently applied to a jukebox using the TouchTunes Dashboard?

You can view all filters currently applied to a jukebox through the jukebox settings.

To view music filters on a jukebox:

1. In the TouchTunes Dashboard, choose **My Jukeboxes | Settings**.

The settings for the jukebox appear in the Dashboard.

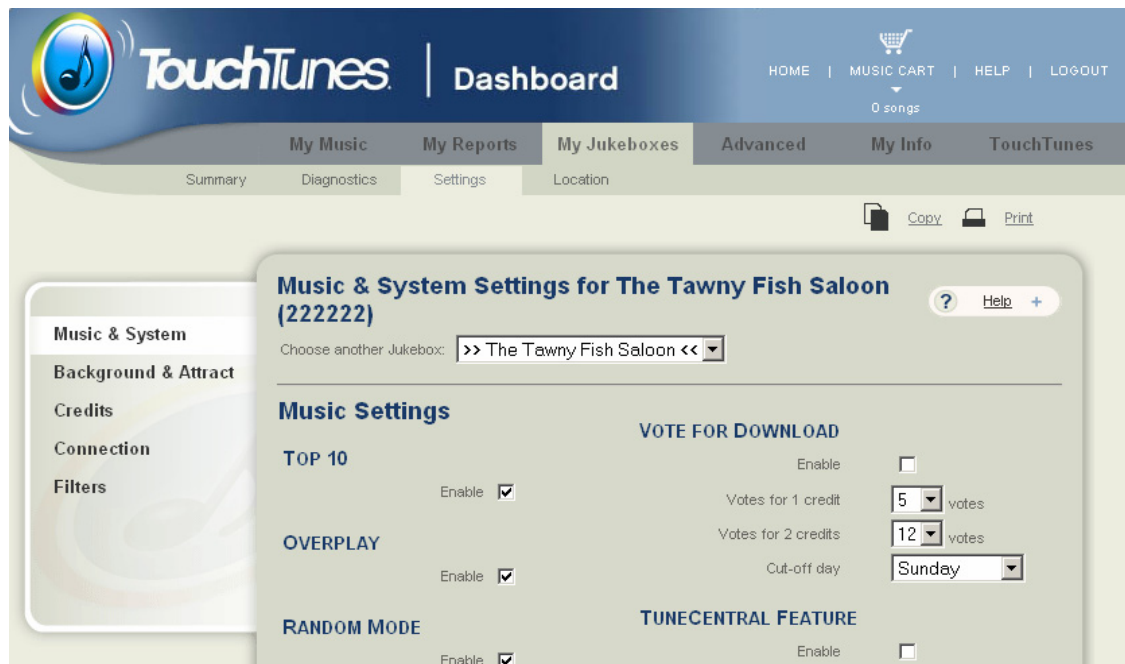 


Figure 12 Jukebox settings page for a NextGen jukeboxes

2. From the **Choose Another Jukebox** list, select the jukebox whose filters you want to view.
3. Choose **Filters** from the left-side menu.

The default music filters for the selected jukebox appear on the Music Filters page.


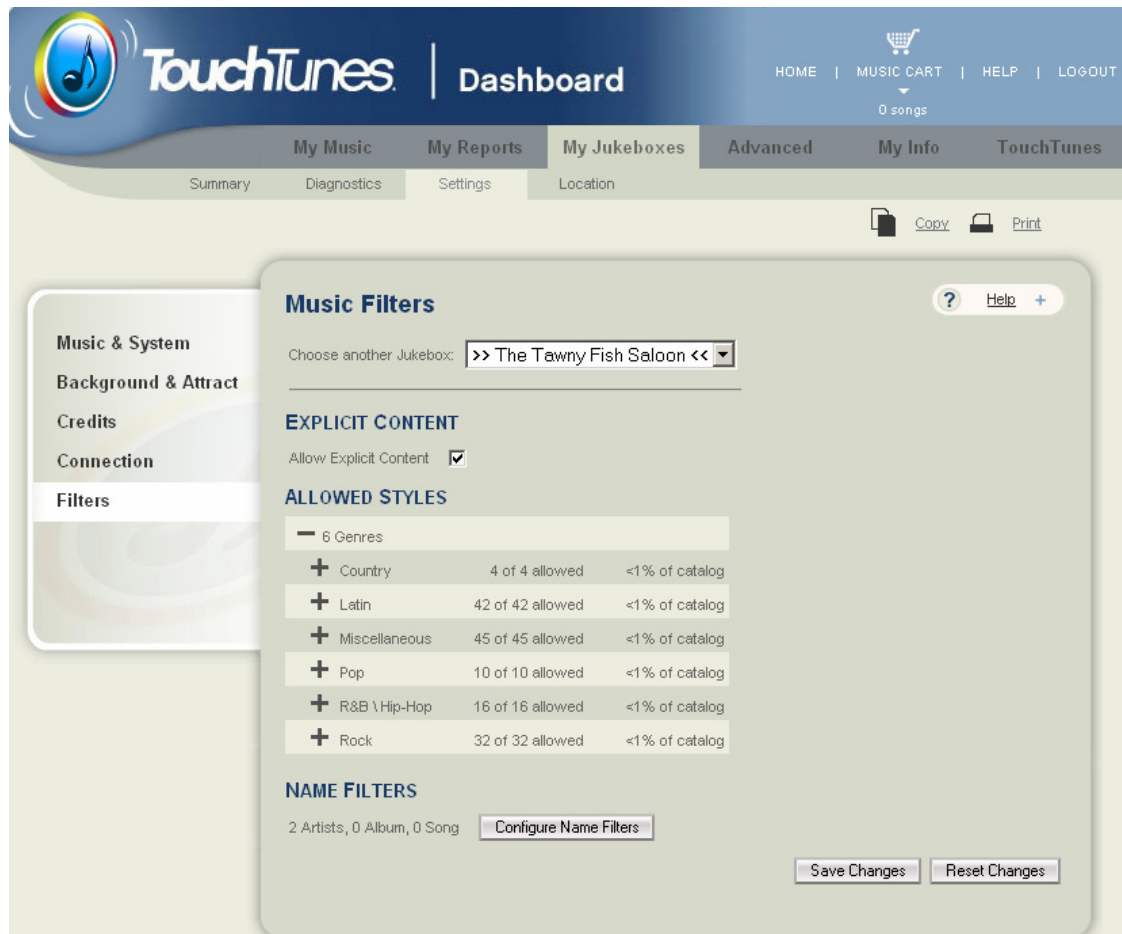 


Figure 13 Music Filters page for a NextGen jukebox

Gen 3 jukeboxes support *filter sets*. Each filter set can store different music filters and filter settings than the default.

 - (Optional) Select the filter set that you want to view or modify from the **Choose a Filter Set** list.

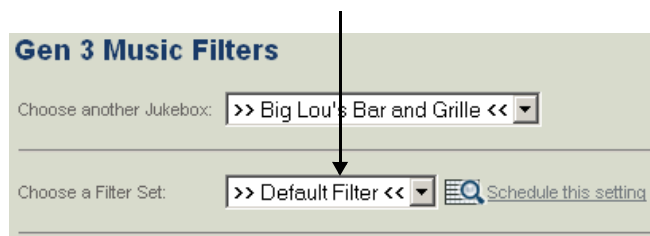

The music filters for the selected filter set appear in the Music Filters page.

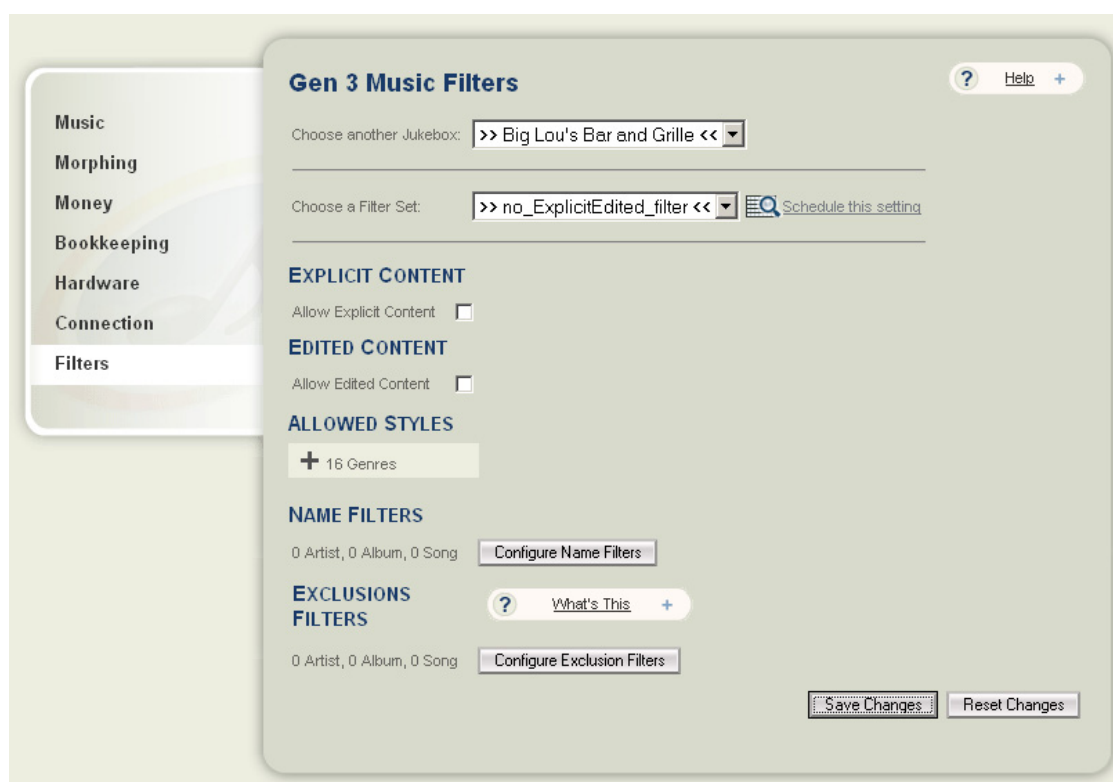 


Figure 14 Music filters in a filter set for a Gen 3 jukebox

Setting Up Explicit and Edited Music Filters for a Jukebox

How do I prevent music with explicit lyrics from being played on a jukebox using the TouchTunes Dashboard?

You use the explicit music filter to prevent music with explicit lyrics from being played on a jukebox. For example, you can use this filter to remove Rock, Rap or Hip-Hop songs with explicit lyrics from the jukebox located in a family-style restaurant.

On Gen 3 jukeboxes, you can also set up an edited music filter for a jukebox to control if *edited music* (radio-friendly versions of explicit songs with the offending lyrics removed or “bleeped out”) are available on a jukebox. You can use edited music to replace explicit songs on your jukeboxes. For example, you could choose to replace explicit Rock, Rap or Hip-Hop songs with their edited versions that are free of the offending lyrics.

NextGen and Gen 3 jukeboxes have separate procedures for setting up explicit (and edited) music filters.

- To set up the explicit music filter for a NextGen jukebox, see “To set up an explicit music filter for a NextGen jukebox:” on page 157.
- To set up the explicit and edited music filters for a Gen 3 jukebox, see “To set up explicit and edited music filters for a Gen 3 jukebox:” on page 158.

Tip: To identify the generation of your jukebox, choose **My Jukeboxes | Summary** in the Dashboard, select your jukebox from the list on the page that appears, and look at the Type field in the **Jukebox Information and Status** area.

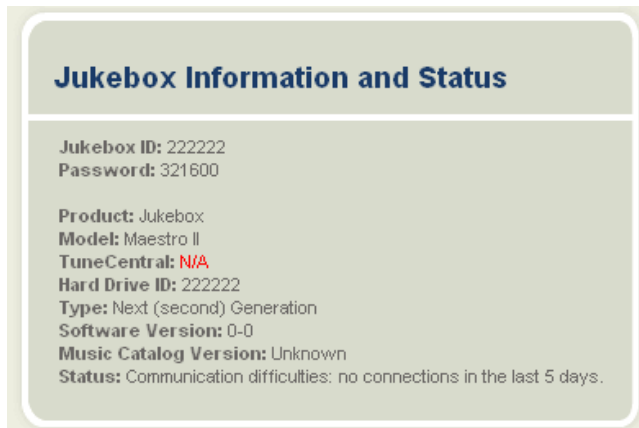 


Figure 15 Jukebox Information and Status area

1. To set up an explicit music filter for a NextGen jukebox:
2. View the music filters on a jukebox. See “Viewing Music Filters on a Jukebox using the TouchTunes Dashboard” on page 153.

The **Explicit Content** area shows whether music with explicit lyrics can be played on a jukebox. By default, this music filter is disabled so that all music (including music with explicit lyrics) are available on the jukebox.



Figure 16 Explicit content area

3. Do one of the following to set how the explicit music filter works:
 - Disable **Allow Explicit Content** to apply the explicit music filter. This prevents music with explicit lyrics from being available on the jukebox.
 - Enable **Allow Explicit Content** to remove the explicit music filter. This allows music with explicit lyrics to be available on a jukebox.

The music filter is set. You must save the explicit music filter setting in order to apply it to the jukebox.

4. Click **Save Changes** at the bottom of the Music Filters page.

The Confirmation page appears. You use this page to confirm the music filter settings before they are applied to the jukebox.

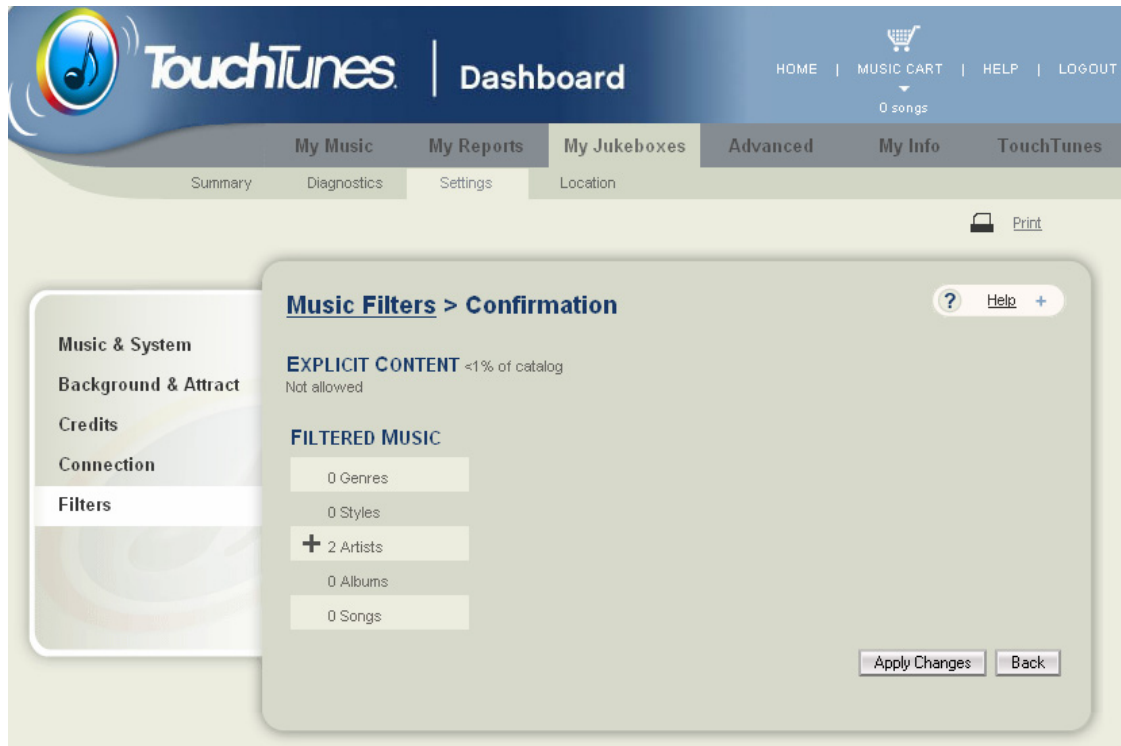 


Figure 17 Confirmation page for a NextGen jukebox

5. Click **Apply Changes**.

The Music Filters page reappears to confirm the change to the music filter.



The music filter is applied to the jukebox the next time it connects to the TouchTunes server. If your jukebox connects to the TouchTunes server using a broadband connection, the settings are applied to the jukebox when you log out of the Dashboard. Otherwise, the setting on the jukebox is updated the next time it connects to the TouchTunes server through its dial-up connection.

To set up explicit and edited music filters for a Gen 3 jukebox:

1. View the music filters on a jukebox. See “Viewing Music Filters on a Jukebox using the TouchTunes Dashboard” on page 153.

The **Explicit Content** area shows whether music with explicit lyrics is available to be played on a jukebox. The explicit music filter is disabled by default so you can select all music, including those with explicit lyrics.

Gen 3 Music Filters

Choose another Jukebox: >> Big Lou's Bar and Grille <<

Choose a Filter Set: >> Default Filter << [Schedule this setting](#)

EXPLICIT CONTENT

Allow Explicit Content ☒

EDITED CONTENT

Allow Edited Content ☒

Figure 18 Explicit Content and Edited Content areas for a Gen 3 jukebox.

2. Set the explicit and edited music filters using the following table as a guide:

Result:	Allow Explicit Content Setting:	Allow Edited Content Setting:	Content Setting Examples:
Explicit music unavailable Edited music unavailable	Disabled	Disabled	EXPLICIT CONTENT Allow Explicit Content <input type="checkbox"/> EDITED CONTENT Allow Edited Content <input type="checkbox"/>
Explicit music unavailable Edited music available	Disabled	Enabled	EXPLICIT CONTENT Allow Explicit Content <input type="checkbox"/> EDITED CONTENT Allow Edited Content <input checked="" type="checkbox"/>
Explicit music available Edited music unavailable	Enabled	Disabled	EXPLICIT CONTENT Allow Explicit Content <input checked="" type="checkbox"/> EDITED CONTENT Allow Edited Content <input type="checkbox"/>
Explicit music available Edited music available	Enabled	Enabled	EXPLICIT CONTENT Allow Explicit Content <input checked="" type="checkbox"/> EDITED CONTENT Allow Edited Content <input checked="" type="checkbox"/>

The explicit and edited music filter are set. You must save the explicit and edited music filter settings in order to apply it to the jukebox.

3. Click **Save Changes** at the bottom of the Music Filters page.

The Confirmation page appears. You use this page to confirm the music filter settings, as well as to save music filters to filter sets.


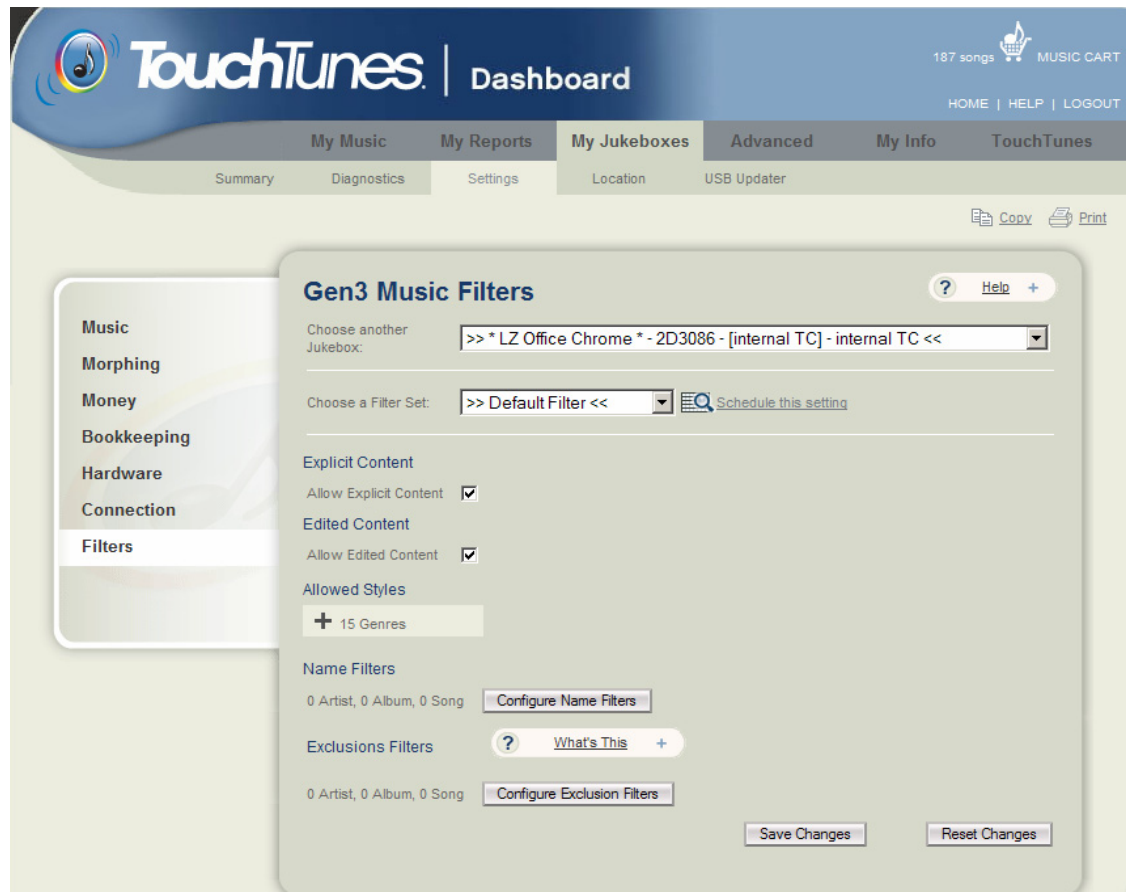 


Figure 19 Confirmation page for Gen 3 jukeboxes

Next, determine if the music filter(s) are saved as the default settings for the jukebox or are saved as a filter set. You save the explicit and/or edited filters to a filter set if you want to be able to control when these settings are active on a jukebox. For more information on filter sets and when to use them, see “Scheduling a Music Filter Set on a Gen 3 Jukebox” on page 173.


4. Do one of the following to determine if the explicit (and/or edited) music filter setting should become the default setting for a jukebox or should be applied to a music filter set:
 - To update the default jukebox settings with the music filter settings, make sure **Save As Default Filter** is selected and then continue to step 5.
 - To update an existing filter set with the music filter settings, choose **Save For Scheduling** and then go to step 6.
 - To create a new filter set with the music filter settings, choose **Save For Scheduling** and then go to step 7.

 5. To make the explicit and edited filter settings the default settings for the jukebox, click **Save As Default Filter**.

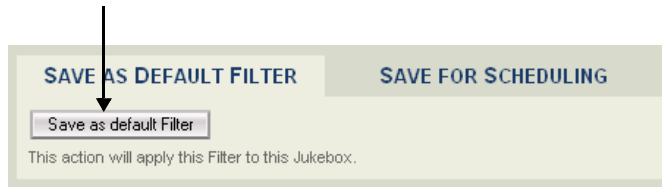


The Music Filters page reappears to confirm the change to the explicit and edited filters.

 6. To update an existing filter set with the new music filter settings, choose the filter set you want to update from the list that appears and then click **Save As An Existing Filter Set**.

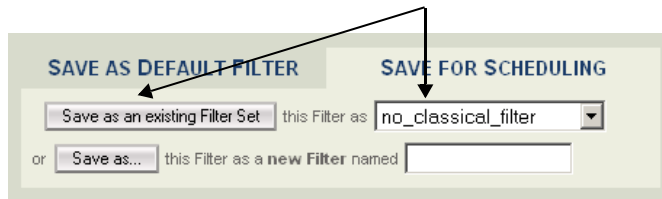

The Music Filters page reappears to confirm the change to the filter set. To schedule when a filter set is active, “Scheduling a Music Filter Set on a Gen 3 Jukebox” on page 173.

 7. To create a filter set from the music filter settings, enter the name for the new filter set in the field indicated and then click **Save as...**

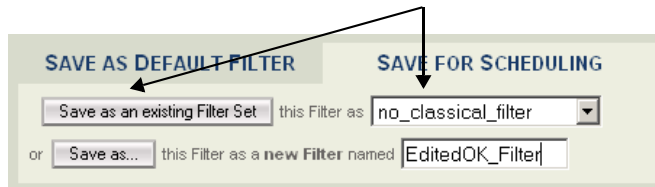

The Music Filters page reappears to confirm that a new filter set is created from the music filter settings. To schedule when a filter set is active, see “Scheduling a Music Filter Set on a Gen 3 Jukebox” on page 173.

Determining the Music Styles Allowed on a Jukebox

Can I control what music styles appear on a jukebox through the TouchTunes Dashboard?

You use the allowed styles music filter to set the *music styles* (music categories such as Pop, Rock or Rap) that are available for play on a jukebox. You generally use this filter to match the music available on a jukebox to a location's particular theme, such as featuring Country & Western music on the jukebox of a bar with a western theme.

Most general music styles contain multiple sub-genres; for example, the Pop music genre contains sub-genres like Alternative, Dance and Disco. While you use the allowable styles music filter to control the general music styles on a jukebox, you can also use this filter to tailor the music selection for a location by adding or removing sub-genres.

NextGen and Gen 3 jukeboxes have separate procedures for setting up the allowed styles music filters.

- To set up the allowed styles music filter on a NextGen jukebox, see “To set the music genres and styles for a NextGen jukebox:” on page 162
- To set up the allowed styles music filter on a Gen 3 jukebox, see “To set the music genres and styles for a Gen 3 jukebox:” on page 164.

To set the music genres and styles for a NextGen jukebox:

1. View the music filters for a jukebox. See “Viewing Music Filters on a Jukebox using the TouchTunes Dashboard” on page 153.
2. Navigate to the **Allowed Styles** area on the Music Filters page.
This area shows all available music styles for the jukebox. By default, all music genres are available on a jukebox.

ALLOWED STYLES		
— 6 Genres		
+ Country	4 of 4 allowed	<1% of catalog
+ Latin	42 of 42 allowed	<1% of catalog
+ Miscellaneous	45 of 45 allowed	<1% of catalog
+ Pop	10 of 10 allowed	<1% of catalog
+ R&B \ Hip-Hop	16 of 16 allowed	<1% of catalog
+ Rock	32 of 32 allowed	<1% of catalog

Figure 20 Allowed Styles area for a NextGen jukebox

3. Click + (plus sign) beside the name of the music genre that you want to modify.
The styles for the music genre appear.

ALLOWED STYLES		
— 6 Genres		
— Country	4 of 4 allowed	<1% of catalog
<input checked="" type="checkbox"/> Select All / None		
<input checked="" type="checkbox"/> BLUEGRASS		
<input checked="" type="checkbox"/> CHRISTIAN COUNTRY		
<input checked="" type="checkbox"/> COUNTRY-ROCK		
<input checked="" type="checkbox"/> COUNTRY		
+ Latin	42 of 42 allowed	<1% of catalog
+ Miscellaneous	45 of 45 allowed	<1% of catalog
+ Pop	10 of 10 allowed	<1% of catalog
+ R&B \ Hip-Hop	16 of 16 allowed	<1% of catalog
+ Rock	32 of 32 allowed	<1% of catalog

Figure 21 Styles for the Country music genre

4. Do any of the following to customize the music styles and genres for the jukebox:
 - To add a music genre to the jukebox, enable the **Select All / None** option for the genre.
 - To remove a music genre from the jukebox, disable the **Select All / None** option for the genre.

- To remove a music style from the jukebox, disable its option.
 - To add a music style to the jukebox, enable its option.
- Only the music for styles or genres that are enabled are available for play on the jukebox.

ALLOWED STYLES		
6 Genres		
Country	4 of 4 allowed	<1% of catalog
<input type="checkbox"/> Select All / None		<1% of catalog
<input type="checkbox"/> BLUEGRASS		<1% of catalog
<input checked="" type="checkbox"/> CHRISTIAN COUNTRY		<1% of catalog
<input checked="" type="checkbox"/> COUNTRY-ROCK		<1% of catalog
<input checked="" type="checkbox"/> COUNTRY		<1% of catalog

Figure 22 Bluegrass music style disabled in the Country music genre

- Once you have customized the music genres and styles for the jukebox, click **Save Changes** at the bottom of the Music Filters page.

The Confirmation page appears. You use this page to confirm the music filter settings before they are applied to the jukebox.

The screenshot shows the TouchTunes Dashboard with the 'Music Filters > Confirmation' page open. The sidebar on the left contains links for Music & System, Background & Attract, Credits, Connection, and Filters. The main content area shows the 'EXPLICIT CONTENT' setting as 'Allowed' and a summary of the filtered music: 0 Genres, +1 Styles, +2 Artists, 0 Albums, and 0 Songs. At the bottom right, there are 'Apply Changes' and 'Back' buttons.

Figure 23 Confirmation page for a NextGen jukebox

- Click **Apply Changes**.

The Music Filters page reappears to confirm the change to the music filter.



The music filter is applied to the jukebox the next time it connects to the TouchTunes server. If your jukebox connects to the TouchTunes server using a broadband connection, the settings are applied to the jukebox when you log out of the Dashboard. Otherwise, the setting on the jukebox is updated the next time it connects to the TouchTunes server through its dial-up connection.

To set the music genres and styles for a Gen 3 jukebox:

1. View the music filters on a jukebox. See “Viewing Music Filters on a Jukebox using the TouchTunes Dashboard” on page 153.

2. Navigate to the **Allowed Styles** area on the Music Filters page.

This area shows all the music genres available for a jukebox. By default, all music styles are available on a jukebox.

ALLOWED STYLES		
— 16 Genres		
+ Blues/Jazz	9 of 9 allowed	<1% of catalog
+ Cajun	4 of 4 allowed	<1% of catalog
+ Celtic	2 of 2 allowed	<1% of catalog
+ Classical/Opera	2 of 2 allowed	<1% of catalog
+ Country	4 of 4 allowed	<1% of catalog
+ Easy listening	3 of 3 allowed	<1% of catalog
+ Electronic	4 of 4 allowed	<1% of catalog
Francophone		<1% of catalog
+ Latin	42 of 42 allowed	<1% of catalog
+ Miscellaneous	6 of 6 allowed	<1% of catalog
+ Pop	5 of 5 allowed	<1% of catalog
+ R&B \ Hip-Hop	7 of 7 allowed	<1% of catalog
+ RAP	6 of 6 allowed	<1% of catalog
+ Rock & Roll	1 of 1 allowed	<1% of catalog
+ Rock	31 of 31 allowed	<1% of catalog
+ World	23 of 23 allowed	<1% of catalog

Figure 24 Allowed Styles area for a Gen 3 jukebox

3. Click + (plus sign) beside the name of the music genre that you want to modify.

The music styles for this genre appear.

ALLOWED STYLES		
— 16 Genres		
+ Blues/Jazz	9 of 9 allowed	<1% of catalog
+ Cajun	4 of 4 allowed	<1% of catalog
+ Celtic	2 of 2 allowed	<1% of catalog
+ Classical/Opera	2 of 2 allowed	<1% of catalog
— Country	4 of 4 allowed	<1% of catalog
<input checked="" type="checkbox"/> Select All / None		<1% of catalog
<input checked="" type="checkbox"/> Bluegrass		<1% of catalog
<input checked="" type="checkbox"/> Christian Country		<1% of catalog
<input checked="" type="checkbox"/> Country-Rock		<1% of catalog
<input checked="" type="checkbox"/> Country		<1% of catalog

Figure 25 Styles for the Country music genre

4. Do any of the following to add or remove music genres or sub-genres from the jukebox:

- To add a music genre to the jukebox, enable the **Select All / None** option for the genre.
- To remove a music genre from the jukebox, disable the **Select All / None** option for the genre.
- To remove a music style from the jukebox, disable its option.
- To add a music style to the jukebox, enable its option.


Disabling an option removes the music for the genre or style from play on the jukebox.

ALLOWED STYLES		
— 16 Genres		
+ Blues/Jazz	9 of 9 allowed	<1% of catalog
+ Cajun	4 of 4 allowed	<1% of catalog
+ Celtic	2 of 2 allowed	<1% of catalog
+ Classical/Opera	2 of 2 allowed	<1% of catalog
— Country	4 of 4 allowed	<1% of catalog
<input type="checkbox"/> Select All / None		<1% of catalog
<input type="checkbox"/> Bluegrass		<1% of catalog
<input checked="" type="checkbox"/> Christian Country		<1% of catalog
<input checked="" type="checkbox"/> Country-Rock		<1% of catalog
<input checked="" type="checkbox"/> Country		<1% of catalog

Figure 26 Bluegrass music style disabled in the Country music genre

5. Once you have customized the music genre and styles for the jukebox, click **Save Changes** at the bottom of the Music Filters page.

 The Confirmation page appears. You use this page to confirm the music filter settings, as well as to save music filters as filter sets for scheduling.

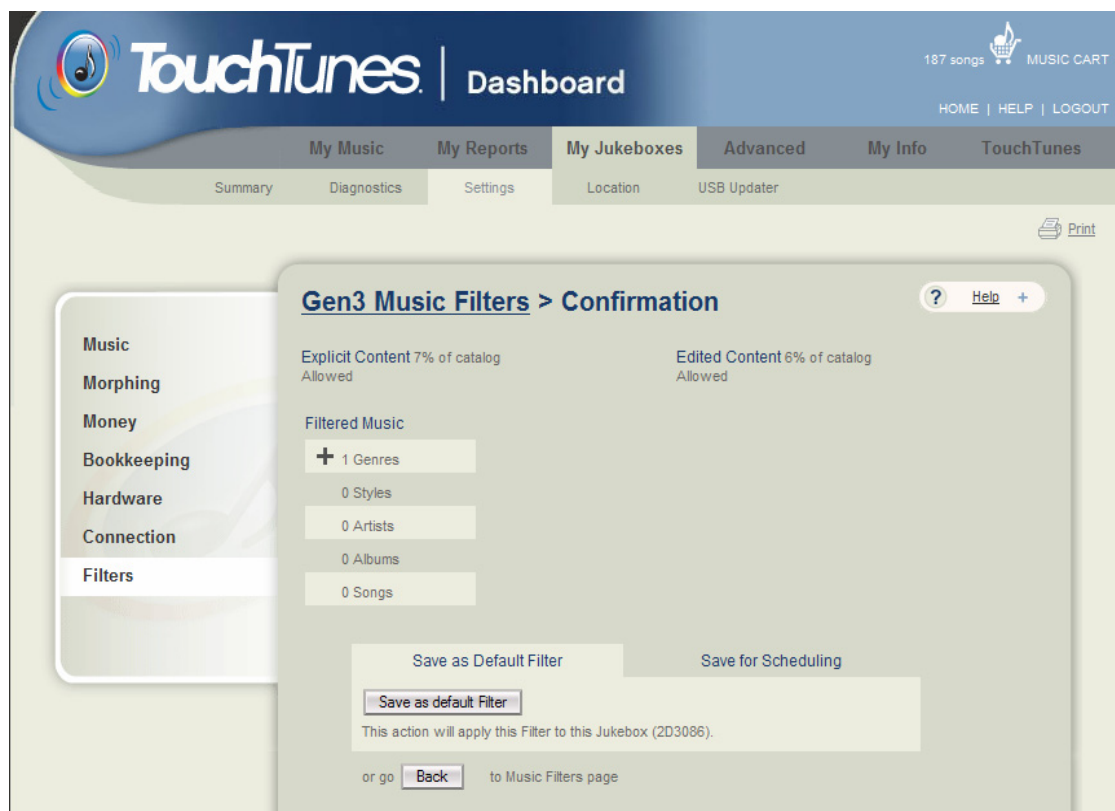


Confirmation page for Gen 3 jukeboxes

Next, determine if the music filter is saved as the default settings for the jukebox or are saved as a filter set. You save the allowed styles music filter to a filter set if you want to be able to control when these settings are active on a jukebox. For more information on filter sets and when to use them, see "Scheduling a Music Filter Set on a Gen 3 Jukebox" on page 173.


6. Do one of the following to determine if the allowed styles filter becomes the default for a jukebox or is saved to a music filter set:
 - To update the default jukebox settings with the music filter settings, ensure that **Save As Default Filter** is selected and then continue to step 7.
 - To update an existing filter set with the music filter settings, choose **Save For Scheduling** and then go to step 8.
 - To create a new filter set from the music filter settings, choose **Save For Scheduling** and then go to step 9.

 7. To make the allowed styles music filter settings the default for the jukebox, click **Save As Default Filter**.

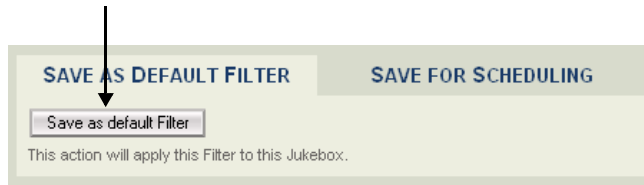


The Music Filters page reappears to confirm that the allowed styles filter is changed.

 8. To update an existing filter set with the new music filter settings, choose the filter set you want to update from the list that appears and then click **Save As An Existing Filter Set**.

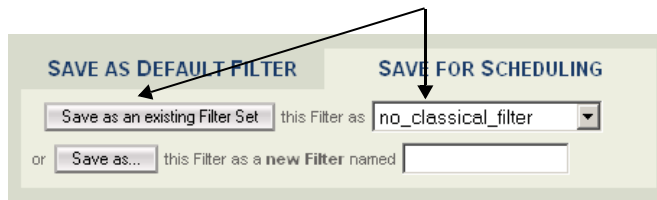

The Music Filters page reappears to confirm the change to the filter set. To schedule when a filter set is active, "Scheduling a Music Filter Set on a Gen 3 Jukebox" on page 173.

 9. To create a filter set from the music filter settings, enter the name for the new filter set in the field indicated and then click **Save as...**

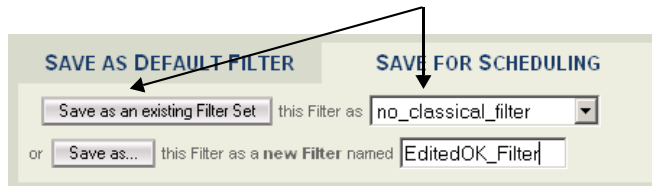

The Music Filters page reappears to confirm that a new filter set is created from the music filter settings. To schedule when a filter set is active, see "Scheduling a Music Filter Set on a Gen 3 Jukebox" on page 173.

Scheduling TuneCentral for a NextGen Jukebox

Can I schedule TuneCentral through the TouchTunes Dashboard? Do music filters apply to TuneCentral?

You can use the TouchTunes Dashboard to schedule when music from the TuneCentral music library is available on NextGen jukeboxes. Unlike other music filters, you use the Advanced menu in the Dashboard to add, modify or remove events to the TuneCentral schedule for a jukebox. However, TuneCentral availability is considered a music filter because you can use it to restrict music selections on a jukebox. When TuneCentral is unavailable, the music available on a jukebox is restricted to only the music stored on its *local drive* (the main hard drive in the jukebox).

You can use this filter if a location owner asks you to restrict the music for their location to selections from a pre-approved music playlist over a certain time period. To do this, you load the pre-approved music to the local drive of the jukebox and then disable TuneCentral for this time period. During this period, music from TuneCentral is not available and the only selections from

this list can be played on the jukebox. Outside of this time period, music from TuneCentral is accessible on the jukebox.

Note that all other music filters (such as explicit and Name filters) are applied to the all music currently available on a jukebox. When TuneCentral is unavailable, music filters apply to the music on the local drive of the jukebox. When TuneCentral becomes available, music filters apply to both the music on the local drive and the music in TuneCentral.

- To add a new event to, or modify an existing event on the TuneCentral schedule for a jukebox, see “To schedule when TuneCentral is available:” on page 168.
- To remove an existing event from the TuneCentral schedule for a jukebox, see “To remove an existing event from the TuneCentral schedule:” on page 171.

To schedule when TuneCentral is available:

1. In the TouchTunes Dashboard, choose **Advanced | Schedules**.

The Advanced Features & Schedules page appears. The **TuneCentral Schedule** area on this page shows the current schedule for TuneCentral on the jukebox. You use the controls in this area to add or modify events to the schedule.

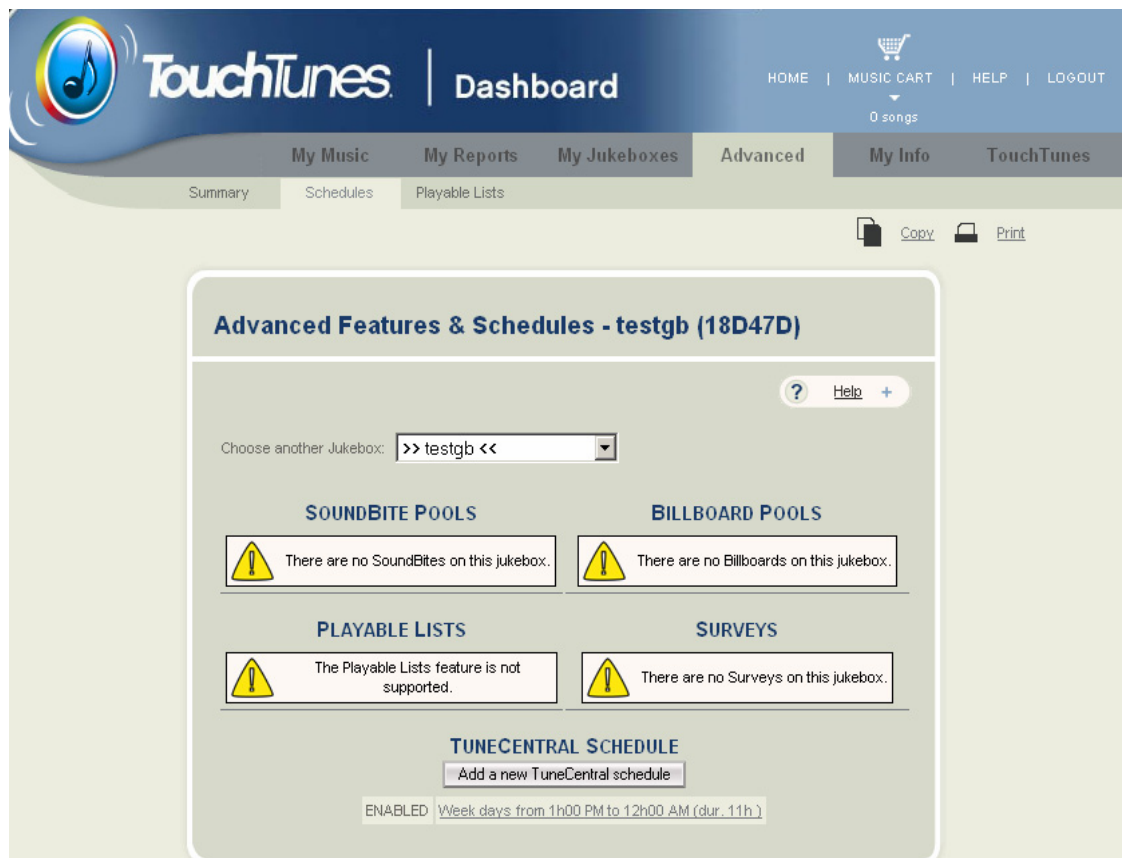 


Figure 27 Advanced Features and Schedules page for NextGen jukeboxes

Note: Not all users can modify the TuneCentral schedule for a jukebox. When a jukebox is associated with a Customer account, you can view its TuneCentral schedule but you cannot modify it. For more information, contact TouchTunes Technical Support.

2. If necessary, select the jukebox for which you want to schedule TuneCentral availability from the **Choose Another Jukebox** list.
3. Do either of the following:
 - To add a new event to the TuneCentral schedule, click **Add a New TuneCentral Schedule**.
 - To modify an existing event on the TuneCentral schedule, click the event in the **TuneCentral Schedule** area.

The TuneCentral Schedule page for the jukebox appears. You use the controls on this page to define the time period when TuneCentral is available.

The screenshot shows a web interface titled "TuneCentral Schedule for testgb (18D47D)". Below the title is a "Help" link with a question mark icon and a plus sign. The main section is labeled "DAYS" and contains four radio button options: "Everyday" (selected), "Weekdays", "Weekends", and "Custom". To the right of these options are two time selection fields: "START TIME" and "END TIME". Each field consists of a dropdown menu for the hour (both set to "12"), a dropdown for minutes (both set to "00"), and a dropdown for AM/PM (both set to "AM"). Below these fields is a note: "Note: If the start and end times are equal, this implies a 23 hours and 59 minutes period." At the bottom of the form are two buttons: "Add TuneCentral Period" and "Cancel".

Figure 28 TuneCentral Schedule page for a new event

4. Use the controls in the **Start Time** and **End Time** areas to define the time period when TuneCentral is available.

Tip: Set the Start Time and End Time to the same value to schedule TuneCentral for an entire day (23 hours and 59 minutes).

- In the **Days** area, select one of the following to define the day(s) of the week for the TuneCentral schedule:

Select:	To:
Everyday	Enable TuneCentral at the specified time each day during the week.
Weekdays	Enable TuneCentral at the specified time from Monday to Friday.
Weekends	Enable TuneCentral at the specified time on Saturday and Sunday only.
Custom	Enable TuneCentral at the specified time on a particular day.

TuneCentral Schedule for testgb (18D47D)

? Help +

DAYS

☐ Everyday

☐ Weekdays

☒ Weekends

☐ Custom

START TIME 12 :00 PM

END TIME 3 :00 AM

Note: If the start and end times are equal, this implies a 23 hours and 59 minutes period.

Add TuneCentral Period Cancel

Figure 29 TuneCentral Schedule page configured to allow TuneCentral availability over the weekend

You are now ready to add the new event to or update the event on the TuneCentral schedule.

- Click **Add TuneCentral Period** (to add a new TuneCentral event to the schedule) or **Accept Schedule Changes to TuneCentral Period** (to update an existing event on the schedule).

The **TuneCentral area** on the Advanced Features & Schedules page shows the updated TuneCentral schedule.



Figure 30 Advanced Features & Schedules page showing new TuneCentral scheduled event

To remove an existing event from the TuneCentral schedule:

1. In the TouchTunes Dashboard, choose **Advanced | Schedules**.

The Advanced Features & Schedules page appears. The **TuneCentral Schedule** area on this page shows the current schedule for TuneCentral on the jukebox.



Figure 31 Advanced Features and Schedules page for NextGen jukeboxes

2. If necessary, select the jukebox for which you want to schedule TuneCentral availability from the **Choose Another Jukebox** list.
The **TuneCentral Schedule** area shows current scheduled TuneCentral events for the jukebox.
3. Click the event that you want to remove from the TuneCentral schedule.

The details for the scheduled event appear in the TuneCentral Schedule page.

Note: The next step permanently removes a scheduled event from the TuneCentral schedule. Ensure that the event you want to delete appears in the TuneCentral Schedule page before continuing.

4. On the TuneCentral Schedule page, click **Remove Period**.

The Advanced Features & Schedules page reappears, confirming that the event is removed from the TuneCentral schedule.

Scheduling a Music Filter Set on a Gen 3 Jukebox

Can I schedule my music filters using the TouchTunes Dashboard?

You can schedule when a *filter set* (a single group of music filters) are applied to a Gen 3 jukebox. Scheduling filter sets gives you flexibility to accommodate locations with rules about when certain music (such as explicit music or music in a particular genre) should be available on their jukebox.

 
For example, assume that one of your jukeboxes is installed in a location with connected bar and restaurant sections. The location owner asks you to set up their jukebox using the following rules:

- From 12 - 8 PM, explicit and edited music should not be available on the jukebox, since this is the time when families with children are usually in the restaurant.
- From 8 - 10 PM, edited music can be available on the jukebox, since families with children are less likely to be in the restaurant.
- From 10 PM onwards, explicit music can be available on the jukebox, since it is unlikely that families with children will be in the restaurant.

To do this, you first create a separate filter set for each time period with the appropriate settings for the explicit and edited music filters. Once these filter sets are created, you schedule the time period when each set is active according to the schedule set by the location owner.

To schedule a music filter set:

1. View the music filters on a jukebox. See “Viewing Music Filters on a Jukebox using the TouchTunes Dashboard” on page 153.
2. Select any filter set from the **Choose a Filter Set** list and then click **Schedule This Setting**.

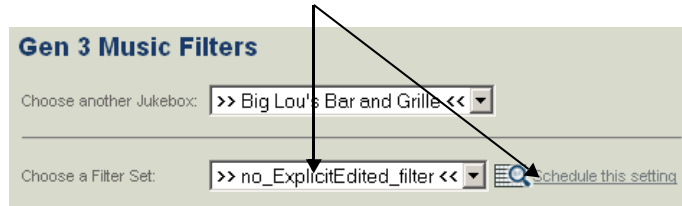

The Music Filters Scheduling View page appears. You use this page to set when a filter set is active on a jukebox.

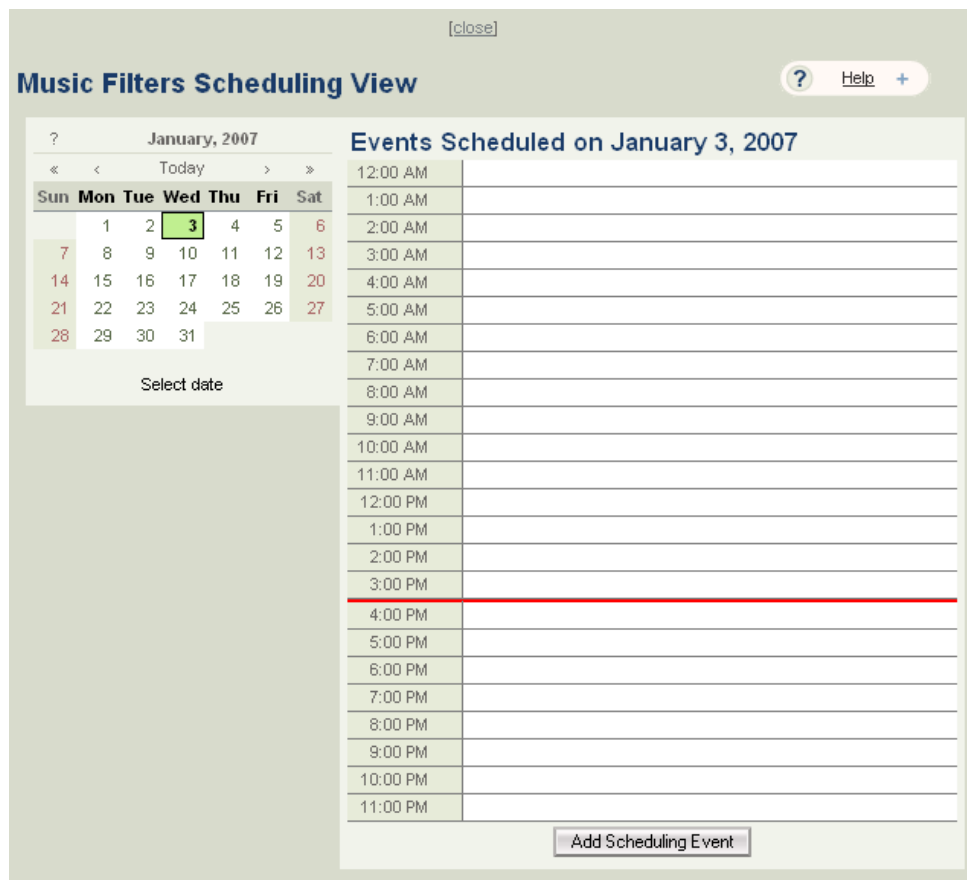 


Figure 32 Music Filters Scheduling View page

3. Do one of the following to set the schedule for a filter set:
 - Click Add Scheduling Event.
 - Click any future time slot in the schedule (below the red line) that is open.

The Scheduling window appears. You use this window to define when a filter set is active on the jukebox.

Figure 33 Scheduling window

4. In the **Step 1: Choose a Recurrence** area, select one of the following options to set whether and how often a filter set repeats:

Option:	Result:	Use Case:
Does not repeat	The filter set is applied to the jukebox only once.	Use this option when you want to apply a filter set for certain occasions that do not repeat on a regular basis, such as an office party or wedding reception.
Weekly	The filter set repeats on the specified day(s) of the week.	Use this option when you want to reapply a filter set on the same day each week, such as to restrict explicit music from being played between 5 and 9 PM each day except for weekends.
Monthly	The filter set repeats on the same day each month.	Use this option when you want to reapply a filter set each month, such as to accommodate special theme-based days on the 5th, 15th and 25th of each month.
Yearly	The filter set repeats on the day each year.	Use this option to reapply a filter set on a certain day each year, such as to allow Christmas music to be available only on December 25th each year.

The controls in the **Set Time** and **Specify Action(s)** areas change depending on what option you choose. Next, use these controls to define when and for how long a filter set will be active on a jukebox.

5. In the **Set Time** area, do the following to set the day(s) and time when a filter set is applied:

- From the **Setting Value At** list, select the starting time when the filter set is active on the jukebox. The filter set is active on the jukebox from this time until the next scheduled filter set event.
- Set the day(s) of the week, month or year that the filter set is active.
- (Optional) For weekly filters, set the duration (in months) over which the filter is active.

i) **SET TIME**

Setting value at: 5:30 PM

Select All	Sun	Mon	Tue	Wed	Thu	Fri	Sat
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>

Range from January to December

Figure 34 Set Time area showing a music filter that is repeated on Monday, Wednesday and Friday of each week

6. In the **Specify Action(s)** area, select the filter from the **Music Filters** list that is to be active on the jukebox at the time and date specified in the previous step.

ii) **SPECIFY ACTION(S) : MUSIC FILTERS**

Music Filters no_ExplicitEdited_filter

7. (Optional) Click **Add Scheduling Event Template** and then repeat the previous two steps to either extend the time period for the filter set and/or schedule other music filters for the jukebox.

The screenshot shows a 'Scheduling' window with a title bar containing a question mark, 'Help', and a plus sign. The window is divided into two main sections, each representing a scheduling event template.

STEP 1: CHOOSE A RECURRENCE

Radio buttons for recurrence: ☐ Does not repeat, ☒ Weekly, ☐ Monthly, ☐ Yearly.

STEP 2: SET TIME AND ACTION

i) SET TIME

Setting value at: 5:30 PM

Select All	Sun	Mon	Tue	Wed	Thu	Fri	Sat
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>

Range from January to December

ii) SPECIFY ACTION(s) : MUSIC FILTERS

Music Filters: no_ExplicitEdited_filter

Remove Scheduling Event Template

i) SET TIME

Setting value at: 5:45 PM

Select All	Sun	Mon	Tue	Wed	Thu	Fri	Sat
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>

Range from January to December

ii) SPECIFY ACTION(s) : MUSIC FILTERS

Music Filters: no_ExplicitEdited_filter


Add Scheduling Event Template

Figure 35 Scheduling window showing extension of the No_ExplicitEdited Music filter duration

You should be aware of the following when using the Scheduling window:

- You can remove any additional scheduled event by clicking **Remove Scheduled Event Template**. Because the Dashboard does not confirm this action, be sure that you are removing the correct event before clicking this button. Otherwise, you must re-create the event.
- There is no limit as to how many filter set events can be set up in the Scheduling window. A good rule-of-thumb is to set the schedule for a single filter set before scheduling other filter sets on the same jukebox. Otherwise, you may become confused between schedules for different filter sets.
- There is no limit on how long a filter set can be active on a jukebox. However, consider making a filter set the default filter set for the jukebox if you want to apply a music filter set for several hours on a regular basis. Otherwise, the filter set schedule may become so congested that adding or modifying scheduling events becomes nearly impossible.

 8. Once you complete the schedule for your music filter sets, click **Save Schedule** in the **Step 3: Accept or Discard Changes** area.

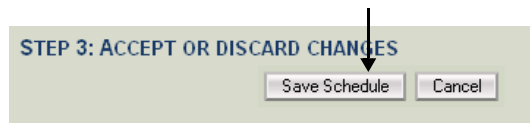

The Music Filters Scheduling View page reappears, showing the filter set(s) that you scheduled. Each filter set event scheduled in the jukebox appears in its time period.

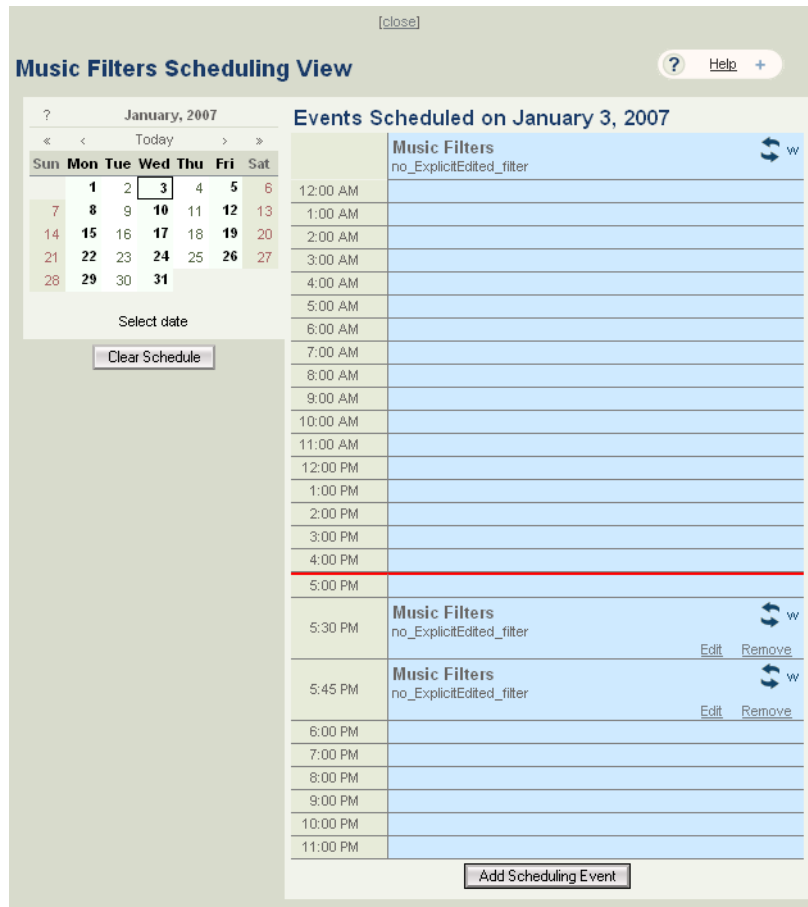 



Figure 36 Dashboard schedule showing a weekly filter set event

Recurring events in the schedule are identified by a  icon with the letter following the icon indicating whether the event recurs weekly (w), monthly (m) or yearly (y).

 


Figure 37 Recurring weekly event

Once you schedule a filter set event in the TouchTunes Dashboard, you can add additional events, as well as modify or delete existing filter set events.

9. (Optional) Do any of the following:

- Schedule another filter set event by clicking **Add Scheduled Event** and then repeating steps 4 to 8.
 - Modify an event for a filter set by clicking **Edit** in the time period for the event and then modifying the details for the filter set in the Scheduling window that appears. Note that modifying one instance of a repeating filter set event changes all instances of this event. For example, if you move the starting time for one weekly filter set event from 5 PM to 5:15 PM, all other events are also moved to 5:15 PM.
 - Delete a scheduled event for a filter set by clicking **Remove** in the time period for the event and then confirming the action. Note that when you delete one instance of a repeating filter set event, all instances of the events are deleted. You cannot delete a single filter set event from a series of recurring events.
10. Return to the Dashboard by clicking **Close** at the top of the Music Filters Scheduling View page.
- The Music Filters page reappears to confirm that the jukebox schedule is updated.

12

Setting Up Communications Settings Using the TouchTunes Dashboard

This chapter explains how to set the connection time when your TouchTunes jukebox communicates with the TouchTunes server through the TouchTunes Dashboard.

Contents

<i>Overview</i>	<i>181</i>
<i>Configuring Jukebox-related Communications Settings</i>	<i>182</i>

Overview

You can use the TouchTunes Dashboard to establish the connection period when your jukebox will communicate with the TouchTunes server. The connection period is used to accomplish different tasks, depending on the type of connection established between the jukebox and the TouchTunes server:

- On jukeboxes using dial-up Internet access, the connection period is when the jukebox calls the TouchTunes server for all communication related needs, such as downloading new songs, receiving configuration changes made via the TouchTunes Dashboard, reporting revenue, or periodically, downloading software upgrades.
- On jukeboxes using broadband internet access, the connection period is when the jukebox reports its daily income and plays, as well as downloads and installs any available jukebox software updates. However, because the jukebox is continually connected to the TouchTunes server, many other communication-related tasks (such as settings changes done through the Dashboard) are immediate.

In this chapter, you will find answers to the following questions:

- “What communications-related settings for a jukebox are available through the TouchTunes Dashboard? How do I modify the time period when a jukebox calls the TouchTunes server?” (p. 182)

Configuring Jukebox-related Communications Settings

What communications-related settings for a jukebox are available through the TouchTunes Dashboard? How do I modify the time period when a jukebox calls the TouchTunes server?

The only setting you can control solely from the TouchTunes Dashboard is the starting and ending time for the daily connection period when your jukebox connects to the TouchTunes server.

This is a safety precaution that prevents you or your employees from inadvertently preventing the jukebox from communicating with the TouchTunes server. If a jukebox does not connect to the TouchTunes server for three to five days, it automatically shuts down and must be reset by TouchTunes.

To access the full set of communication settings, you must go on-site. See the *Jukebox Software Operator's Manual* for a breakdown of all communication settings available for your jukebox.

Note: The name of the connection period setting varies by jukebox generation. For example, this setting is called the Calling Window for NextGen jukeboxes.

To view jukebox-related communications settings:

1. In the TouchTunes Dashboard, choose **My Jukeboxes | Settings**.
2. If necessary, select the jukebox whose connection window you want to change from the **Choose Another Jukebox** list.



3. Choose **Connection** from the left-side menu.

The Connection Settings page appears. You use the controls on this page to set the connection window when the jukebox communicates with the TouchTunes server.



Figure 13 Connection Settings Page

Before setting the connection window, note the following:

- For jukeboxes using a dial-up Internet connection, the longer the calling window, the more songs the jukebox will be able to download, which can have a greater impact on slower dial-up connections. The busiest time for the TouchTunes server is between 4 and 8 AM Eastern time. If you can set the jukebox to call outside of this time period, you may get better throughput.
- If you are using a broadband connection, while the jukebox may be continually connected to the Internet, the calling window is still used to identify when songs are downloaded and software maintenance can occur. Since the functionality of the jukebox could be interrupted during software maintenance, the calling window should remain outside of the location's operating hours.

Note: Software maintenance only occurs a few times per year.

- Connection times can be displayed in 24-hour time format (00:00-24:00) or in the 12 -hour AM/PM format
4. To set when the jukebox will begin its connection each night, select a time from the **Start Connection At** list.
 5. To set when the jukebox will end its connection each night, select a time from the **End Connect At** list.
 6. Click **Accept Changes**.

The Connection Settings page indicates whether the changes were successful.

If the jukebox to which you are applying changes is connected by dial-up, these new settings will be applied at the next connection time. The jukebox then continues to use these new settings.

If the jukebox to which you are applying changes is connected by broadband, the changes will be applied immediately. If you are in the middle of the current connection time, the new connection window is implemented the following night.

For more information on connection settings, and more details on setting the connection time, see the *Jukebox Software Operator's Manual* for your jukebox. This document is available from the Documentation page in the Dashboard, which you can access by choosing **TouchTunes | Documentation**.

7.

Rebooting a Jukebox Remotely

How can I reboot a jukebox through the Dashboard?

Rebooting a jukebox can sometimes fix issues that cannot otherwise be resolved. To make this process more convenient, Gen 3 jukeboxes with through a broadband connection can be rebooted remotely from the Dashboard.

To reboot a Gen 3 jukebox that has a broadband connection

1. In the TouchTunes Dashboard, choose **My Jukeboxes | Summary**.
2. From the drop-down menu, select the jukebox you want to reboot.
3. Click the **Initiate Reboot** button.

Communications with the jukebox should resume once it has completely rebooted.

The screenshot displays the TouchTunes Dashboard interface. The top navigation bar includes 'My Music', 'My Reports', 'My Jukeboxes', 'Advanced', 'My Info', and 'TouchTunes'. The sub-navigation bar shows 'Summary', 'Diagnostics', 'Settings', 'Location', and 'USB Updater'. The main content area is titled 'Jukebox Manager - Le Bar (34A886)'. It features a dropdown menu to 'Choose a jukebox: >> Le Bar - 34A886 <<'. Below this are two panels: 'Location Information' and 'Jukebox Information and Status'. The 'Location Information' panel shows details for 'Le Bar' and has buttons for 'Edit this Location Information' and 'Change This Jukebox Location'. The 'Jukebox Information and Status' panel shows details like 'Jukebox ID: 34A886', 'Password: 630993', 'Product: JukeboxGen3', 'Model: Allegro', 'TuneCentral: Yes, internal', 'Hard Drive ID: SPL3D74R', 'Type: Gen3', 'Software Version: 3.4.6-8', 'Music Catalog Version: 11.48.3', and 'Status: Active; communicates without problems.' At the bottom of this panel is a 'Remote Reboot:' section with an 'Initiate Reboot' button, which is highlighted with a red rectangle.

13

Monitoring Jukeboxes Using the TouchTunes Dashboard

This chapter explains how to monitor the status of your jukeboxes through TouchTunes Dashboard, as well as how to view the current diagnostics for Gen 3 jukeboxes.

Contents

<i>Overview</i>	<i>185</i>
<i>Viewing Jukebox Connectivity Status</i>	<i>186</i>
<i>Viewing Gen 3 Jukebox Diagnostics</i>	<i>188</i>

Overview

You can use the TouchTunes Dashboard to monitor the general status of all of your jukeboxes and ensure they are operating properly. Using the Dashboard to monitor the health of your jukeboxes can help you identify, diagnose and correct problems with a jukebox even before the location owner becomes aware there was a problem in the first place.

The Dashboard provides useful connection-related information for all of your jukeboxes, including their connection modes, the last time each jukebox connected to the TouchTunes server and the number of new songs it received during this connection. You can use this information to ensure that your jukeboxes are operating properly, as well as troubleshoot any connectivity problems, such as the jukebox not being able to call to the TouchTunes server because its phone line was accidentally unplugged.

Gen 3 jukeboxes provide a thorough list of diagnostics in the TouchTunes Dashboard that indicate the status of key jukebox components, such as the bill and coin collectors. You can also configure the Dashboard to alert you by e-mail in case of critical problems with one of these components.

In this chapter, you will find answers to the following questions:

- “How do I know if my jukeboxes are connecting properly to the TouchTunes Dashboard?” (p. 186)
- “What diagnostics can I monitor for a Gen 3 jukebox using the TouchTunes Dashboard?” (p. 188)

Viewing Jukebox Connectivity Status

How do I know if my jukeboxes are connecting properly to the TouchTunes Dashboard?

You can view a report showing the connection status for all of your jukeboxes in the TouchTunes Dashboard and use this report to quickly identify any jukeboxes with connectivity problems. If necessary, you can then troubleshoot the issue and schedule an on-site visit to correct the problem.

To view the status of your jukeboxes:

1. In the TouchTunes Dashboard, choose **My Reports | Jukeboxes**.
The Jukeboxes Route Report page appears, listing all of your jukeboxes and showing their status.

Jukeboxes Route Report (all jukeboxes)

This is a status report of your jukebox route. From this report, you may configure a jukebox by clicking on its location name in the first column below. This will bring you to the configuration screen.

Legend

- The jukebox is in sleep mode.
- The jukebox song library is full.
- The jukebox has an unstable link to TouchTunes' communication servers: check the phone line or broadband connection.
- The jukebox is experiencing communication difficulties: it has not connected within the last 5 days.
- The jukebox doesn't have any of the above problems.

This report shows all your jukeboxes. To show only the jukeboxes that may have problems, click [here](#).

Location	Jukebox ID	Model	Status	Date & Time	Connection Mode	Duration	New Songs Sent
WAREHOUSE	3D71F4	Allegro internal TC	✓	March 19, 2008 6:21 AM EDT	Broadband	1h 47m 55s	1
WAREHOUSE	2BCB05	Allegro	!	March 19, 2008 9:33 AM EDT	Broadband	1m 55s	0
WAREHOUSE	3DDCEC	Allegro internal TC	!!!	October 29, 2007 2:40 PM EDT	Broadband	6m 51s	0

Figure 14 Jukeboxes Route Report page

Use the following table to help you interpret this report.


Column:	Description:
Location	The current location of the jukebox.
Jukebox ID	The ID number of the jukebox.
Model	The jukebox model and TuneCentral installation status.
Status	The current overall status of the jukebox. Green checkmark icons (✓) in this column indicate healthy jukeboxes. Otherwise, an icon indicating the type of problem with the jukebox appears here.
Last Connection: Date and Time	The date and time of the last connection between the jukebox and the TouchTunes server.
Last Connection: Connection Mode	The connection mode used for the last connection between the jukebox and the TouchTunes server. <ul style="list-style-type: none"> • If your jukeboxes use a dial-up connection, the phone number of the Internet service provider appears here. • If your jukeboxes use a broadband connection, a connectivity status icon appears here. Green icons (🟢) indicate no connectivity problems, yellow icons (🟡) show connectivity problems but indicate that the jukebox was able to connect to the TouchTunes server within the past two days, while red icons (🔴) indicate there has been no connection at all between the server and the jukebox.
Connection(s) Today: Duration	The total duration of the connections between the jukebox and the TouchTunes server today.
Connection(s) Today: New Songs Sent	The total number of new songs sent to the jukebox and TuneCentral during its last connection.




2. (Optional) Click the link above the report to view only jukeboxes experiencing problems.



The Jukeboxes Route Report page shows only the jukeboxes experiencing problems, such as when the jukebox library is full.

The following icons in the Status column show the general problem with a jukebox:

Icon (Name):	Problem Indicated:
 (Sleep Mode)	The jukebox is currently in sleep mode. This mode is generally used when moving jukeboxes between locations and may not indicate a problem.

Icon (Name):	Problem Indicated:
 (Full Jukebox Library)	The music library for the jukebox is full. You can disregard this icon if you have enabled the Automatically Delete Songs when Jukebox is Full option in the Music & System Settings page for a Gen 2 jukebox. Otherwise, you should remove songs from the jukebox music library; see “Removing Music from a Single Jukebox” on page 89.
 (Unstable Connection)	The jukebox can connect to the TouchTunes server, but is not able to maintain the connection. To handle this problem, check the duration of the connection window for the jukebox to ensure that it is long enough; see “Configuring Jukebox-related Communications Settings” on page 182. If the this is fine, check the connection settings of the jukebox on-site using its <i>Operators Guide</i> .
 (Communications Down)	The jukebox has not connected to the TouchTunes server within the last 5 days. You can disregard this icon if the jukebox is new and its communications settings are not yet configured. Otherwise, this icon indicates that the jukebox is experiencing major communications difficulties. To handle this problem, you must check the connection settings for the jukebox on-site using its <i>Operators Guide</i> .

3. (Optional) Export the report showing the status of your jukeboxes from the TouchTunes Dashboard to any of the file formats listed below the report area.

Viewing Gen 3 Jukebox Diagnostics

What diagnostics can I monitor for a Gen 3 jukebox using the TouchTunes Dashboard?

For Gen 3 jukeboxes that use a broadband Internet connection, you can use the TouchTunes Dashboard to monitor diagnostics that continually test the health of key components, including:

- The temperature and status of the jukebox hardware
- Activation of the jukebox operator UI
- The status of bill or coin collectors

Using the Dashboard to monitor these diagnostics allows you to identify certain jukebox components that are either experiencing problems or have failed, and schedule an on-site visit before the location owner is even aware of the problem.

Tip: You can set up e-mail alerts for jukebox diagnostics in the TouchTunes Dashboard. If a diagnostic test on a jukebox indicates a component failure, you are alerted through an e-mail. To set up e-mail alerts, choose **My Info | Alerts** and then follow the instructions in the Help bubble. You can set alerts to be sent to multiple e-mail addresses. For further assistance on setting up e-mail alerts, contact TouchTunes Technical Support.

You can also disable diagnostic tests on the Dashboard if you are already aware of a problem. For example, assume that you have dispatched a technician to troubleshoot an unstable connection

problem with one of your jukeboxes. Because you know that your technician needs to access the *Operator UI* (a special UI that is used when configuring jukebox settings on-site), you can disable this diagnostic test to avoid seeing false alerts when the technician is accessing this UI.

To view jukebox diagnostics:

1. In the TouchTunes Dashboard, choose **My Jukeboxes | Diagnostics**.

The Jukebox Diagnostics page appears. You use this page to view diagnostics for your Gen 3 jukeboxes.

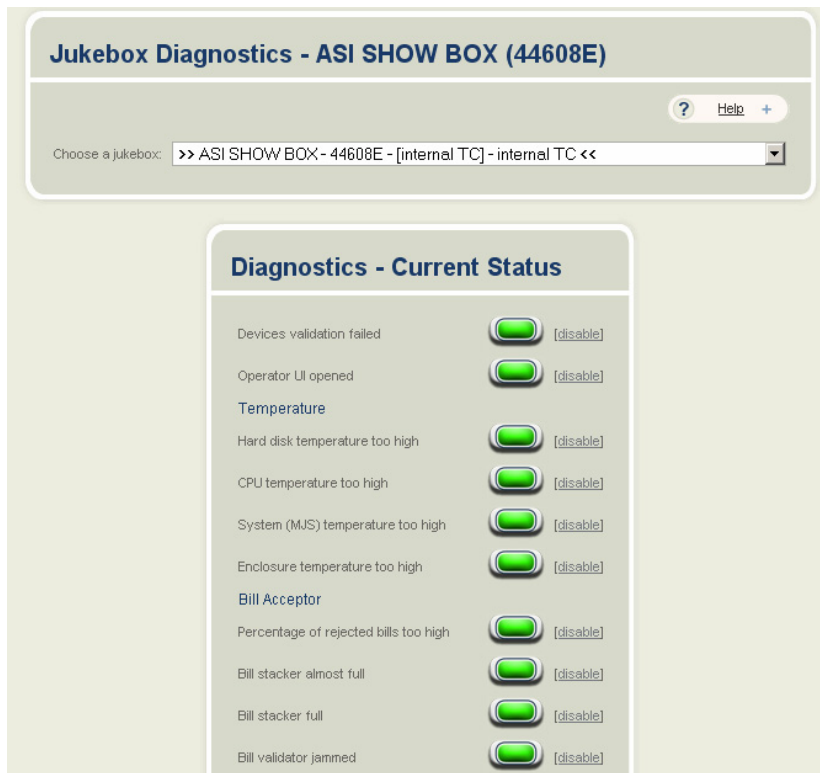 


Figure 15 Jukebox Diagnostics page

2. If necessary, choose the jukebox whose diagnostics you want to view from the **Choose a Jukebox** list.

Diagnostics for the selected jukebox appear.

3. Review the icons for each diagnostic test to identify any components on the jukebox that have failed.

Green icons in the list indicate that the component is functioning properly, while red icons indicate components that have failed or are experiencing problems. White icons indicate diagnostic tests that have been disabled.


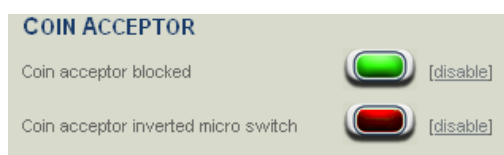 



Figure 16 A problem indicated on coin acceptor's micro switch

Tip: If you find that some of the diagnostic tests for a jukebox are generating too many false alerts, you may be able to adjust the test through the TouchTunes Dashboard. Diagnostic tests are accessible through the hardware settings for a jukebox. To access these settings, choose **My Jukeboxes | Settings**, select **Hardware** from the left-side menu, and then use the controls in the **Diagnostics & Alerts** area to adjust the test.

 4. (Optional) To disable the diagnostic test for a component, click **[disable]** beside its status icon.

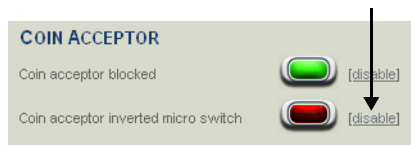


 You are prompted to confirm that the test should be disabled.

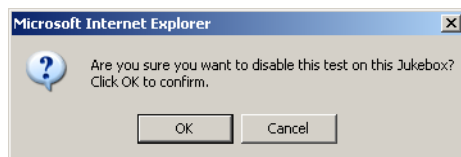

5. Click **OK** when prompted.

 The diagnostic test is disabled for the selected jukebox and its status icon turns white.



A disabled diagnostic test remains disabled until you manually re-enable it by clicking **[enable]** beside its status icon.

14

Monitoring and Managing PlayPorTTs Using the TouchTunes Dashboard

This chapter explains how you can monitor and manage your PlayporTT game devices through the TouchTunes Dashboard.

Contents

<i>Overview</i>	<i>191</i>
<i>Managing PlayporTT Settings</i>	<i>192</i>
<i>Modifying Game Settings on a PlayPorTT</i>	<i>193</i>
<i>Modifying Money Settings on a PlayPorTT</i>	<i>194</i>
<i>Modifying System Schedule settings on a PlayPorTT</i>	<i>196</i>
<i>Modifying System Tools settings on a PlayPorTT</i>	<i>198</i>
<i>Monitoring PlayPorTT Gaming Statistics</i>	<i>199</i>

Overview

Like jukeboxes, PlayporTTS can be managed and monitored directly from the TouchTunes Dashboard. When communicating with a PlayPorTT using the TouchTunes Dashboard, the communications are sent to the PlayPorTT tower and then communicated to each PlayPorTT connected to it. This means the settings that can be modified from the Dashboard will affect each PlayPorTT connected to the tower. However, although the handhelds connected to a tower will share the same settings, it is possible to examine money and gaming statistics for a specific handheld.

Managing PlayporTT Settings

Where can I adjust my PlayporTT settings on the TouchTunes Dashboard?

The **My Jukeboxes - Settings** page is also used to modify settings on your PlayporTT gaming devices.

You can identify a PlayPorTT tower from the **Choose another device** drop-down menu by its "PP" prefix.

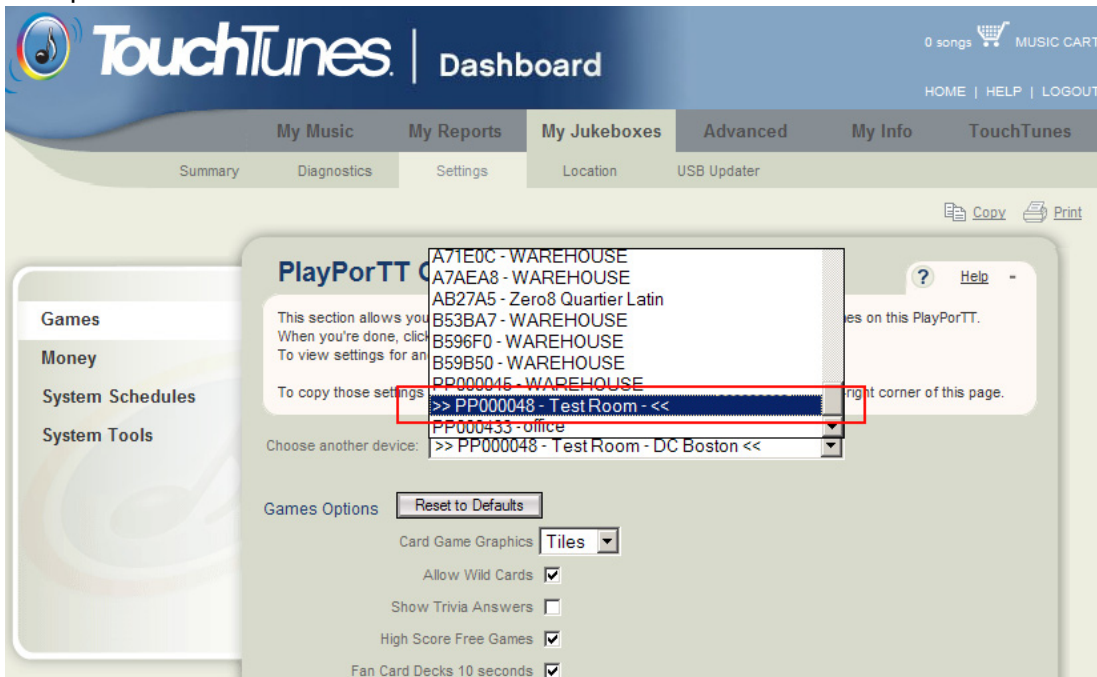 


Figure 15 Selecting a PlayPorTT from the drop-down list of devices

- To set up Game settings on a PlayporTT, see *"How do I modify the Game settings for my PlayPorTT handhelds using the TouchTunes Dashboard?"* on page 193
- To set up Money settings on a PlayporTT, see *"How do I modify the Money settings for my PlayPorTT handhelds using the TouchTunes Dashboard?"* on page 194
- To set up System Schedule settings on a PlayporTT, see *"How do I modify the System Schedule settings for my PlayPorTT handhelds using the TouchTunes Dashboard?"* on page 196
- To set up System Tools settings on a PlayporTT, see *"How do I modify the System Tools settings for my PlayPorTT handhelds using the TouchTunes Dashboard?"* on page 198

Modifying Game Settings on a PlayPorTT

How do I modify the Game settings for my PlayPorTT handhelds using the TouchTunes Dashboard?

The Games page enables you to control game settings on your PlayPorTTs, including the price for each game.

To set up the game settings for a PlayPorTT:

1. In the TouchTunes Dashboard, choose **My Jukeboxes | Settings**.
2. Select a PlayPorTT to manage from the drop-down list. You can identify a PlayPorTT tower from the **Choose another device** drop-down menu by its “PP” prefix.
3. At the left of the screen, click **Games**.

Figure 16 The Games setting page for PlayPorTTs on the Dashboard

The Games page appears.

The following describes the function of each setting on the Games page:

Games Options

- Reset to Defaults - Select this to return all game rules to the factory default values.
- Card Game Graphics - Select either *Cards* or *Tiles*
- Allow Wild Cards - Check this option to enable wild cards to be used in card games.

Monitoring and Managing PlayPorTTs Using the TouchTunes Dashboard

- Show Trivia Answers - Check this option to show the answers to trivia questions that are answered incorrectly.
- High Score Free Games - Check this option to give free games to patrons who break existing high scores on games.
- Fan Card Decks 10 seconds - Check this option to display the full deck to patrons before a game starts.
- Allow Buy In - Check this option to allow a game to be continued, if the game supports it.

Games pricing

- Change All - Set the pricing (in credits) for all your games simultaneously. You can set them to 1,2,3 or 4 credits. If you set them all to disabled, the games will not be playable. Note that you can also set the pricing for each game individually.

Modifying Money Settings on a PlayPorTT

How do I modify the Money settings for my PlayPorTT handhelds using the TouchTunes Dashboard?

The Money page enables you to set and modify money settings for your PlayPorTTs. This includes which increments it will accept with credit card purchases and which Credit Rules Set is active. To set the price for games individually, use the **Game** settings page.

To set up the money settings for a PlayPorTT:

1. In the TouchTunes Dashboard, choose **My Jukeboxes | Settings**.
2. Select a PlayPorTT to manage from the drop-down list. You can identify a PlayPorTT tower from the **Choose another device** drop-down menu by its "PP" prefix.

3. At the left of the screen, click **Money**.

PlayPorTT Money Settings

Choose another device: >> PP000433 - art martin office <<

Credit Cards

Accept \$1 ☒

Accept \$5 ☒

Accept \$10 ☒

Accept \$20 ☒

Free Play

Enable Free Play ☐

Credits Rules Sets [Reset to Defaults](#)

Active Credits Rules Set **Preset 1**

	Number of Credits = Price				
Preset 1 [edit]	1 = \$0.25	2 = \$0.50	4 = \$0.75	6 = \$1.00	30 = \$5.00
Preset 2 [edit]	1 = \$0.25	4 = \$1.00	20 = \$5.00		
Preset 3 [edit]	1 = \$0.50	3 = \$1.00	18 = \$5.00		
Preset 4 [edit]	<empty>				
Preset 5 [edit]	<empty>				
Preset 6 [edit]	<empty>				

Figure 17 The Money settings page for PlayPorTTs on the Dashboard

The Money settings page appears.

The following describes the function of each setting on the Money page:

Credit Cards

- Check off the amounts a customer can select when purchasing credits with a credit card.

Free play

- Check this to offer the use of the PlayPorTT at no cost to your patrons.

Credit Rules Sets

- Reset to Defaults - Select this to return all credit rules to the factory default values.

Active Credit Rules Set - Select and activate a Credit Rule Set that was created on PlayPorTT handheld or edited from the TouchTunes Dashboard.

To edit a Credit Rule:

1. Next to the Preset 1,2,3,4,5, or 6, click **Edit**.
The Edit Credit Rules Set for that Preset is displayed.

Monitoring and Managing PlayPorTTs Using the TouchTunes Dashboard

2. Adjust the Credit Set using the drop-down menus. Note that the Dashboard will not permit a credit rule set that penalizes a patron for purchasing more credits at once.
For example, while you can a Credit Rule to give a Patron 1 credit for 25 cents, and 3 credits for 50 cents, you cannot give a patron 2 credits for 25 cents and 3 credits for 50 cents (since this penalizes a customer for purchasing more credits)

3. Click **Save Credit Rules Set**.

Credits Rules Sets [Reset to Defaults](#)

Active Credits Rules Set: **Preset2**

Number of Credits = Price

Preset	1	2	3	4	5	6	7	8
Preset 1 [edit]	2 = \$0.25	4 = \$0.50	6 = \$0.75	8 = \$1.00				
Preset 2 [edit]	1 = \$0.25	4 = \$1.00	20 = \$5.00					
Preset 3 [edit]	1 = \$0.50	3 = \$1.00	18 = \$5.00					
Preset 4 [edit]	1 = \$0.25	2 = \$0.50	3 = \$0.75	4 = \$1.00				
Pending change; current value is	<empty>							
Preset 5 [edit]	1 = \$0.25	2 = \$0.50	4 = \$1.00					
Pending change; current value is	<empty>							
Preset 6 [edit]	<empty>							

Edit Credits Rules Set

2	\$ 0	25
4	\$ 0	50
6	\$ 0	75
12	\$ 1	00
-	\$ 0	00
-	\$ 0	00

[Save Credits Rules Set](#) [Cancel](#)

Figure 18 Adjusting a Credit Rules Set

Modifying System Schedule settings on a PlayPorTT

How do I modify the System Schedule settings for my PlayPorTT handhelds using the TouchTunes Dashboard?

The System Schedules page enables you to set and modify the schedule for Erotic Content on your PlayPorTTs.

To set up the Erotic Content schedule for a PlayPorTT:

1. In the TouchTunes Dashboard, choose **My Jukeboxes | Settings**.
2. Select a PlayPorTT to manage from the drop-down list. You can identify a PlayPorTT tower from the **Choose another device** drop-down menu by its "PP" prefix.

3. At the left of the screen, click **System Schedules**.

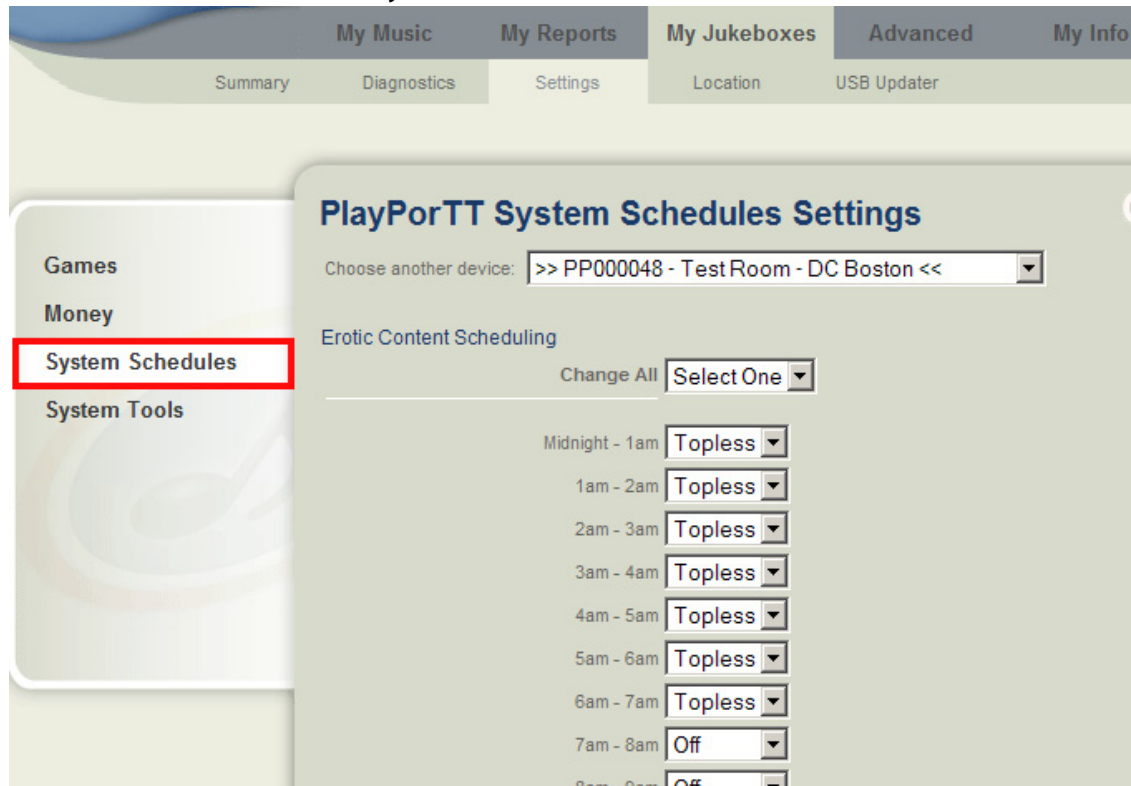 


Figure 19 The System Schedules page for PlayPorTTs on the Dashboard

The System Schedules page appears.

The following describes the function of each setting on the System Schedules page:

Erotic Content Scheduling

- Change All - Select **Off**, **Topless** or **Nude** to quickly set the Erotic Content level for different time periods
 - Midnight to 1am - Select **Off**, **Topless** or **Nude** to set the Erotic Content level for these specific hours
 - 1am to 2am - Select **Off**, **Topless** or **Nude** to set the Erotic Content level for these specific hours
 - etc...

Modifying System Tools settings on a PlayPorTT

How do I modify the System Tools settings for my PlayPorTT handhelds using the TouchTunes Dashboard?

The System Tools page enables you to modify and define the level of control you want to give to your location owners.

To modify the System Tools settings for a PlayPorTT:

1. In the TouchTunes Dashboard, choose **My Jukeboxes | Settings**.
2. Select a PlayPorTT to manage from the drop-down list. You can identify a PlayPorTT tower from the **Choose another device** drop-down menu by its “PP” prefix.
3. At the left of the screen, click **System Tools**.

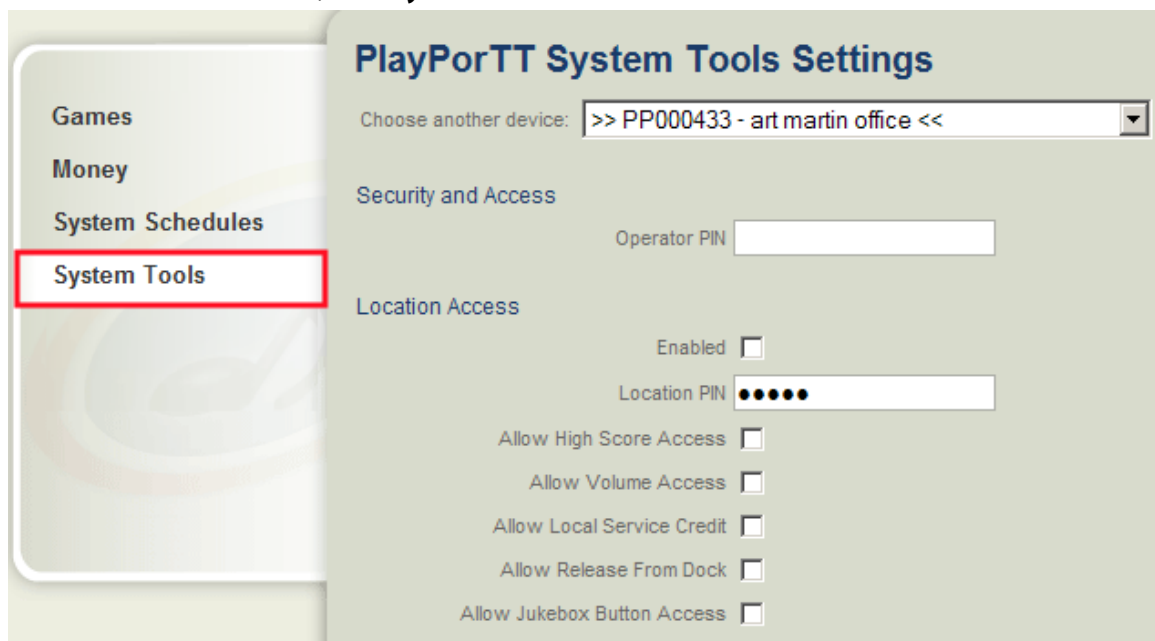 


Figure 20 The System Tools page for PlayPorTTs on the Dashboard

The System Tools page appears.

The following describes the function of each setting on the System Tools page:

Security and Access

- Operator PIN - Set the Pin that gives Administrative rights from a PlayPorTT’s operator menu. This PIN is not intended to be shared with location owners.

Location Access

- Enabled - Allow a location to access the PlayPorTT’s operator menu, with location-level access.
- Location PIN - Set the PIN that gives a location-owner level access to a PlayPorTT’s operator menu.

- Allow High Score Access - Enable someone with location owner-level rights to a view, reset or clear High Scores.
- Allow Volume Access - Enable someone with location owner-level rights to modify a PlayPorTT's volume.
- Allow Local Service Credit - Enable someone with location owner-level rights to add service credits to a PlayporTT or set it to operate in free mode.
- Allow Release from Dock - Enable someone with location owner-level rights to release a PlayPorTT from its dock from the operator menu.
- Allow Jukebox Button Access - Enable someone with location owner-level rights to turn a PlayPorTT's ability to access the jukebox's UI (and play songs from it) on or off.

Monitoring PlayPorTT Gaming Statistics

Where can I see a money and gaming statistics for my PlayporTT handhelds on the TouchTunes Dashboard?

The TouchTunes Dashboard has a page dedicated to providing you with this type of information.

To see the Game statistics for a location's PlayPorTTs:

1. In the TouchTunes Dashboard, choose **My Reports | Games**. The Games page appears.
2. Select a Start Date and End date for the report, then click the **Show** button.

Location	Device ID	Free Game	Paid Game	Free Game Ratio	# Of Players	Buyin Rounds	Buyin Credits	Linked Games	Total Game
Test Room	000048	14	146	9%	160	0	0	0	160
HOUSE	000045	0	0	-	0	0	0	0	0
WAREHOUSE	000103	36	152	19%	188	0	0	0	188
office	000433	0	0	-	0	0	0	0	0
Total		50	298	14%	348	0	0	0	348

Figure 21 The **My Reports - Game** page tracks the gaming statistics for your PlayporTTs.

Monitoring and Managing PlayporTTs Using the TouchTunes Dashboard

Use the following table to help you interpret the gaming statistics.

Column:	Description:
Location	The current location of the PlayporTT Tower.
Device ID	The ID number of the PlayporTT Tower.
Free Game	The number of free games played on all connected PlayporTTs.
Paid Game	The number of paid games played on all connected PlayporTTs.
Free Game Ratio	The percentage of all played games that were free.
# of Players	The number of unique players for all handhelds connected to the tower.
Buyin Rounds	The number of times a game was joined while in progress.
Buyin Credits	The number of credits bought in order to join an in-progress game.
Linked Games	The total number of linked games played for all PlayporTTs connected to the tower.
Total Game	The total number of games played for all PlayporTTs connected to the tower.

You can also click a specific Device ID to see two additional breakdowns, **by HandHeld device** and by **Game**.

The **By Hand Helds** page tracks the gaming statistics for all the PlayporTTs connected to the tower, by handheld device.


By Hand Helds						
Device ID	Free Game	Paid Game	Buyin Rounds	Buyin Credits	Avg. Game duration	Total Game
UNIT1	2	0	0	0	131.50	2
UNIT1	1	0	0	0	179.00	1
UNIT1	2	0	0	0	223.00	2
UNIT1	1	0	0	0	216.00	1
UNIT1	20	0	0	0	124.30	20
UNIT2	5	0	0	0	116.60	5
UNIT2	2	0	0	0	195.50	2
UNIT2	8	0	0	0	138.38	8
Total	41	0	0	0		41

Figure 22 The By Hand Helds report for a single PlayporTT tower

Use the following table to help you interpret the gaming By HandHelds.

Column:	Description:
Device ID	The Unit number of the PlayporTT handheld.
Free Game	The number of free games played on a specific handheld.
Paid Game	The number of paid games played on a specific handheld.
Buyin Rounds	The number of times a game was joined while in progress on a specific handheld.
Buyin Credits	The number of credits bought in order to join an in-progress game.
Average Game Duration	The length of the average game on a specific handheld, in seconds.
Total Game	The total number of games played on a specific handheld

The **By Games** page tracks the gaming statistics for your PlayporTTs connected to the tower, for each game.

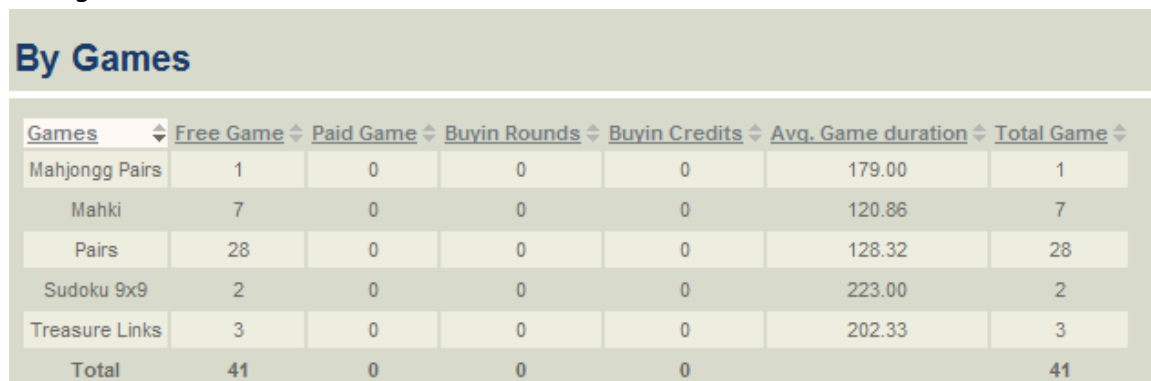

Games	Free Game	Paid Game	Buyin Rounds	Buyin Credits	Avg. Game duration	Total Game
Mahjongg Pairs	1	0	0	0	179.00	1
Mahki	7	0	0	0	120.86	7
Pairs	28	0	0	0	128.32	28
Sudoku 9x9	2	0	0	0	223.00	2
Treasure Links	3	0	0	0	202.33	3
Total	41	0	0	0		41

Figure 23 The By Games report for a single PlayporTT tower

Use the following table to help you interpret the statistics **By Game**.

Column:	Description:
Games	The name of the game on the PlayPorTT.
Free Game	The number of times a specific game was played for free, on all handhelds.
Paid Game	The number of times a specific game was played, with paid credits, on all handhelds
Buyin Rounds	The number of times a game was joined while in progress, on all handhelds.
Buyin Credits	The total credits earned through buyins for a specific game.
Average Game Duration	The average length of a specific game, using statistics from all handhelds, in seconds.
Total Game	The total number of times a game was played, on all handhelds.

Monitoring and Managing PlayPortTTs Using the TouchTunes Dashboard

15

Frequently Asked Questions About the Operator Dashboard

This chapter provides the most frequently asked questions and answers for the Operator Dashboard and shows where to find this information in the guide.

Contents

<i>Overview</i>	<i>203</i>
<i>General Dashboard Questions</i>	<i>204</i>
<i>User Account and Login-Related Questions</i>	<i>205</i>
<i>Location-Related Questions</i>	<i>206</i>
<i>Music Search and Management-Related Questions</i>	<i>206</i>
<i>Income and Accounting-Related Questions</i>	<i>208</i>
<i>Music Filter-Related Questions</i>	<i>209</i>
<i>Jukebox Configuration-Related Questions</i>	<i>210</i>
<i>Jukebox Troubleshooting-Related Questions</i>	<i>211</i>
<i>PlayPorTT-Related Questions</i>	<i>211</i>

Overview

This chapter consists of frequently asked questions and answers that will assist you in your day-to-day use of the TouchTunes Dashboard.

General Dashboard Questions

When is the Operator Dashboard available?

The Operator Dashboard is available almost all the time, 365 days a year. On very rare occasions, it may be unavailable for maintenance or updating. This allows you to perform jukebox management tasks (such as downloading music to your jukeboxes) whenever it suits you, rather than whenever you have the time to visit a location. The constant availability of the Dashboard is one of its major benefits. For other features and benefits of the Operator Dashboard, see “Discovering the Features and Benefits of the TouchTunes Dashboard” on page 8.

What are the main features and benefits of the TouchTunes Dashboard?

By using the Operator Dashboard to remotely configure and monitor your jukeboxes, you can spend less time travelling to locations and more time growing your music vending business. You also use the Dashboard to streamline certain jukebox configuration tasks (such as distributing music across several of your jukeboxes) and/or centralize the monitoring of jukebox health and status in one place. Finally, using the Dashboard and setting your jukebox locations to Public allows users of myTouchTunes to find your place of business easily on the Internet. For more detailed information about the features and benefits of the Operator Dashboard, see “Discovering the Features and Benefits of the TouchTunes Dashboard” on page 8.

What is the general workflow that I should follow when managing my jukeboxes through the TouchTunes Dashboard?

The Operator Dashboard provides an integrated workflow that shows the series of events involved with configuring and monitoring your jukeboxes. Knowing this workflow can help you learn how to use the Dashboard more quickly and see how you can integrate it with your general business procedures.

Although the general Dashboard workflow is mirrored in the structure of this guide, you can view a more in-depth workflow in “Understanding the Dashboard Workflow” on page 14.

What Web browser can I use for the TouchTunes Dashboard?

You need a Web browser to use the Operator Dashboard, as it is a Web-based application. You can use the Dashboard through most current Web browsers, including Microsoft Internet Explorer 5.0 and higher, Mozilla 1.0 and higher and Apple Safari 2.0 and higher. For a full list of supported Web browsers, see “Browsers Supported by the TouchTunes Dashboard” on page 2.

What are the different areas in the TouchTunes Dashboard? How do I navigate around the Dashboard?

The Operator Dashboard features a user-friendly user interface (*UI*) that is easy to use and helps you perform different tasks. For a tour of the Operator Dashboard, see “Navigating the TouchTunes Dashboard” on page 11.

What resources are available in case I need help with the TouchTunes Dashboard?

Besides this document, you can use the help bubbles in the Operator Dashboard interface to get immediate assistance with using Dashboard features. You can also refer to related documents that provide more in-depth information about how to use the Dashboard with your jukeboxes. For more information about the resources available to help you learn how to use the Operator Dashboard, see “Help Resources for the TouchTunes Dashboard” on page 3.

How can I contact TouchTunes for help and information about the Dashboard?

You can contact TouchTunes either directly from the Operator Dashboard or by contacting us by phone or e-mail. To learn how to contact TouchTunes, see “Contacting TouchTunes” on page 4.

Can I reboot my jukeboxes from the Dashboard?

You can reboot Gen 3 jukeboxes from the Dashboard if are connected through broadband connections. To learn how to reboot a jukebox, see “Rebooting a Jukebox Remotely” on page 184.

User Account and Login-Related Questions

How can I get access to TouchTunes Dashboard? What do I need to do to get an Dashboard account?

You need to request a Dashboard user account before you can begin using the Dashboard. See “Obtaining a Dashboard User Account” on page 19 for instructions on requesting a Dashboard user account from TouchTunes.

How much does it cost to get a Dashboard user account and use the Operator Dashboard?

Setting up an account and using the Dashboard is completely free. In order to get a Dashboard user account, your business must currently be a valid TouchTunes partner. See “Obtaining a Dashboard User Account” on page 19.

How do I log on to the TouchTunes Dashboard?

Once you receive your Dashboard username and password confirmation from TouchTunes, log on to the Dashboard. For instructions on logging on to and out of the Dashboard, see “Log On to the TouchTunes Dashboard” on page 21 and “Resetting Dashboard Passwords” on page 29.

How do I reset my lost or forgotten Dashboard password.

If you lose or forget your password, you can request a new one directly from the login screen. Dashboard administrators can also reset passwords for their sub-users. See “Resetting Dashboard Passwords” on page 29.

Can I give my technicians, jukebox music managers and/or location owners restricted access to the Dashboard, such as preventing them from viewing my jukebox revenues?

You can create sub-user accounts that allow your employees and/or locations owners to use the Operator Dashboard. When you create a sub-user account, you assign it a role that determines what information the account can and cannot access. For example, you can assign your location owners accounts that only allows them to browse the music catalog and select music for their location. To learn how to set up sub-user accounts, see “Adding a Sub-User Account to the TouchTunes Dashboard” on page 32.

How do I remove a sub-user account from the TouchTunes Dashboard?

You should remove sub-user accounts from the Operator Dashboard when they are no longer needed in order to maintain Dashboard security and protect yourself against abuse by former employees. For instructions on removing a sub-user account, see “Removing a Sub-User Account from the TouchTunes Dashboard” on page 37.

Location-Related Questions

How do I set up my locations in the TouchTunes Dashboard?

You set up each location where one of your jukeboxes is installed in the Operator Dashboard to keep track of where they are and also to have more detailed breakdowns of costs and expenses on your TouchTunes invoices. For more instructions on entering locations, see “Adding a Location to the TouchTunes Dashboard” on page 40.

How do I move a jukebox to a different location in the TouchTunes Dashboard?

Once you have set up your locations in the Operator Dashboard, you “move” your jukeboxes to them. This creates an association between the location and the jukebox in the Dashboard but does not actually move the physical unit. Moving jukeboxes to your locations in the Dashboard also allows prospective customers to locate your jukeboxes through the myTouchTunes website. To learn how to move a jukebox to a location, see “Moving a Jukebox to a Location in the TouchTunes Dashboard” on page 44.

How do I change a location’s name or contact information in the TouchTunes Dashboard?

You can edit the name or contact information for a location in the Operator Dashboard, in case a restaurant or bar changes their name or ownership. Registering this change in the Dashboard allows you to keep all of your location-related information in a single tool. For instructions on editing information about a location, see “Modifying Location Details in the TouchTunes Dashboard” on page 46.

Music Search and Management-Related Questions

Can I see what songs are on a jukebox at any given time using the TouchTunes Dashboard?

You can see a list of the songs currently on any of your jukeboxes using the Operator Dashboard. Besides keeping track of what songs are on your jukebox, you can also use this list to identify and remove the least popular songs for a jukebox in order to free up space for other music. For instructions on browsing the list of songs on a jukebox, see “Viewing Music on a Jukebox” on page 84.

How do I find and remove duplicate songs on a jukebox?

The Dashboard’s Jukebox Content page is equipped with a simple tool that locates duplicate songs on jukeboxes. See “Finding Duplicate Songs on Jukebox” on page 85 for more on finding and deleting duplicate songs.

How do I use the Dashboard to see what is going on in the music industry?

The Dashboard’s Music Portal contains several areas, including Hit Lists, Big Buzz and the Upcoming New Releases areas that contain song rankings, news from the music industry and a list of songs that will soon be available from TouchTunes. See “Staying Informed” on page 54 for more on the Dashboard’s Music Portal.

How do I use the TouchTunes Dashboard to search for music by song title, album name or artist?

The Dashboard’s Music Portal is the fastest way to find music for your jukeboxes in the TouchTunes music library. The Music Portal contains the Dashboard’s search functionality for

finding songs, albums or artists. The Quick Search allows you to enter a search term (such as part of a song's name) start your search. The Dashboard's Music Portal finds potential songs, albums and artists in the music library and shows you how closely they matched your original search term. The Music Portal is also full of great lists of songs you can add in their entirety to your jukeboxes. To learn more about using the keyword search feature, see "Searching for Music using Keywords" on page 50.

Can I find music in the TouchTunes library by song or album ID using the TouchTunes Dashboard?

Every song and album in the TouchTunes music library is identified by a unique ID number. The Music ID search feature is the fastest way to find and compile a list of songs or albums using the Operator Dashboard: you enter the music ID numbers in the Dashboard and then start your search. The Dashboard finds all the songs or albums corresponding to the IDs you entered and compiles them into a list that you can then distribute to all of your jukeboxes. For more information about music IDs and the music ID search, see "Searching for Music by Song or Album ID Number" on page 55.

How do I add songs from compiled lists, such as Sylvie's Picks or Billboard's Top 100, using the TouchTunes Dashboard?

You can access many different compiled music lists in the Operator Dashboard including those from Billboard Magazine, such as the Billboard Top 40. You can also use the Dashboard to view the music lists put together by Sylvie, TouchTunes' own in-house music expert. You can use these music lists to keep your jukeboxes stocked with both current and upcoming hit music for a number of different music styles. To learn about the music lists available through the Operator Dashboard and how to access them, see "How do I add songs from compiled lists, such as Sylvie's Picks or Billboard's Top 100, using the TouchTunes Dashboard?" on page 58.

How do I use the TouchTunes Dashboard to find songs that were recently added to the TouchTunes library?

You can access a special music list in the Operator Dashboard that includes only the latest music added to the TouchTunes music library. You can use this list to ensure your jukeboxes are updated with the latest new music available. For instructions on accessing this music list, see "Identifying New Music Added to the TouchTunes Music Library" on page 61.

Can I use the TouchTunes Dashboard to request music that is not in the TouchTunes library?

TouchTunes is always interested in finding new music to add to its music library. If you cannot find songs, albums, or artists in the TouchTunes music library, you can send a music request to the TouchTunes music department to have them added to the library. To use the music request feature in the Dashboard, see "Requesting Music from TouchTunes" on page 63.

What is the Music Cart? How do I move songs from a music search or a pre-compiled list in the TouchTunes Dashboard to the Music Cart?

The *Music Cart* in the Operator Dashboard is a storage area where you can store music you find from a search or pre-compiled list before distributing it to your jukeboxes. The Music Cart provides a single place where you can both store and transfer music to your jukeboxes, greatly simplifying the process for distributing music to your jukebox network. To learn how to add songs to the Music Cart, see "Adding Music for Jukeboxes to the Music Cart" on page 65.

How do I use the TouchTunes Dashboard to download music to my jukeboxes?

You can move music stored in your Music Cart to any of your jukeboxes or to the TuneCentral drives attached to your jukeboxes. You can move a song (or songs) to a single jukebox, to a set of jukeboxes, or to every one of your jukeboxes in a single action. For instructions on transferring music from the Music Cart to your jukeboxes, see “Downloading Music from the Music Cart to a Jukebox” on page 67.

How can I tell which songs have recently been downloaded to, or are pending download to a jukebox through the TouchTunes Dashboard?

The Operator Dashboard keeps a record of what songs are or have been transferred to your jukeboxes. You can access these records through the Dashboard to answer questions from location owners who are asking when their requested music will be available on their jukebox. To access song transfer records, see “Reviewing Music Transfers” on page 78.

Can I find out what songs are being played on a jukebox through the TouchTunes Dashboard?

You can use the Operator Dashboard to generate a report showing you the most popular songs over the past 30, 60 and 120 days for all of your jukeboxes, as well as for each individual jukebox. You can use these reports to identify songs that are rising in popularity on some of your jukeboxes that you may want to distribute to your other jukeboxes. For instructions on generating this report, see “Tracking Song Popularity” on page 86.

How do I delete songs on a jukebox using the TouchTunes Dashboard? Can I use the TouchTunes Dashboard to delete a song (or songs) from multiple jukeboxes simultaneously?

You can use the Operator Dashboard to delete any song from a single jukebox or from all of your jukeboxes in a single action. To learn how to do this, see “Removing Music from a Single Jukebox” on page 89 or “Removing Music from Multiple Jukeboxes” on page 91.

Income and Accounting-Related Questions

What are credits and credit rules? How do I set up the credit rules for a jukebox in the TouchTunes Dashboard?

Credits are the currency used within a jukebox for playing songs, voting for downloads or using to bump up a song in the play queue with the Play Next! feature. Customers use real-world currency to buy jukebox credits according to the exchange rate you set up for a jukebox called a *credit rule*. To learn more about credit rules and how to set them, see “Setting Up the Credit Rules for a Jukebox” on page 99.

How do I set the cost of Play Next! and TuneCentral through the TouchTunes Dashboard?

Play Next! and TuneCentral are premium features that you can set the price for through the Operator Dashboard. For instructions on setting the price of these premium features, see “Configuring Play Next! and TuneCentral Credit Settings” on page 106.

How do I view revenue for my jukeboxes using the TouchTunes Dashboard?

Each jukebox reports its daily revenue during its daily communications with the TouchTunes server. You can view a revenue summary for all of your jukeboxes, as well as a detailed revenue breakdown for each jukebox through the Operator Dashboard. For NextGen and Gen 3 jukeboxes, you can also see how much revenue is awaiting your collection and the last time a

jukebox's revenue was collected. To learn how to access revenue summary and reports for your jukeboxes, see "Viewing Jukebox Revenue" on page 115.

How do you track the number of plays for a jukebox through the TouchTunes Dashboard?

In some cases, your off-the-top fees depend on the number of jukebox and/or TuneCentral plays. You can view the number of jukebox and TuneCentral plays through the Operator Dashboard. For instructions on viewing the number of plays, see "Tracking Jukebox Plays" on page 122.

How do I allow my jukeboxes to be found more easily by potential customers?

When you indicate on the Dashboard that you would like to make the location of your jukeboxes public, your location is added to the myTouchTunes database. Then, through Google Maps™ functionality, the myTouchTunes Web page overlays indicators on the *mySpots* map to let potential customers know where they can find your place of business. See "Modifying the Public and Private Details in the TouchTunes Dashboard" on page 47.

Can I set up splits and off-the-top values for my collections using the TouchTunes Dashboard? Can I check the location take for a jukebox in the TouchTunes Dashboard?

For each Gen 3 jukebox, you can enter off-the-top fees and billing splits in the Operator Dashboard for the location where the jukebox is installed. Recording these values here allow you to calculate the operator and location take for the jukebox when you collect and divide the income between you and the location owner.

To learn how to enter off-the-top fees and billing splits through the Operator Dashboard, see "Setting Billing Splits and Off-The-Top Fees" on page 111. To learn how to calculate location and operator takes, see "Checking a Location's Take from a Gen 3 Jukebox" on page 123.

How do I view invoices from TouchTunes (such as music services invoices) using the TouchTunes Dashboard?

You can view PDF copies of your current and past TouchTunes invoices (including music services invoices) through the Operator Dashboard. For instructions on accessing these invoices, see "Viewing TouchTunes Invoices" on page 148.

Music Filter-Related Questions

How do I see what music filters are currently applied to a jukebox using the TouchTunes Dashboard?

A *music filter* is a rule that controls what music is and is not available to play on a jukebox. You can view the music filters you have set up for a jukebox through the Operator Dashboard. Using the Dashboard to see what music filters are installed on a jukebox allows you to identify filters that need to be created or modified to accommodate location requests. For instructions on how to view the music filters on a jukebox, see "Viewing Music Filters on a Jukebox using the TouchTunes Dashboard" on page 153.

How do I prevent music with explicit lyrics from being played on a jukebox using the TouchTunes Dashboard?

You can set up an explicit music filter in the Operator Dashboard to prevent music with explicit lyrics from being played on a jukebox. With Gen 3 jukeboxes, you can set up an additional edited music filter that controls whether *edited music* (radio-friendly versions of explicit songs with the offending lyrics removed) is available for play on a jukebox.

To learn how to set up explicit (and edited) filters on a jukebox, see “Setting Up Explicit and Edited Music Filters for a Jukebox” on page 156.

Can I control what music styles appear on a jukebox through the TouchTunes Dashboard?

You can set up an allowed styles filter in the Operator Dashboard to control the music styles and genres that are available on a jukebox. You may set up this filter to configure the music on a jukebox with the theme of a location, such as removing all music styles other than Country & Western for a cowboy-themed bar. For instructions on setting up an allowed styles filter on a jukebox, see “Determining the Music Styles Allowed on a Jukebox” on page 161.

Can I schedule TuneCentral through the TouchTunes Dashboard? Do music filters apply to TuneCentral?

Although music filters cannot be scheduled on a Gen 2 jukebox, you can schedule when music in the TuneCentral library is available. This feature allows you to restrict music selections on a jukebox to a preset list of songs on its local drive during certain time periods, which can be useful if a location owner allows their employees to choose background music. To learn how to set TuneCentral availability, see “Scheduling TuneCentral for a NextGen Jukebox” on page 167.

Can I schedule my music filters using the TouchTunes Dashboard?

You can schedule music filters for a Gen 3 jukebox through the Operator Dashboard. This feature allows you to accommodate locations with specific music requests, such as a restaurant/bar that wants to schedule when the family-friendly or more explicit versions of songs are available for play on their jukebox. For instructions on scheduling music filters, see “Scheduling a Music Filter Set on a Gen 3 Jukebox” on page 173.

Jukebox Configuration-Related Questions

How do I set up the background music mode for a jukebox using the TouchTunes Dashboard?

You can set up a jukebox to provide background music for a location by running it in background music mode. While a jukebox is running in this mode, it plays songs at random from either its entire music library or a defined subset of this music. You can use the background music mode on a jukebox to provide an alternative to other background music services (such as satellite radio) for a location. It is also possible to see a preview of the songs in a background music playlist. To activate and configure this jukebox mode, see “Setting Up the Background Music Mode on a Jukebox” on page 128.

How do I set up the attract mode for a jukebox using the TouchTunes Dashboard?

You can set up a jukebox to attract business and increase usage at a location by running it in attract mode. Like background music mode, the jukebox plays songs at random from either its entire music library or a subset of music that you define when running in attract mode. However, a jukebox running in attract mode also displays self-promotional advertising on its screen and inserts longer pauses between songs to encourage customers to try out the jukebox. For instructions on activating and configuring this jukebox mode, see “Setting Up the Attract Mode on a Jukebox” on page 132.

Can I schedule when the background music and attract modes are active for a jukebox through the TouchTunes Dashboard?

You can schedule when a jukebox is running in its background music or attract modes through the Operator Dashboard. This feature allows you to customize the jukebox mode to drive jukebox usage and maximize your revenues. For example, you can schedule a jukebox in a bar to run in background music mode to provide background music during lunchtime and then switch to attract mode during Happy Hour to attract business. To learn how to schedule the background music or attract modes, see “Scheduling Background Music and Attract Modes for a Jukebox” on page 136.

How do I modify the time period when a jukebox can call the TouchTunes server?

You can use the Operator Dashboard to modify the time period during which a jukebox calls the TouchTunes server (called the *communications window*). This is the only communications setting that you can modify remotely using the Dashboard; all other communications settings must be configured on-site. For instructions on modifying the communications window for a jukebox, see “Configuring Jukebox-related Communications Settings” on page 182.

Jukebox Troubleshooting-Related Questions

How do I know if my jukeboxes are connecting properly to the TouchTunes Dashboard?

You can use the Operator Dashboard to check whether your jukeboxes are connecting to the TouchTunes server properly. Doing this can help you identify jukeboxes with communication problems that are preventing them from connecting to the TouchTunes server and receiving new music and updates. To check the communications between your jukeboxes and the TouchTunes server, see “Viewing Jukebox Connectivity Status” on page 186.

What diagnostics can I monitor for a Gen 3 jukebox using the TouchTunes Dashboard?

Gen 3 jukeboxes allow you to monitor diagnostic tests that show the current status of several key components, including its bill collector, its coin collector and its system hardware. You can use these diagnostic tests to identify components that are experiencing problems or have failed. You can then take the appropriate action, such as obtaining replacement parts and/or scheduling a visit by a technician. For instructions on how to monitor jukebox diagnostics, see “Viewing Gen 3 Jukebox Diagnostics” on page 188.

PlayPorTT-Related Questions

Where can I see all the settings for my PlayPorTTs that I can adjust remotely, using the TouchTunes Dashboard?

The TouchTunes Dashboard has PlayPorTT settings pages for Games, Money, System Schedules and System Tools. See “Managing PlayporTT Settings” on page 192 for more information.

How can I change the access rights for my location owners from the TouchTunes Dashboard?

The Operator Dashboard has a page dedicated to changing these access rights. See “Modifying System Tools settings on a PlayPorTT” on page 198.

Can I change the price I charge for games using the TouchTunes Dashboard?

The money settings can quickly be modified from the Dashboard using the PlayPorTT Money Settings page. See “Modifying Money Settings on a PlayPorTT” on page 194.

Where can I see how many free games are being played on a PlayPorTT?

If you want to see how many free games are being played on a PlayPorTT, you can see PlayPorTT statistics by Game, or by Hand Held from the **My Reports - Games** page. See “Monitoring PlayPorTT Gaming Statistics” on page 199.